

# MR556A1

## OPERATOR'S MANUAL



Covering all variants of the MR556A1 Rifle, MR556A1 Competition Model, and MR556A1 Upper Receiver Kit  
(all 5.56 x 45 mm)

## SAFETY PRECAUTIONS

---

**CAUTION: Read these safety rules before handling the firearm!**

---

Read this operators manual before handling your firearm. The following safety rules are placed in this manual by HK as an important reminder that firearms safety is your responsibility. If handled improperly firearms can be dangerous and can potentially cause damage to property, serious injury, or death.

1. Never point a firearm at anyone, or in any direction other than a SAFE direction, i.e. downrange.
2. Treat all firearms as if they are always loaded.
3. Keep your finger off the trigger and outside of the trigger guard until your sights are aligned on the target.
4. Keep your finger off the trigger and outside of the trigger guard while loading or unloading the firearm.
5. Keep your finger off the trigger and outside of the trigger guard while slinging the firearm or while carrying it.
6. Be sure of your target and the back stop beyond.
7. Never give a firearm to or take a firearm from anyone unless the action is open and the magazine and/or chamber are free of any ammunition or brass.
8. Be sure that the ammunition you are using is factory loaded, is of the correct caliber for the firearm in which it is to be used, and that it is not damaged in any way.
9. Before firing, remove the magazine from the firearm, lock the bolt open, make sure the chamber is clear of any ammunition or brass, and check the barrel of the unloaded firearm for any possible obstructions.
10. Before firing any firearm that is unfamiliar to you, make sure that you understand exactly how it functions. A lack of familiarity with the firearm can result in serious accidents. Attend a certified training course on any firearm which you intend to use or with which you are not sufficiently familiar.
11. Always wear hearing and eye protection when using your firearm.
12. Keep all body parts, particularly the hands and fingers, away from the muzzle to avoid injury or burns.
13. Be sure that parts of the hand do not touch or interfere with the action.
14. Firearms should be stored separately from ammunition and beyond the reach of children, and/or any untrained individuals.
15. Avoid the use of any alcoholic beverages or drugs before and during the use of any firearm.
16. Discharging firearms in poorly ventilated areas, cleaning firearms, or handling ammunition may result in exposure to lead, a substance known to be associated with birth defects, reproductive harm, and other serious injury. Have adequate ventilation at all times. Wash hands thoroughly after exposure.
17. To make the firearm safe, one must ensure the chambered round is removed during the clearing procedure. Removal of the rifle's magazine does not remove the chambered round. This can only be done with the rearward movement of the bolt after the magazine is removed.

**STOP! KNOW HOW TO CLEAR THIS FIREARM BEFORE ATTEMPTING TO OPERATE. SEE PAGE 5**

# MR556A1

## OPERATOR'S MANUAL



Covering the MR556A1 Rifle, MR556A1 Competition Model, and  
MR556A1 Upper Receiver Kit (all 5.56 x 45 mm)

**WARNING:** A firearm has the capability of taking your life or the life of someone else! Be extremely careful with your firearm. An accident can occur at anytime and is almost always the result of not following basic safety rules.



**HECKLER & KOCH**

© Heckler & Koch, 1/11, 4/11, 4/12, 7/13, 10/20 Revised Jan 2024

All rights reserved

Heckler & Koch

5675 Transport Boulevard, Columbus, Georgia 31907

Tel: (706) 568-1906 • Fax: (706) 568-9151


American Website: [www.hk-usa.com](http://www.hk-usa.com)

Every attempt has been made to ensure the accuracy of this information, however errors or changes may occur. Specifications and models subject to change without notice.

## TABLE OF CONTENTS

	Safety Precautions .....	Inside Cover
	Clearing .....	5
Section 1	Introduction .....	6
Section 2	Nomenclature and Description .....	7
Section 3	Function and Operation .....	12
Section 4	Sights, Sight Adjustment and Aiming .....	14
Section 5	Ammunition .....	19
Section 6	Instructions for Use .....	20
	Loading the Magazine .....	20
	Loading the Rifle .....	20
	Firing the Rifle .....	22
	Unloading the Rifle .....	23
Section 7	Disassembly and Assembly .....	24
	Disassembly of the MR556A1 .....	24
	Assembly of the MR556A1 .....	30
	Function Check.....	37
	Magazine Disassembly.....	38
	Magazine Assembly .....	39
Section 8	Modular Rail System Handguards .....	40
Section 9	Cleaning and Maintenance .....	44
	Lubrication.....	45
Section 10	MR556A1 Competition Model.....	50
Section 11	MR556A1 Upper Receiver Kit .....	52
	Assembly .....	52
	Function Check.....	55
Section 12	Troubleshooting Problems & Repair .....	56
Section 13	Exploded Diagram and Parts List .....	58
Section 14	Specifications .....	61
	Warranty Registration .....	61
Section 14	Warranty .....	62
	Firearms Service Record .....	64


## CLEARING THE MR556A1

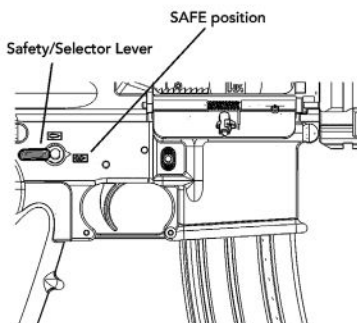

1. ON SAFE — Point the muzzle in a safe direction with the finger off the trigger and outside the trigger guard. Place the selector on "SAFE". The safe position is indicated by a closed white box containing a bullet symbol with an "X" over it."




2. REMOVE MAGAZINE — Remove the magazine (if applicable) by depressing the magazine release button located on the right hand side of the lower receiver.

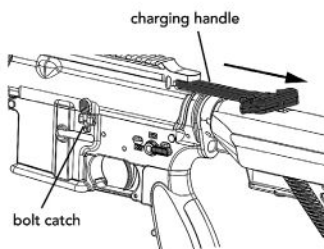


3. RETRACT BOLT — Depress the catch located on the charging handle and rack the bolt to the rear two or three times in quick succession to extract and eject any cartridges that may have been loaded into the barrel.

4. LOCK BOLT TO THE REAR — Lock the bolt to the rear by pulling the charging handle all the way back. Once the bolt reaches its limit of rearward travel, depress the bottom of the bolt catch located on the left hand side of the lower receiver.

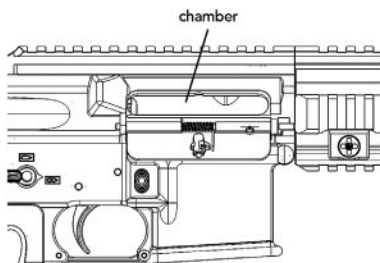

5. INSPECT THE CHAMBER — Perform a visual inspection of the chamber area to ensure that no live rounds are present in the MR556A1 prior to disassembly.

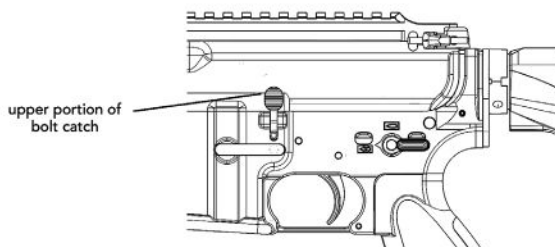

6. RETURN THE BOLT TO BATTERY — Depress the grooved paddle (top portion) of the bolt catch or by slightly pulling back on the charging handle until the bolt catch disengages from the bolt, allow the action spring to move the bolt all the way forward.

## SECTION 1 — INTRODUCTION

A direct descendent of the HK416, the MR556A1 is a semi-automatic rifle developed by Heckler & Koch as a premium level commercial/civilian firearm with match rifle capability. Like the HK416, the MR556A1 is a major product improvement over conventional AR-type carbines and rifles. The MR556A1 uses the HK proprietary gas piston operating system, employing a piston and a solid operating “pusher” rod in place of the gas tube normally found in AR15/M16/M4-style firearms.

This method of operation virtually eliminates malfunctions that are common to direct impingement gas systems since hot carbon fouling and waste gases do not enter the receiver area. This is the same key feature critical to the success of the HK416 rifles used by leading military and law enforcement customers. The MR556A1 is manufactured in the USA using American and German made components. The MR556A1 uses many of the same assemblies and accessories originally developed for the HK416.

Used with either the HK Modular Rail System (MRS) or the Free Floating Rail System (FFRS), the barrel does not touch the handguard, ensuring the barrel/handguard relationship is truly free-floating for maximum accuracy. The MRS handguard was added in 2015 and has many of the features found on the FFRS but with a more ergonomic design. The HK Free Floating Rail System (FFRS) handguard has four MIL-STD-1913 Picatinny rails and allows all current accessories, sights, lights, and aimers used on M4/M16-type arms to be fitted to the MR Series. Both HK rail system handguards can be installed and removed with simple tools and return to zero when reinstalled. The MR556A1 also has a Picatinny rail machined into the top of its upper receiver for mounting optics and mechanical sights.

Unlike earlier prototypes, major subassemblies, including the MR556A1 upper receiver/barrel assembly, are fully interchangeable with other high quality AR-style firearms. MR556A1 upper receiver kits can be used to retrofit competing legacy AR systems.

Like the famous HK416, the MR556A1 uses a German-made barrel produced by Heckler & Koch's famous cold hammer forging process. The highest quality steel is used in this unique manufacturing process producing a barrel that provides superior accuracy and long service life. But unlike the HK416, the MR556A1 does not use a chrome-lined barrel. Chrome-lining can sometimes mask bore imperfections and negatively affect accuracy. For these Heckler & Koch semi-automatic MR rifles, HK designers and engineers believe best accuracy comes with an unlined bore. The unchromed barrel has an internal profile of 6 lands and grooves with a 1 in 7 inch (178 mm) twist. It is also moderately “swagged” with a slightly smaller internal diameter at the muzzle end than the chamber end. This feature has a positive effect on bullet accuracy and velocity. The thick, heavy contour 16.5-inch MR556A1 barrel also contributes to its excellent accuracy.

A precise enhanced two-stage trigger adds significantly to the accuracy of the MR556A1 and an extended latch charging handle makes operating the rifle with a telescopic sight easier. The retractable buttstock can be locked into a solid, non-moving position by tightening an Allen screw in the bottom of the stock. Special target rifle takedown pins ensure the upper and lower receivers are firmly mated for accurate performance.

Designed to function with a wide variety of high quality 5.56 x 45 mm ammunition, the MR556A1 uses a C.I.P. dimensioned chamber (a chamber with dimensions specified by the Commission Internationale Permanente). The MR556A1 also functions reliably with most quality Caliber .223 Remington ammunition. The MR556A1 is being produced with the same commitment to quality as German-made HK firearms. By using joint U.S./German manufacturing, Heckler & Koch leverages the relative strengths of two continents to make the preeminent AR-type firearm, combining the design innovations of the USA and Germany into one new product.

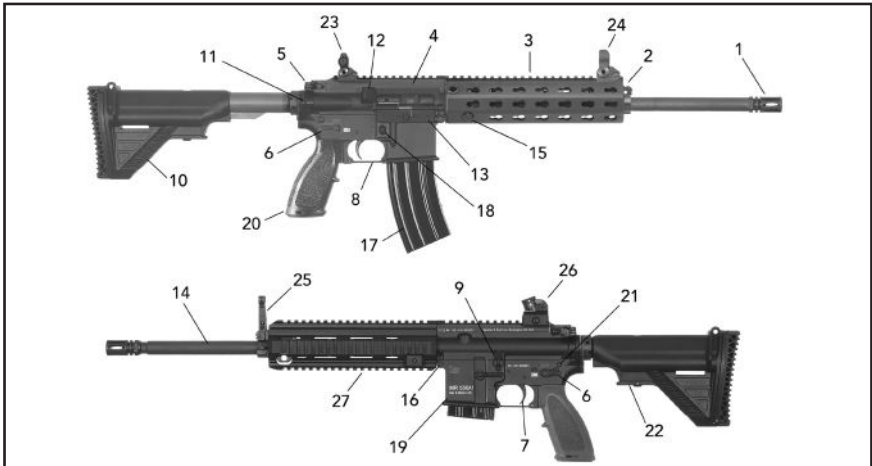


Fig. 1 – MR556A1 Right and Left Views

1. Compensator – Bird cage style flash hider is screwed to the end of the barrel and helps compensate for muzzle rise during firing.

2. Gas Block – Directs the expended gas from the gas port hole in the barrel and pushes the piston rearward, pushing the piston rod and bolt carrier rearward (defined in more detail in the cycle of operation). Contains an attachment point for the optional HK folding front sight.

3. Modular Rail System (MRS) – The HK MRS is a free-floating detachable rail system handguard that allows the shooter to place individual rail components and accessories anywhere along the length of the seven free sides of the forearm using the slotted interface. Self capturing rail segments can be mounted in any position along the 9 inch forearm/handguard (a 14 inch MRS is also available and is standard on the Competition Model). Two integrated Quick Detachable (QD) sling attachment points are present just forward of the receiver on each side of the MRS. Optional, positionable quick detachable sling mounts can also be attached to slotted interface. The MRS has an octagonal, ergonomic profile and provides a comfortable gripping area for the shooter's support hand. The MRS attaches to the barrel extension nut with a standard type SW11 screw. The MRS is present on most MR556A1 models produced after 2014.

4. Upper Receiver – The upper receiver is a flat-top design with an integral MIL-STD-1913 (Picatinny) rail that provides support for the barrel, FFRS, gas system, and bolt carrier assembly. It has a case deflector and ejection port. It connects to the barrel and barrel socket. The piston rod is guided through the upper receiver by a bushing and activates the bolt carrier. The charging handle is a part of the upper receiver as is the forward assist and ejection port cover. The upper receiver is made from an aluminum forging.

5. Charging Handle – Allows the operator to chamber or clear a round and cock the firearm. It also provides for initial charging of the firearm. The charging handle is locked in the forward position during firing to prevent injury to the operator. An enhanced charging handle with an extended catch is available on the MR556A1.

6. Selector/Safety Lever – Allows the operator to select the mode of fire and place the firearm on safe. The selector lever is manually activated and unlike competing AR systems, can be switched to safe even if the hammer is not cocked.

7. Trigger – When activated by the operator, initiates the firing sequence. Located inside the lower receiver, the trigger when squeezed with the firearm loaded and off “safe” will fire the gun, “SEMI-AUTOMATIC” will fire one round each time the trigger is pulled. The MR556A1 uses a proprietary HK two-stage trigger for optimal accuracy.

8. Trigger Guard – The trigger guard protects the trigger. It can be lowered by depressing the detent with a pointed implement, allowing the use of heavy gloves or mittens to be used to fire the rifle.

9. Bolt Catch/Bolt Release – The bolt catch/release is manually operated. When the bolt carrier is pulled fully to the rear, the bottom of the bolt catch/release is pressed by the operator and then the bolt will be captured. To release the bolt, simply press the top of the bolt catch/release. The bolt catch/release is also automatically activated when firing the last round in a magazine.

10. Sliding Buttstock – Attached to the firearm via the receiver extension. The sliding buttstock is ambidextrous and adjustable to 6 positions for length of pull by pressing in on the rear portion of the Release Lever. It also contains the rear sling attachment points. Many optional buttstocks can be attached to the MR556A1 as long as they fit on the Receiver Extension (Buffer Tube), which has MIL-SPEC cross sectional dimensions.

11. Forward Assist – Ensures that the bolt is fully closed and locked. The forward assist is used when a round is not fully chambered. You can push on the forward assist until the bolt seats the cartridge fully into the chamber. It will return to its rearward position by spring pressure. It can also be used to silently load the firearm.

12. Case Deflector – Built into the upper receiver, deflects the cartridge cases away from the operator.

13. Ejection Port Cover Assembly – The ejection port cover is attached to the upper receiver and is spring loaded. It will open automatically if the charging handle is pulled to the rear or if the firearm is fired and can be manually closed at any time. It closes over the ejection port to prevent sand, dust, etc. from entering the chamber. It should remain closed when the firearm is not being fired.

14. Barrel Assembly – The chamber accepts the cartridge for firing and directs the projectiles down range. The barrel is cold hammer forged and has standard land and groove rifling with a 178 mm (1 in 7 inch) twist. The barrel is pressed into the upper receiver assembly and held in place by the threaded barrel nut.

15. Locking Screw – The Modular Rail System is secured using a standard SW11 screw while the Free Floating Rail System is fastened with a locking screw that can be tightened and loosened by using a 5 mm Allen wrench. Both lock into the forward extending barrel locking bushing. Fastening and positioning of the locking screws on the bushing ensures maintenance of zeroing on any sight system which has previously been attached.

16. Pivot Pin – The pivot pin allows the upper receiver to pivot when the rear takedown pin is depressed. When both the pivot pin and rear takedown pin are depressed, the upper and lower receiver groups can be separated. The pivot pin is captive and should not be removed. Both the pivot pin (front takedown) and rear takedown pin have locking shafts that need to be pressed while the pins are depressed and engaged.

---

NOTE: Both the pivot pin and the rear takedown pin are special precision “target rifle” pins. For disassembly and reassembly, a center detent in the shaft of the pin must be engaged under pressure and held to move the pins back and forth. DO NOT FORCE THE PINS. Forcing the pins could damage the rifle and such damage is not covered under the HK warranty. Contact HK Customer Service with any questions.

---

17. Magazine – Holds cartridges ready for feeding and provides a guide for positioning cartridges for stripping and chambering. The magazine provides reload capabilities for sustained firing. The HK 30-round steel magazine and optional 20-round steel magazine have a steel follower that will not cant during the feeding process. The spring is stronger and more reliable than standard magazine springs. The MR556A1 can be used with other high quality magazines of all capacities.

18. Magazine Catch/Magazine Release – Holds the magazine (in place) in the magazine well and allows the operator to release the magazine and remove it from the firearm. The magazine catch is activated automatically when the magazine is properly inserted into the magazine well. The magazine catch is spring loaded and when the button is depressed, the magazine will drop free from the firearm when this control is activated.

19. Lower Receiver – Contains the fire control system for the firearm. The lower receiver contains the hammer, trigger, disconnect, sear, magazine well, magazine catch/release, bolt catch/release, selector/safety lever, buttstock assembly with buffer and recoil spring, pistol grip and trigger guard. The lower receiver is made from an aluminum forging and provides a beveled magazine well to ease reloading.

20. Pistol Grip – The pistol grip is made so it can be used by a left or right handed shooter. It has a trapdoor on the bottom so extra batteries, small tools, or other accessories may be stored. Other AR-type pistol grips can also be installed.

21. Rear Takedown Pin – When the rear takedown pin is depressed, it allows the upper receiver to pivot on the front pivot pin. This pin is captive and should not be removed. Like the pivot pin (front takedown pin), the rear takedown pin has a locking shaft that needs to be pressed while the pins are depressed and engaged for disassembly and reassembly.

22. Buttstock Release Lever – The buttstock release lever locks the telescopic buttstock to the tubular rear buttstock extension. The buttstock is adjustable in length in 6 positions.

23. Rear Sight – attaches to the MIL-STD-1913 top rail of the upper receiver.

24. Front Sight – attaches to the MIL-STD-1913 top rail of the MRS or the FFRS handguards.

25. Rear (Diopter) Sight – proprietary HK sight used on many HK firearms, attaches to the MIL-STD-1913 top rail of the upper receiver.

26. Front (Flip up) Sight – proprietary HK sight attaches to the gas block, folds down when not in use.

27. Free Floating Rail System (FFRS) – Present on most MR556A1 models produced 2011-2014. The FFRS is a free-floating detachable rail system with four-quadant MIL-STD-1913 (Picatinny) rails that can mount a variety of accessories including sights, scopes, grips, lights, laser aimers, bipods, and sling hardware. The bore sight alignment of aiming devices is repeatable (no re-zeroing required) when the Free Floating Rail System is removed and reinstalled on the firearm. The FFRS is removed and reinstalled with a 5 mm Allen wrench.

## INTERNAL PARTS NOMENCLATURE

**Muzzle** – The muzzle is the area at the end of the barrel and the last area that the projectile touches before it exits the bore.

**Bore** – The part of the barrel that the projectile travels through from the chamber to the muzzle and contains lands and grooves which make the projectile rotate.

**Chamber** – The chamber is the area where the cartridge is seated and the initial phase of firing occurs.

**Bolt and Carrier Assembly** – Provides stripping, chambering, locking, firing, extraction, and ejection of the cartridges using the recoil spring and projectile propellant gases for power. These parts are made of the highest quality steel.

**Bolt** – The bolt locking lugs rotate and lock the barrel and bolt together prior to cartridge ignition.

**Extractor** – The extractor grabs the rim of the cartridge case and pulls the case out of the chamber. The extractor spring and buffer provide constant pressure on the rim until the case is ejected.

**Ejector** – The ejector pushes against the cartridge base under constantly spring tension and once the cartridge or case is extracted and clears the front of the ejection port, the cartridge or case is ejected from the firearm.

**Cam Pin** – The cam pin allows the bolt to cam inside the bolt carrier, which allows the bolt to lock into the barrel extension when fully forward and cams to unlock when the carrier is pulled to the rear.

**Firing Pin** – The firing pin will strike the primer and initiate the firing sequence once the trigger is pulled. The firing pin will only protrude through the face of the bolt when the bolt is fully locked forward.

**Firing Pin Safety Spring** – Prevents an accidental discharge in the event of dropping or jolting the gun.

**Firing Pin Retaining Pin** – Retains the firing pin in the bolt carrier.

**Recoil spring and buffer** – The recoil spring provides constant pressure on the bolt carrier and holds the bolt in a locked forward position. The buffer has tungsten granules that act as an anti-bounce back mechanism. One type of buffer serves all barrel lengths.

**Buffer detent** – Captures the buffer and spring and when depressed, releases them for removal.

**Hammer** – The hammer, when released by the trigger, strikes the firing pin. The hammer returns when the bolt carrier pushes back under recoil, the hammer makes contact with the disconnector and will release from the disconnector when the trigger is released. The hammer remains cocked under spring pressure.

**Trigger** – The trigger, when squeezed, releases the hammer and returns under spring tension.

**Disconnector** – Captures the hammer when it is cocked to the rear and releases the hammer to the sear when the trigger is released. The disconnector then returns to its original position under spring tension.

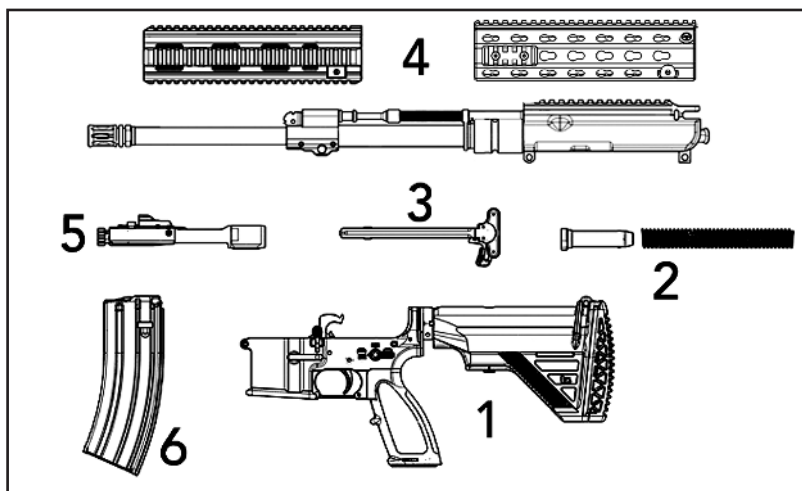


Fig. 2 – MR556A1 Major Assembly Groups

1. Lower Receiver Assembly - contains the Buttstock assembly (holds buffer and recoil spring), pistol grip, selector lever, trigger group, trigger guard, magazine catch/release, bolt catch/release, magazine well, pivot pin and take down pin.
2. Buffer and Recoil Spring
3. Charging Handle Assembly
4. Upper Receiver Assembly - contains the forward assist, case deflector, ejection port cover assembly, either a Free Floating Rail System (left) or Modular Rail System (right) handguard, gas block (with folding front sight point), compensator, barrel, gas piston and piston rod.
5. Bolt Carrier Assembly
6. Magazine Assembly

## SECTION 3 — FUNCTION AND OPERATION

The function and operation of the MR556A1 is similar to that found in semi-automatic firearms and consists of eight steps: (1) Feeding, (2) Chambering, (3) Locking, (4) Firing, (5) Unlocking, (6) Extracting, (7) Ejecting, and (8) Cocking.

These eight steps are explained below with a brief description of what occurs inside the rifle during each step. Assume that a full magazine is loaded in the rifle with the magazine follower spring forcing the follower and thus the top cartridge into the path of the bolt and the bolt is locked to the rear.

(1) Feeding. The bolt is released from the bolt catch, either by deploying and then releasing the charging handle or by depressing the bolt catch. The bolt assembly moves forward, being driven by the expansion of the recoil spring. The bottom locking lugs on the bolt head act as a feed pawl, striking the top cartridge off the magazine and moving the cartridge towards the chamber in rear of the barrel.

(2) Chambering. The recoil spring continues to drive the bolt assembly forward until the bolt head seats the cartridge into the barrel's chamber. Chambering is complete when the extractor snaps into the extracting groove on the cartridge and the ejector is forced into the face of the bolt.

(3) Locking. Locking occurs when the bolt reaches its limit of forward travel. When the bolt is moving forward, the cam pin orients the bolt head by ensuring that the locking lugs on the bolt head will pass between the gaps of the locking lugs located on the barrel extension (chamber). The bolt then strikes the back of the barrel and then stops. The action spring continues to move the bolt head carrier forward, thus causing the cam pin to pivot on the bolt head's raceway. This action pivots the bolt head and rotates the bolt head's locking lugs counter-clockwise until they engage the locking lugs on the barrel extension. The bolt assembly is now locked into the upper receiver.

(4) Firing. Firing occurs when the firing pin strikes the primer in the head of the cartridge. When the trigger is pulled, the trigger's sear surface disengages from the hammer's intercept notch and the hammer releases. The hammer moves forward under pressure from the hammer spring, disengaging the drop safety, striking the firing pin, and overcoming the inertia of the firing pin spring. This drives the firing pin against the primer, which in turn ignites the propellant in the cartridge case and propels the bullet through the barrel.

(5) Unlocking. Unlocking occurs after a cartridge is fired. As the bullet is forced through the barrel by expanding gases, a small amount of gas enters through the gas port into the gas block. The gas block features a small expansion chamber that quickly fills up with gas. The gas then hits the front of the gas piston, causing the three piston rings to expand, and driving the gas piston rearwards. Because the pusher rod is mounted in the gas piston, the pusher rod moves back as well. The back of the pusher rod hits the anvil (string surface) on top of the bolt head carrier, causing the bolt head carrier to move rearwards. As the bolt carrier assembly moves rearward, the bolt cam pin rotates and unlocks the bolt from the locking lug recesses in the barrel extension. The unlocked bolt is now ready to move rearward. Any remaining gas follows the bullet out of the muzzle.

(6) Extracting. Extracting removes the empty cartridge case from the chamber. As the bolt unlocks, the bolt rotates slightly counterclockwise, causing the extractor to rotate the cartridge case within the chamber. The expanded case breaks contact with the chamber walls, allowing extraction to occur.

(7) Ejecting. Ejecting throws the empty cartridge case out of the receiver. As soon as the bolt has drawn the cartridge case clear of the chamber, the force of the ejector spring and plunger pushes the cartridge case head away from the bolt face. This causes the forward end of the cartridge case to move outward to the right. A deflector on the outside of the upper receiver deflects the cartridge case away from operator.

(8) Cocking. Cocking occurs when the hammer is forced into position for firing the next cartridge. This happens as the bolt carrier assembly travels toward the rear. The bolt carrier assembly forces the hammer back and rides over it. The hammer is caught by the disconnecter if the trigger is still held to the rear and by the trigger's sear surface if the trigger has been released.

#### SELECTOR/SAFETY LEVER FUNCTION

---

NOTE: The MR556A1 has ambidextrous selector/safety levers, that is safety levers located on both sides of the lower receiver. Either lever can be manipulated and moves the lever on the other side. Unlike many AR-style firearms, the selector/safety levers of the MR556A1 can be placed on the "SAFE" position even if the MR556A1 is not cocked.

---

"SAFE POSITION" – Place the selector lever with the point facing towards the closed white box containing a bullet symbol with an "X" over it (towards the muzzle, Fig. 3).

"SEMI-AUTOMATIC POSITION" – Place the selector lever with the point towards the closed red box containing a red bullet symbol in it (straight up position) (Fig. 4).

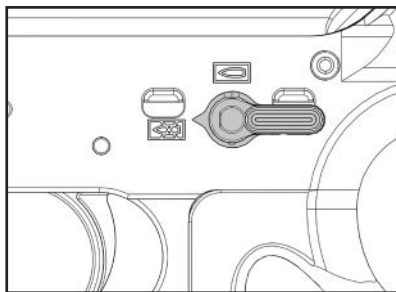


Fig. 3 – SAFE

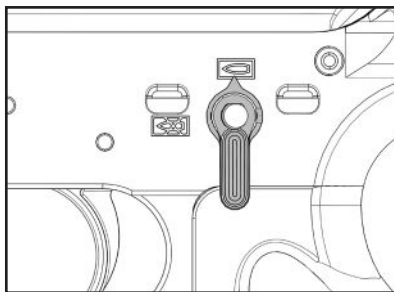


Fig. 4 – SEMI-AUTO

## SECTION 4 — SIGHTS, SIGHT ADJUSTMENT, AND AIMING

MR556A1 rifles can accommodate a wide variety of optical and mechanical (iron) sights.

### HK DIOPTER SIGHTS

For models with HK Diopter rotary sight sets, the sights are installed on the MIL-STD-1913 (Picatinny) rail with a Phillips #2 screwdriver or the HK sight tool (Fig. 5 & 6). Do not over tighten the screws.



Fig. 5 – Front Diopter Sight

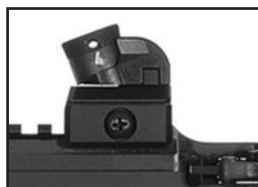


Fig. 6 – Rear Diopter Sight

For optimal sight use and the longest sight radius, the front sight is installed on the most forward portion of the MIL-STD-1913 rail and the rear sight is installed on the most rearward portion of the MIL-STD-1913 rail (located on the upper receiver). Sight adjustment is as follows:

The sight adjustment is a rear sight adjustment, so the movement of the sight will be in the same direction the shooter wants the impact of the round to move. If the hit is to the right of the intended location, then the sights and the impact must be moved left. Any corrections which may be required when sighting-in the weapon may only be performed by adjusting the rear sight for elevation or windage. MR rifles are designed to be sighted in at a range of 100 meters. REMEMBER THIS FORMULA: LL=C (Lower or Left = Clockwise rotation)

### ELEVATION ADJUSTMENT

Insert elevation adjustment tool into the rear sight cylinder so that the wedges of the tool engage in the two slots in the cylinder which contain the catch bolts. Press Phillips-head screwdriver downward into the adjustment tool and hold firmly. Rotate rear sight cylinder manually in the desired direction (Fig. 7).

After correction withdraw Phillips-head screwdriver and remove elevation adjustment tool. The catch bolts will then re-engage in the slots. After performing the elevation adjustment set the desired aperture again.

**NOTE:** One-quarter turn of the rear sight drum will move the impact of the round approximately 3.8 centimeters (1.5 inches) at 100 meters



Fig. 7 – Rear Sight Adjustment

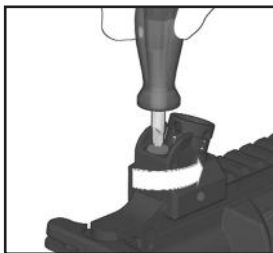


Fig. 8 – Clamping Screw (to tighten turn clockwise)

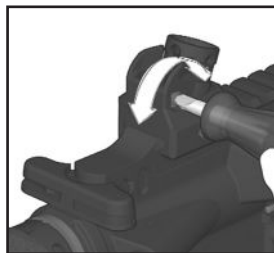


Fig. 9 – Windage Adjustment

### ELEVATION ADJUSTMENT (Alternative method without sight tool)

Use of the HK Sight Adjustment Tool (HK ID # 300009) is always recommended to adjust the windage and elevation on any HK firearms equipped with standard diopter sights. However, some needle nose pliers can be substituted in the event that a sight adjustment tool is not available to perform range adjustments.

Ensure that the MR556A1 is unloaded before performing any adjustment to the sights. Use needle nose pliers with smooth jaws rather than the serrated jaws as the serrated surfaces may cause chips and burrs on the spring loaded catch bolts. Simply insert the jaws onto the small shelf on the catch bolts and carefully squeeze while simultaneously rotating the drum. This action withdraws the catch bolts and allows the drum to be rotated either clockwise or counter-clockwise. To lower the point of impact, rotate the drum clockwise and to raise the point of impact, rotate the drum counter-clockwise. Ensure that the catch bolts engage the vertical slots located on the inside of the drum after removing the needle nose pliers.

### WINDAGE ADJUSTMENT

Point of impact, left: Loosen clamping screw on top of sight base (Fig. 8). Turn adjusting screw on the right side counterclockwise (Fig. 9) in accordance with the required correction. Then retighten clamping screw. This will move the impact to the right.

Point of impact, right: Loosen clamping screw (Fig. 8). Turn adjusting screw clockwise (Fig. 9) until the required correction has been performed. Then retighten clamping screw. This will move the impact to the Left.

---

NOTE: Each revolution of the Windage screw will move the impact of the round 15.2 cm (6 inches) at 100 meters.

---

### TROY ACCESSORY SIGHTS

For models supplied with Troy Industries Micro Folding Sights. Aiming and sight picture are similar to using the HK diopter sights.

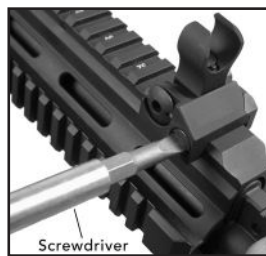


Fig. 10 – Installing front TROY sight    Fig. 11 – Tightening front TROY sight

### INSTALLING TROY ACCESSORY SIGHTS (FRONT)

1. Unscrew clamping assembly and place the sights at the desired location on the Picatinny rail (Fig. 10).
2. Apply one drop of thread locking compound to the exposed threads of the clamping screw. Replace the clamping plate and tighten the clamping screw while pushing sight forward against the cross-slot (Fig. 11). To raise the sight, grasp and pull up until the sight locks in the upright position. To fold the sight, depress the button on the left side of the base and fold down. (Fig. 12)

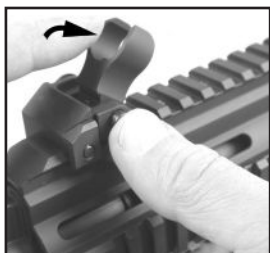


Fig. 12 – Folding (lowering)  
TROY front sight



Fig. 13 – Lowered sight  
TROY front sights

#### INSTALLING TROY REAR SIGHTS

1. The rear TROY sight installs similar to the front sights. Unscrew clamping assembly and place the sights at the desired location on the Picatinny rail.
2. To raise the sight, grasp and pull up until the sights locks in the upright position. To fold (lower) the sight, depress the button on the left side of the base and fold down. (Fig. 14-16)



Fig. 14 – Rear Sight

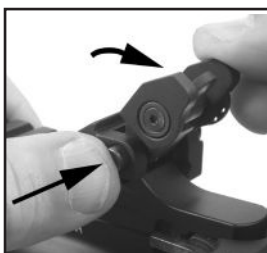


Fig. 15 – Lowering  
Rear Sight



Fig. 16 – Rear sight  
folded (lowered)

#### FRONT SIGHT ADJUSTMENT ZEROING

1. Fire a group of four (4) shots and measure the average distance for point-of-aim to point-of-impact.
2. Adjust front sight for elevation only.
3. Windage adjustments are made with the rear sight.
4. Confirm zero with a group of four aimed shots and adjust is necessary

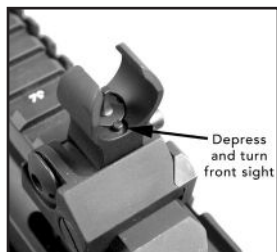


Fig. 17 – Front sight adjustment

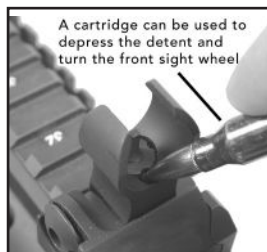


Fig. 18 – Using a bullet tip  
to adjust the front sight

#### FRONT SIGHT ADJUSTMENT

To move the bullet impact up, turn the adjustment wheel to the right/clockwise (Fig. 17 & 18). To move the bullet impact down, turn the adjustment wheel to the left/counter clockwise (Fig. 18 & 19).

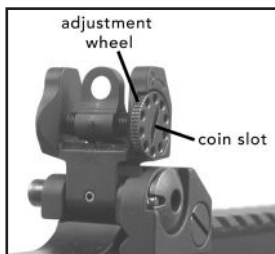


Fig. 19 – Rear Sight

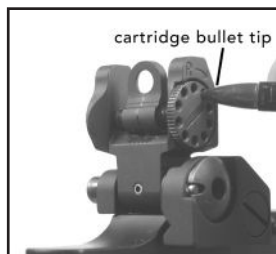


Fig. 20 – Windage adjustment

#### REAR SIGHT ADJUSTMENT

Windage adjustment can be made by inserting a pointed object (like a bullet tip) or a flat object (like a screwdriver or coin) into the coin slot and turning the adjustment wheel. To move the bullet impact right, turn the adjustment wheel to the right/clockwise. To move the bullet impact left, turn the adjustment wheel to the left /counter clockwise (Fig. 19 & 20).



Fig. 21 – Rear Sight

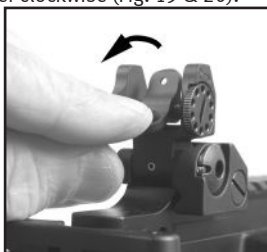


Fig. 22 – Changing aperture

The Troy rear sight also offers a choice of two flip-style apertures, both large and small (Fig. 22). The large aperture is for close engagement and the small aperture is for more distant shooting. Generally the large aperture works best for alignment with the front sight and for short and medium ranges. Elevation does not change when switching apertures. For long range shots, the small aperture can be flipped into position by finger pressure on the top of the rear sight.

Value for 1 click of adjustment Troy Micro Sights	100 meters	200 meters	300 meters
M4/HK416/MR556A1 sight radius .50 MOA	5/8"	1-1/8"	1-5/8"

#### INSTALLING THE OPTIONAL HK FLIP-UP FRONT SIGHT

Press front sight onto front sight holder until the axes holes of front sight and front sight holder are aligned. Push through front sight axles all the way, from the right to the left and secure the front sight axles by snapping the retaining clip. Check function of foldable front sight (Fig. 23 & 24).

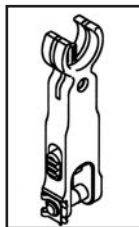


Fig. 23



Fig. 24



Fig. 25

A wide variety of mechanical, optical, and telescopic sights can be installed directly on the upper MIL-STD-1913 rail (examples, Fig. 25), either on the upper receiver portion of the rail or on the Modular Rail System or Free Floating Rail System handguards. For sight alignment and zeroing, follow the instructions of the sight and scope manufacturers. General mechanical sight alignment information is depicted in Fig. 26-27.

**NOTE:** Do not overtighten scopes, aimers, or any other accessories mounted on any of the MIL-STD-1913 (Picatinny) rail surfaces of the MR556A1. Overtightening can damage the rails.



Fig. 26 – Correct Aiming, HK diopter sights (left) and TROY sights (right)

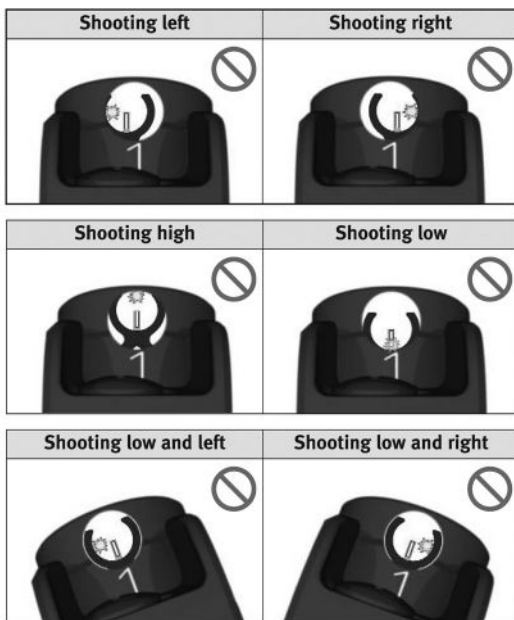


Fig. 27 – Aiming Errors

By using ammunition with match bullets or other match grade ammunition the MR556A1 will achieve the best level of accuracy. Use ammunition of the appropriate caliber and of recent manufacture. The MR556A1 is chambered for 5.56 x 45 mm ammunition and will functioned safely and reliably with most high quality 5.56 mm and Caliber .223 Remington ammunition.

---

NOTE: Use only high quality 5.56 x 45 mm NATO or caliber .223 Remington ammunition in the MR556A1 rifle. Damage caused by the use of improperly assembled or remanufactured ammunition may void the HK Warranty. Do not use ammunition assembled with corrosive components (primers, propellants, etc.).

---

The MR556A1 is designed to use ammunition made to NATO or SAAMI specifications.

#### DO NOT USE

- Reloads or remanufactured ammunition. Beware of military surplus, foreign or outdated ammunition.
- Non-jacketed or exposed lead ammunition.
- Corrosive ammunition (primer and/or propellant).
- Empty cases as “dummy” (inert) rounds, as damage may result. Use complete dummy rounds available for training purposes.
- Any ammunition that exceeds NATO or SAAMI (Sporting Arms and Ammunition Manufacturers’ Institute) pressure limits.
- Cartridges that are not 5.56 x 45 mm or Caliber .223.
- Seriously corroded ammunition.
- Dented Cartridges.
- Cartridges with loose bullets.
- Cartridges exposed to extreme heat above 135°F (57°C) until they have cooled.
- Use only authorized ammunition that is manufactured to NATO and SAAMI specs.
- Ammunition that is wet or dirty.

---

**WARNING:** Only use ammunition designed to NATO and SAAMI specifications that is factory-loaded, undamaged, and of the correct caliber. The use of low powered cartridges could lead to functional stoppages (including bullets stuck in the barrel) and is not recommended.

---

## LOADING A MAGAZINE

Magazines may be loaded by hand, one round at a time, or quickly loaded using a magazine filler and stripper clips. The use of a magazine filler and stripper clips is depicted below (Fig. 15).

## Filling the magazine

1. Hold the magazine with one hand. Place the cartridges onto the follower between the magazine lips and push the cartridge, with your thumb, down underneath the lips and ensuring the projectile is facing the front of the magazine and that the cartridge rim is fully to the rear of the magazine.
2. Repeat this step until the magazine is filled with the appropriate number of cartridges (10 or less for a 10-round magazine, 20 or less for a 20-round magazine, and 30 or less for 30-round magazines). Do not overfill magazines.

## Single rounds

Magazines may be loaded with one round at a time by inserting the cartridge case in while depressing the follower and seating the case in until the projectile clears the front of the magazine. Continue this each time until the magazine is full. During and when finished filling the magazine gently tap the back of the magazine against the palm of your hand to ensure the rounds are seated properly.

---

**CAUTION:** Ensure cartridges, especially those to be loaded into the magazine, are free of sand, mud, moisture, frost, snow, ice, grease, or other foreign matter.

---

## Using a Magazine Filler

## 10-round stripper clip

The magazine may be loaded quickly using the 10-round stripper clips and the stripper clip guide that is provided with each bandoleer of ammunition.

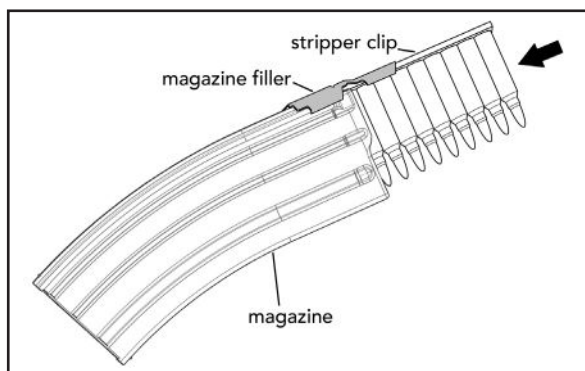


Fig. 28 – Loading Magazine

1. Attach the magazine filler to the top rear of the magazine and insert a 10-round stripper clip into the magazine filler (Fig. 28).
2. Using thumb pressure on the rear of the top cartridge, press down firmly until all 10 rounds are below the feeder lips of the magazine.

3. Remove the empty stripper clip while holding the magazine filler in place.
4. Repeat steps “1” through “3” until magazine is loaded. Remove magazine filler and retain for future use.

---

**CAUTION:** It is possible to improperly load the cartridges if the guide is not positioned correctly, the rim of the cartridge could possibly get caught in the rear groove. Constantly check spring tension in between stripper clips. Unload magazine if in doubt. Replace the stripper clip guides regularly as they wear with use.

---

---

**WARNING:** If the rifle is dropped or jarred with a loaded magazine in place and the bolt to the rear, it could chamber a round. Failure to follow this warning may cause injury or death.

---

#### Emptying the magazine

Hold the magazine with one hand. Push the cartridges forward out of the magazine with the thumb of the other hand. Do not allow the cartridges to drop on a hard surface or they may become damaged. Do not unload cartridges using another cartridge, damage to the cartridge or injury to the operator may occur.

---

**NOTE:** The magazine may be loaded into the weapon with the bolt assembly open or closed. The procedure listed below is for the bolt open.

---

#### LOADING THE RIFLE

##### Loading the MR556A1 rifle for firing

1. Place the selector lever in the SAFE position. Point the muzzle in a safe direction with the trigger finger off the trigger and outside the trigger guard.
2. Pull the charging handle rearward to open the bolt and lock it to the rear (Fig. 29).

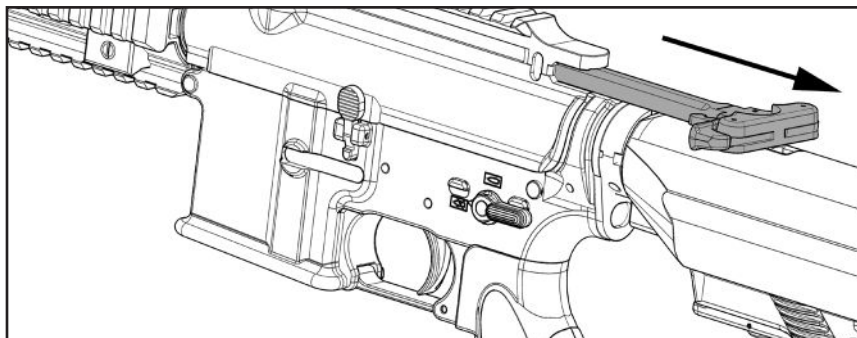


Fig. 29

3. Check the chamber to ensure it is clear.
4. Insert a loaded magazine into the magazine well until the magazine catch engages the magazine (Fig. 30).
5. Tap upward on the magazine to ensure it is properly seated and tug slightly downwards on the magazine to verify it is properly engaged by the magazine catch.

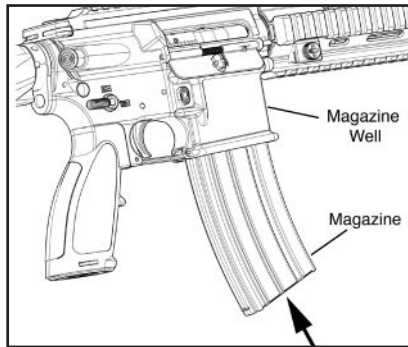


Fig. 30 – Inserting Magazine into the Rifle

6. Depress the upper portion (paddle) of the bolt catch. The bolt should go forward, stripping the top cartridge from the magazine and feeding it into the chamber (Fig. 31).

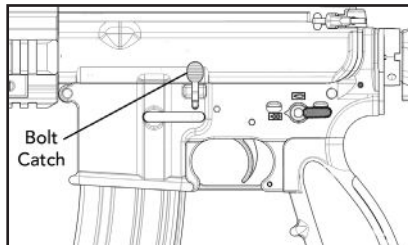


Fig. 31 – Depressing Bolt Catch to Chamber a Cartridge

7. Tap the forward assist to ensure the bolt is fully forward and locked (Fig. 32).

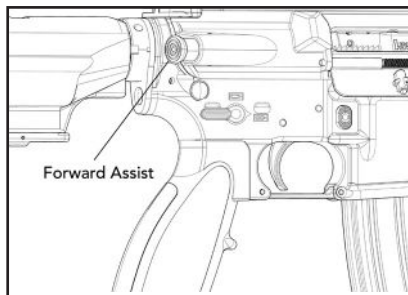


Fig. 32 – Tap Forward Assist

**WARNING:** Always assume every weapon is loaded until it is verified through visual and physical inspection that it is not. Refer to this work package for clearing procedures.

Confirm the weapon is clear and on SAFE before performing the following procedures. Failure to follow these warnings may cause injury or death to personnel.

---

**CAUTION: Never ride the charging handle forward. Allow it to move forward under its own power.**

---

---

**NOTE: Close the ejection port cover if the weapon is not to be immediately fired.**

---

#### FIRING THE RIFLE

1. Place the selector lever on SEMI-AUTOMATIC.
2. Estimate range to target and adjust the rear sight by rotating the adjuster so that the desired range setting on the adjuster is aligned with the range index mark.
3. Sight in on the target and acquire proper sight picture and sight alignment.
4. Employing proper breathing techniques, fire the M556A1 by slowly squeezing rearward on the trigger until the hammer releases from the sear.

---

**WARNING: Before firing the MR556A1, ensure that:**

1. The bore is clear of obstructions.
  2. The firearm is pointed only at your intended target.
  3. You are sure of your backstop and the impact area beyond.
  4. Your hands and fingers are away from the muzzle.
- 

#### RELOADING THE MR556A1

The magazine in the weapon is empty. The bolt is held to the rear by the bolt catch. Same procedure as above, except the bolt is already locked to the rear and you must first set the selector to "SAFE".

1. Set the selector lever to "SAFE".
2. Depress the magazine release button with the right index finger or thumb. Remove the empty magazine from the magazine well. Store the empty magazine in a magazine pouch.
3. Insert a loaded magazine into the magazine well until the magazine catch engages the magazine (Fig. 30).
4. Tap upward on the magazine to ensure it is properly seated and tug slightly on the magazine downwards to ensure the magazine is properly engaged by the magazine catch. Insert a loaded magazine into the magazine well until the magazine catch engages.
5. Push the bolt catch in to release the bolt and to chamber a round.
6. The weapon is now loaded and set on "SAFE."

#### UNLOADING THE MR556A1

Use the clearing procedures found on page 5 to unload (and clear) the rifle.

## SECTION 7 — DISASSEMBLY & ASSEMBLY

### DISASSEMBLY (FIELD STRIPPING) OF THE MR556A1

Tools Needed: MR556A1 Disassembly Tool (located in the Buttstock), 5mm Allen Wrench

#### 1. Clear the MR556A1

- a. Point the muzzle in a safe direction with the finger off the trigger and outside the trigger guard.
- b. Place the selector lever on “SAFE”

NOTE: The MR556A1 has ambidextrous selector lever/safety levers, that is safety levers located on both sides of the lower receiver. Either lever can be manipulated and moves the lever on the other side. Unlike many AR-style firearms, the selector lever/safety levers of the MR556A1 can be placed on the “SAFE” position even if the MR556A1 is not cocked.

- c. Remove the magazine (if applicable) by depressing the magazine release button located on the right hand side of the lower receiver.
- d. Depress the catch located on the charging handle and rack the bolt to the rear two or three times in quick succession to extract and eject any cartridges that may have been loaded into the barrel.
- e. Lock the bolt to the rear by pulling the charging handle all the way back. Once the bolt reaches its limit of rearward travel, depress the bottom of the bolt catch located on the left hand side of the lower receiver.
- f. Perform a visual inspection of the chamber area to ensure that no live rounds are present in the MR556A1 prior to disassembly.
- g. Return the bolt to battery (all the way forward) by either depressing the grooved paddle (top portion) of the bolt catch or by slightly pulling back on the charging handle until the bolt catch disengages from the bolt and then allow the action spring to move the bolt forward.

**CAUTION:** Never attempt to disassemble the MR556A1 with the bolt locked back to rear. After performing the clearance procedure, always ensure the bolt is forward before attempting to disassemble.

#### 2. Separating the Upper and Lower Receivers:

- a. Rotate the recoil pad counter clockwise one quarter turn and separate the recoil pad from the buttstock. Remove the MR556A1 disassembly tool (Fig. 33-34). On the Competition Model, the disassembly tool can be stored in the pistol grip.

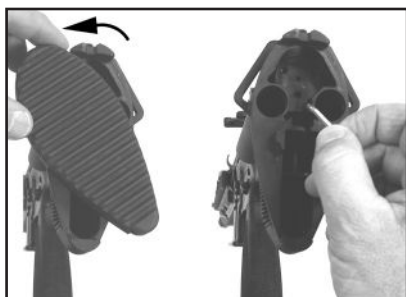


Fig. 33 – Removing the disassembly tool

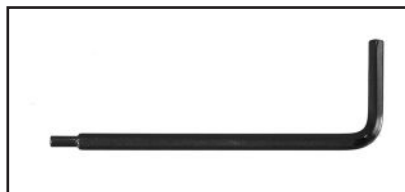


Fig. 34 – Disassembly tool

- b. Insert the small tip of the disassembly tool into the spring loaded detent located in the center of the rear takedown pin. Push the disassembly tool from left to right until the takedown pin reaches its limit of lateral travel (Fig. 35, 36).



Fig. 35 – Takedown Pins

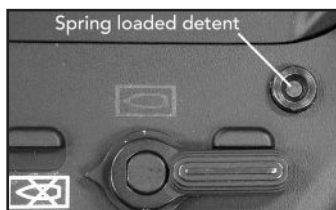


Fig. 36 – Takedown Pin Detail

**WARNING:** Always use the disassembly tool to disengage the detents on both the rear takedown pin and the front pivot pin. Attempting to remove the pins without disengaging the detents could lead to damaging the lower receiver. Both the rear takedown pin and the front pivot pin are captive pins and will therefore remain attached to the lower receiver. Attempting to completely remove the takedown and pivot pins could lead to damaging the lower receiver.

### 3. Bolt Assembly:

- a. Pivot the upper receiver from the lower receiver, depress the catch on the charging handle and withdraw the bolt assembly from the rear. Continue to pull the charging handle to the rear until resistance is encountered. Lift up on the charging handle and separate the charging handle from the upper receiver (Fig. 37).

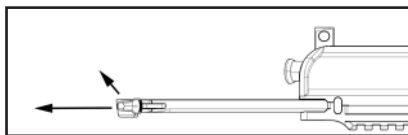


Fig. 37 – Removing the Charging Handle

- b. Insert the small tip of the disassembly tool into the spring loaded detent located in the center of the front pivot pin. Push the disassembly tool from left to right until the pivot pin reaches its limit of lateral travel. Separate the upper and lower receivers.
- c. Insert the small tip of the disassembly tool into the right hand side of the firing pin retaining pin and drift the firing pin retaining pin from right to left until the firing pin retaining pin reaches its limit of lateral travel (Fig. 38)

**WARNING:** The firing pin retaining pin is a captive pin and will therefore remain attached to the bolt carrier. Attempting to completely remove the firing pin retaining pin could lead to damage of the bolt assembly.

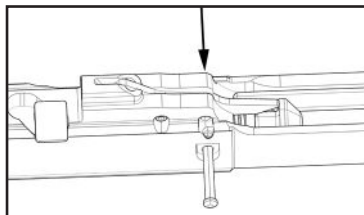


Fig. 38 – Remove the Firing Pin and Firing Pin Spring

- d. Lift up on the spring loaded drop safety and remove the firing pin and firing pin spring (Fig. 39).

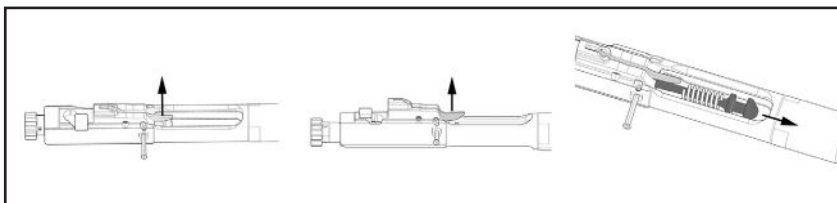


Fig. 39 – Drift out the Firing Pin Retaining Pin

- e. Lift up and remove the cam pin from the shaft of the bolt head (Fig. 40).

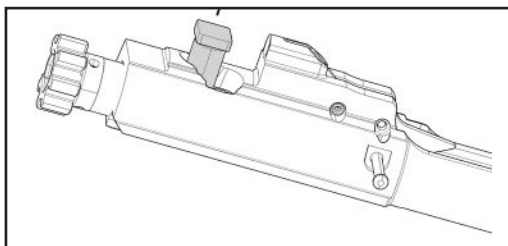


Fig. 40 – Remove the Cam Pin

- f. Slide the bolt head from the front of the bolt carrier (Fig. 41).

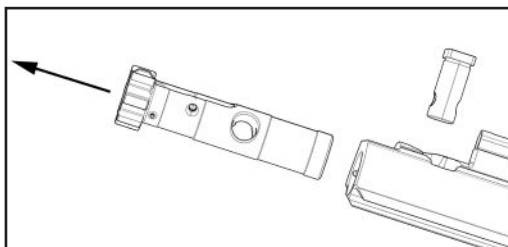


Fig. 41 – Slide the Bolt Head out

- g. Depress the rear of the extractor to equalize pressure and then drift out extractor pin utilizing the small tip of the disassembly tool. The rifle's firing pin can also be used. The extractor pin can be removed from either direction (Fig. 42).

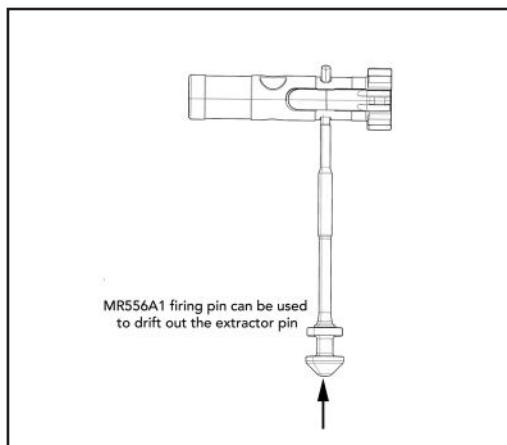


Fig. 42– Drift out the Extractor Pin

- h. Separate the extractor from the bolt head (Fig. 43).

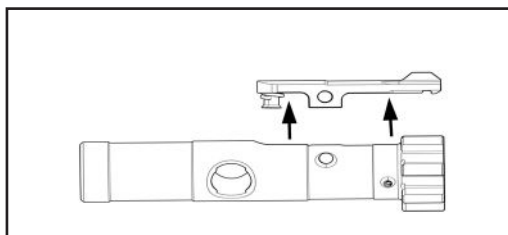


Fig. 43 – Separate the extractor form the bolt head

**CAUTION:** Only remove the extractor spring and buffer from the extractor if worn, or damaged. Note that both the extractor spring and buffer features a slight taper to help mount these items onto the extractor. Constant removal and installation of the spring and buffer could lead to decreased service life of these parts and could impair the function of the MR556A1.

#### 4. Upper Receiver

- a. Insert a 5mm hex (Allen) wrench into the retaining screw located on the lower right hand side of the Free Floating Rail System (handguard) and rotate counter clockwise (Fig. 44). Once loosened, drift out the retaining screw from left to right until the retaining screw reaches its limit of lateral travel.

**WARNING:** The retaining screw for the Free Floating Rail System (FFRS) handguard is held captive by a small shaped spring located on the lower right hand side of the handguard. Attempting to completely remove the retaining screw could lead to damage of the handguard, shaped spring, and/or retaining screw.

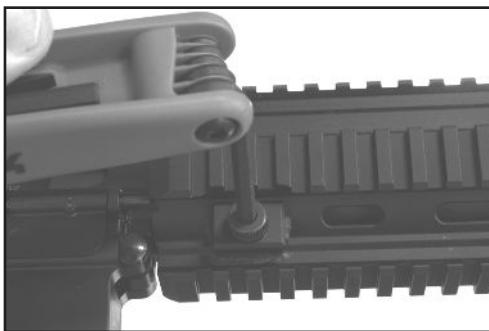


Fig. 44 – Loosening the FFRS screw with hex (Allen) wrench

- b. Slide the Free Floating Rail System (FFRS) off the barrel nut and remove the FFRS from the upper receiver.
- c. Grasp the rear of the gas piston while pushing back on the piston rod. Disengage the piston rod from the piston and slide out the piston rod from the upper receiver (Fig. 45).

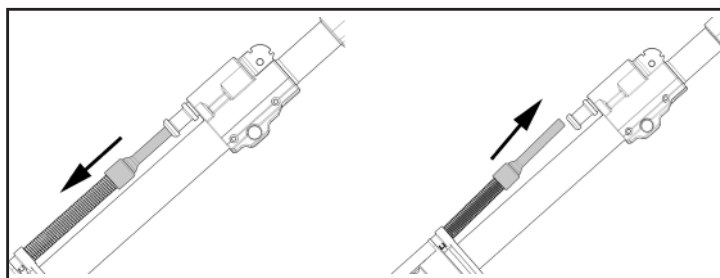


Fig. 45 – Removing Piston Rod

- d. Slide the gas piston to the rear and remove the gas piston from the gas block (Fig. 46).

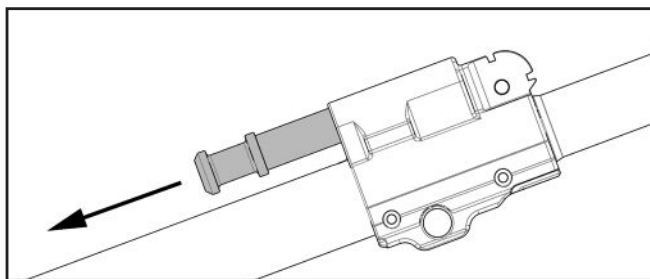


Fig. 46 – Removing Gas Piston

## 5. Lower Receiver:

**NOTE:** Always ensure the hammer is in the cocked position (down) before attempting to remove the buffer and action spring.

- a. Depress the buffer detent with the tip of the piston rod and remove the buffer and action spring from the receiver extension (buffer tube) (Fig. 347).

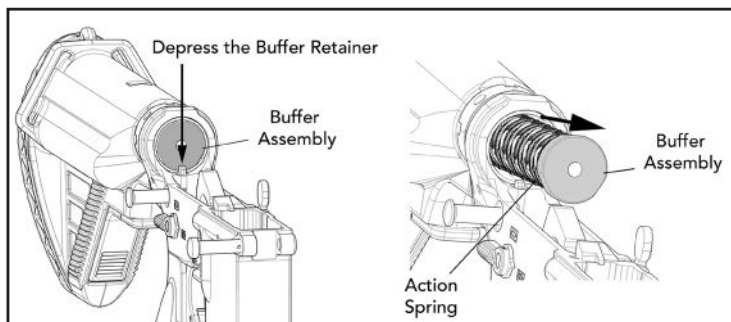


Fig. 47 – Removing Buffer Assembly

- b. Check to ensure that the buttstock tightening screw is loose before attempting to remove the buttstock. If tight, insert the large tip (3mm hex) of the MR556A1 Disassembly Tool into the tightening screw and rotate (but do not completely remove) counter clockwise (Fig. 48).



Fig. 48 – Buttstock Tightening Screw

- c. To remove the buttstock, simultaneously depress the back of the buttstock release lever while pulling downwards on the front lip. Slide the buttstock off the receiver extension.

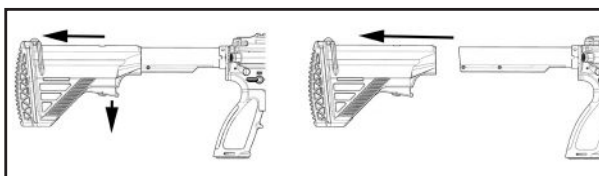


Fig. 49 – Removing Buttstock

The MR556A1 is now operator disassembled (field stripped).

**NOTE:** Disassembly beyond the above field stripping procedures should only be undertaken by HK certified personnel.

## ASSEMBLY (REASSEMBLY) OF THE MR556A1

Tools Needed: MR556A1 Disassembly Tool (located in the Buttstock), 5mm Allen Wrench, Small Straight Slot Screwdriver

### 1. Lower Receiver:

- a. Check to ensure that the buttstock tightening screw is loose before attempting to install the buttstock. If tight, insert the large tip (3mm hex) of the MR556A1 Disassembly Tool into the tightening screw and rotate (but do not completely remove) counter clockwise.
- b. Two small set screws are located on the bottom of the receiver extension (buffer tube). These set screws are provided to eliminate any play that may develop between the buttstock and the extension. The left hand side of the set screw features a detent surface that engages the buttstock. The right hand surface features a cut to accommodate a small straight slot screwdriver. Rotating the set screws clockwise will tighten the detents to the buttstock; rotating the setscrew counter clockwise will loosen the buttstock. Using a straight slot screwdriver, rotate the set screws clockwise using quarter turns and adjust until the detents engage the buttstock but do not hinder removal or installation (Fig. 50)

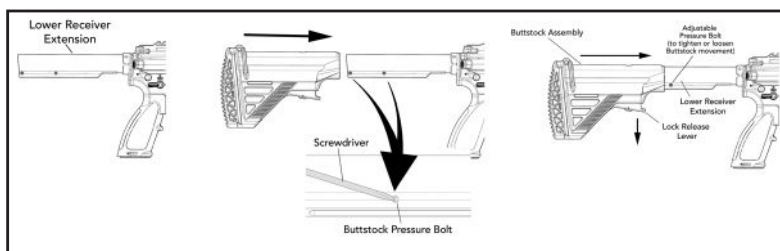


Fig. 50 – Buttstock reassembly

- c. Depress the back of the buttstock release lever allowing the front tab to pivot downwards. Pull down on the front tab until the locking pin is not visible inside the buttstock. Mount the buttstock onto the receiver extension. The buttstock is adjustable for length of pull, with six different settings available to the operator.

**WARNING:** Ensure that only the proprietary HK buffer (marked with the HK logo and red dot) and recoil spring (action spring), also marked with red paint, are installed in the MR556A1. Use of non HK buffers and recoil springs could result in cycling problems and affect the reliability of the MR556A1 (Fig. 51).

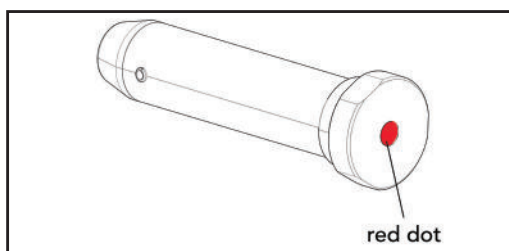


Fig. 51 – HK Proprietary Buffer

- d. Ensure that the hammer is in the down (cocked) position before attempting to install the buffer and action spring. Mount the action spring onto the buffer and insert the buffer and spring into the receiver extension. Push back on the buffer far enough until the buffer is retained by the spring loaded buffer detent (Fig. 52).

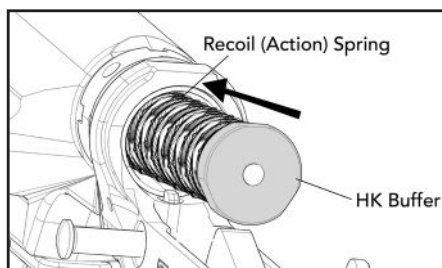


Fig. 52 – Installing the buffer and action spring

## 2. Upper Receiver:

- a. Install the gas piston into the back of the gas block. The piston rings need not be staggered prior to installation (Fig. 53).

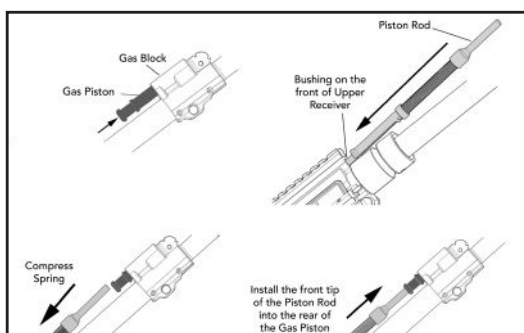


Fig. 53 – Reinstalling the Gas Piston and the Piston Rod

- b. Insert the rear of the piston rod into the bushing located at the front of the upper receiver above the barrel nut, compress the spring, and install the front tip of the piston rod into the rear of the gas piston.
- c. Slide the Free Floating Rail System (FFRS-handguard) onto the barrel nut, ensuring that the tongue on the FFRS mounts into the groove on top of the upper receiver. Once the FFRS is flush with the upper receiver, drift in the captive FFRS retaining screw. Insert a 5mm hex wrench into the retaining screw and rotate clockwise until hand tight (Fig. 54).

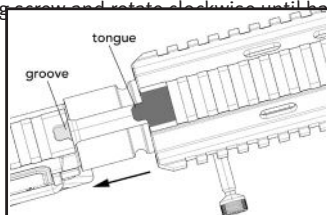


Fig. 54 – Reinstalling the FFRS handguard

## 3. Bolt Assembly:

- a. Mount the extractor spring and buffer onto the extractor, ensuring that the wider surface of both the spring and buffer are mounted on the circular mounting surface on the extractor and that the tapered (narrower) surface faces upwards (Fig. 55).

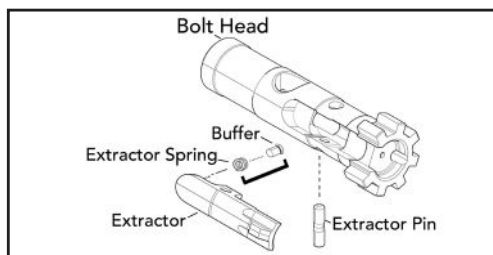


Fig. 55 – Extractor reassembly

- b. Insert the extractor with spring and buffer into the bolt head. Place pressure on the back of the extractor, line up the mounting surfaces and install the extractor pin. Ensure the extractor pin is centered in the bolt head before attempting to install the bolt head into the bolt carrier (Fig 43).

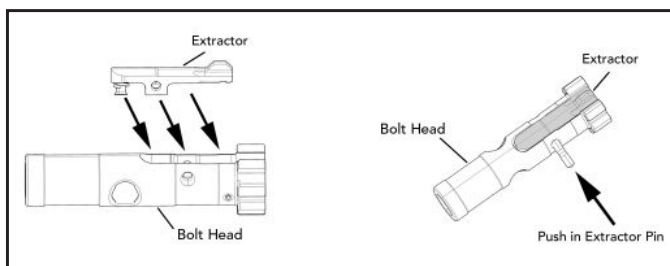


Fig. 56 – Bolt Head reassembly

---

**NOTE:** The bolt head on the MR556A1 features a tapered mounting surface for the cam pin. This feature ensures that the bolt must be properly positioned in the bolt carrier before attempting to install the cam pin.

---

- c. Slide the bolt head into the bolt carrier until the circular mounting surface for the cam pin on the bolt heads aligns with the front of the raceway on the bolt head carrier. Pointed down range, the extractor should be on the right hand side of the bolt carrier and ejector should be on the left (Fig. 57).

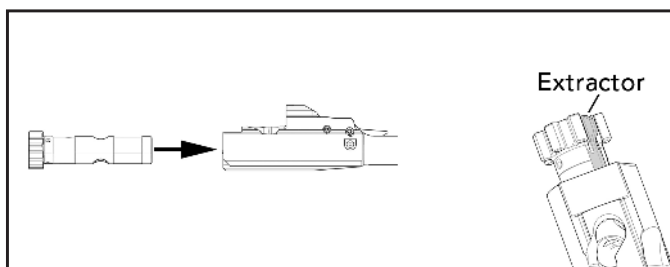


Fig. 57 – Bolt Carrier reassembly

- d. Insert the cam pin into the shaft of the bolt carrier, ensuring that the hole for the firing pin on the cam pin is aligned with the firing pin tunnels on both the bolt head and bolt carrier (Fig. 58).

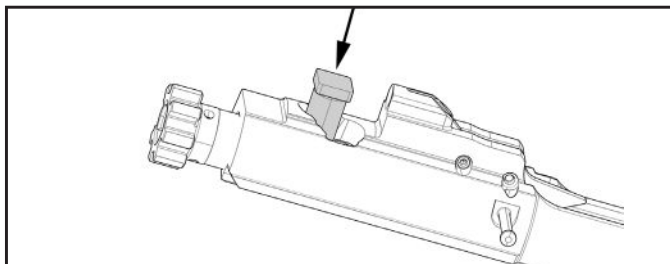


Fig. 58 – Bolt Carrier reassembly

- e. Ensure that the captive firing pin retaining pin is drifted completely out to the left hand side of the bolt carrier. Insert the firing pin spring onto the firing pin, pivot upwards on the spring loaded firing pin safety, and insert the firing pin and spring into the bolt carrier's firing pin tunnel until the firing pin reaches its limit of forward travel (Fig. 59)

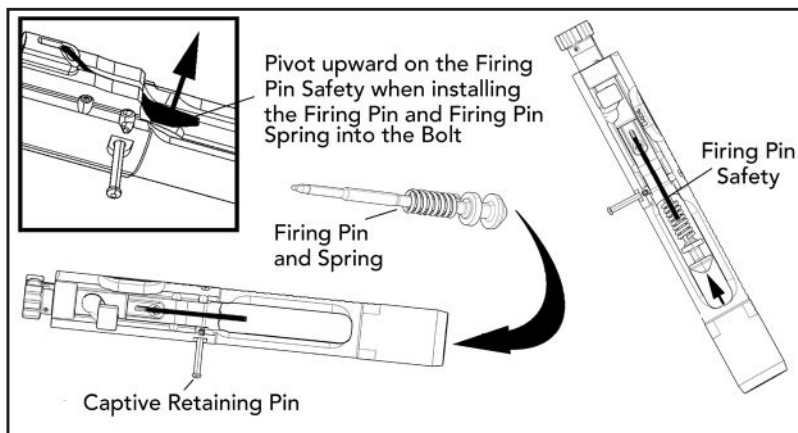


Fig. 59 – Installing the Firing Pin

- f. While maintaining forward pressure on the back of the firing pin, drift the firing pin retaining pin from left to right.
- g. Ensure that the firing pin retaining pin is properly installed by pivoting upwards on the firing pin safety while pushing backwards on the bolt head. The firing pin should be retained inside the bolt carrier (Fig. 60).

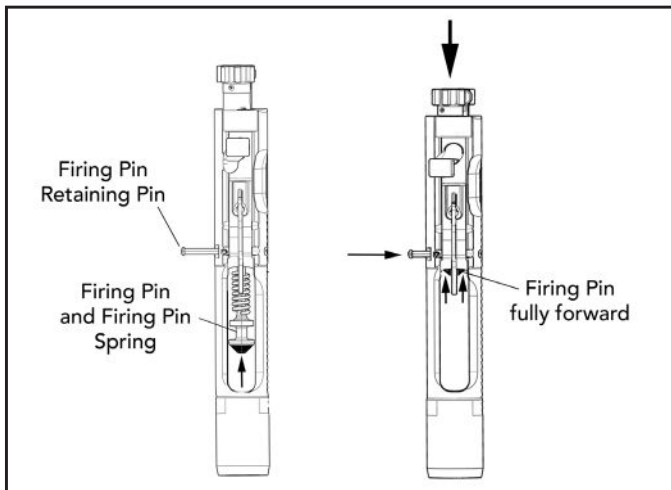


Fig. 60 – Firing Pin Retaining Pin Installation

- h. Turn the upper receiver upside down, insert the charging handle into the upper receiver, align the lugs on the outsides of the charging handle with the recesses on the inside of the upper receiver then press down until the charging handle is flush with the inside of the receiver then press slightly forward (Fig. 61).

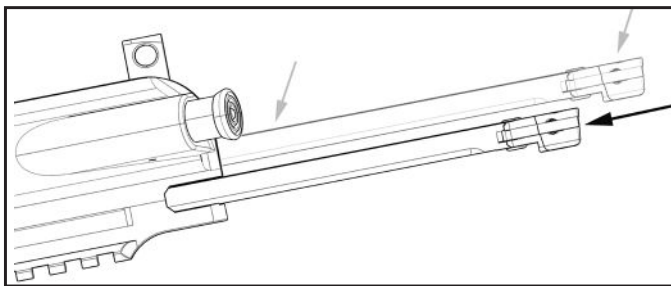


Fig. 62 – Charging Handle Installation

- i.. With the upper receiver and charging handle upside down, install the bolt assembly onto the bottom of the charging handle ensuring that the bolt carrier's anvil and the top of the cam pin are centered in the bottom cavity of the charging handle (Fig.63).

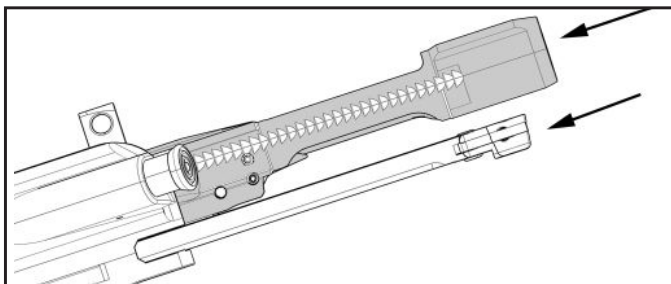


Fig. 63 – Installing the bolt assembly into the upper receiver

- j. Push the charging handle and bolt group completely into the upper receiver until the locking lugs on the bolt head engage the locking on the barrel extension and the latch on the charging handle engages the oval locking surfaces on either the left or right hand sides of the upper receiver. The latch can be mounted on either the left or the right hand side of the charging handle (Fig. 64).

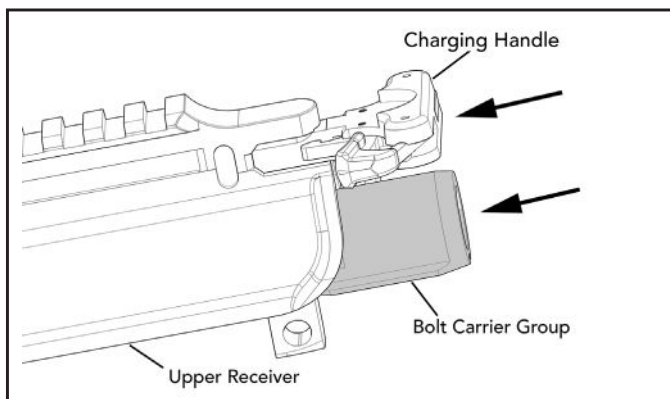


Fig. 64 – Completing installation of the bolt assembly into the upper receiver

#### 4. Upper and Lower Receivers:

**WARNING:** Always use the Disassembly Tool to disengage the detents on both the rear takedown pin and the front pivot pin. Attempting to install the pins without disengaging the detents could lead to damage of the lower receiver.

- Ensure that both the captive front pivot pin and rear takedown are drifted out to the right hand side of the receiver. If necessary, use the small surface of the MR556A1 disassembly tool.
- Place the upper receiver pointed downwards with the flash hider resting on a padded surface.
- Mount the lower receiver to the upper receiver. Drift the front pivot pin from right to left. The pivot pin will not completely lock but it will engage the upper receiver (Fig. 65).
- Insert the small tip of the disassembly tool into the spring loaded detent located in the center of the rear takedown pin. While pushing on the disassembly tool, drift the takedown pin from right to left until the takedown pin reaches its limit of lateral travel. The tip of the takedown pin should be visible on the left hand side of the lower receiver (Fig. 66).

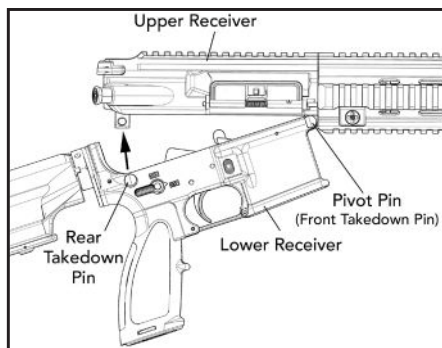


Fig. 65 – Closing Upper and Lower Receiver

- e. Insert the small tip of the disassembly tool into the spring loaded detent located in the center of the front pivot pin. While pushing on the disassembly tool, drift the pivot pin from right to left until the pivot pin reaches its limit of lateral travel. The tip of the pivot pin should be visible on the left hand side of the lower receiver.



Fig. 66– Detail of the rear Takedown Pin showing spring loaded detent.

- f. Install the disassembly tool into the storage channel located at the back of the buttstock.
- g. Mount the recoil pad onto the back of the buttstock with the recoil pad perpendicular to the buttstock. Ensure that the recoil pad is flush with the buttstock and rotate the recoil pad clockwise one quarter turn until the recoil pad engages the locking surfaces located on both the top and bottom of the buttstock.

## FUNCTION CHECK

---

**WARNING:** Always ensure the MR556A1 is unloaded prior to attempting to perform a function check.

---

---

**NOTE:** The MR556A1's selector lever can be placed on safe regardless of the position of the hammer. Legacy AR15/M16 platforms require that the hammer be cocked prior to attempting to place the firearm on "SAFE".

---

## FUNCTION CHECK PROCEDURE

1. Perform clearing procedure (see above) and ensure selector lever is set on "Safe".
2. Place the muzzle in a safe direction and rack the bolt to the rear three or four times in quick succession by using the charging handle. The bolt should not bind when traveling back and forth in the receiver.
3. "SAFE": Let the bolt go forward and completely go into battery. With an unloaded MR556A1 and the muzzle in a safe direction, ensure the selector lever is set on "Safe" and attempt to pull the trigger. The hammer must not fall.
4. "SEMI-AUTOMATIC": Rotate the selector lever to "Semi-Automatic" (Single Shot) and with an unloaded MR556A1 and the muzzle in a safe direction, attempt to pull the trigger and hold to the rear. The hammer must fall.
5. While maintaining pressure on the trigger, rack the bolt and release. The hammer should be held by the disconnect.
6. Release the trigger. The hammer should be caught by the sear as signified by a metallic click. Release the trigger completely and re-engage the trigger. Hammer must fall.
7. Insert an empty magazine into the magazine well and pull back on the charging handle. The magazine follower should engage the bolt catch and lock the bolt to the rear on an empty chamber.
8. Remove the magazine and allow the bolt to go into battery, either by depressing the bolt catch or by pulling the charging handle slightly back towards the rear and then releasing.
9. Ensure that the MR556A1 is unloaded, place the muzzle in a safe direction and pull the trigger to ease the tension on the trigger spring.
10. Place the selector lever back on "Safe" and snap the dust cover into position over the ejection port.

## MAGAZINE DISASSEMBLY

**CAUTION:** Parts are under considerable spring pressure. Wear safety goggles and point the base of the magazine housing in a safe direction when disassembling or assembling. Read the complete procedure before attempting to disassemble the magazine.

To disassemble the magazine for cleaning or inspection, push in the locking plate (located behind the magazine floorplate) with a cleaning rod, cartridge, or similarly shaped object. As you depress the locking plate through the window of the floorplate, pull back towards the rubber bumper so the locking tab will exit the locking window of the housing. When the locking tab lifts up, the floor plate, locking plate, spring, and follower will come out under pressure from the housing (Fig. 67). The floorplate is easily removed from the locking plate, which is attached to the spring and follower. Take note as to the arrangement of these parts for assembly. For cleaning purposes, it is not necessary to disassemble the follower and locking plate from the spring (Fig. 68).

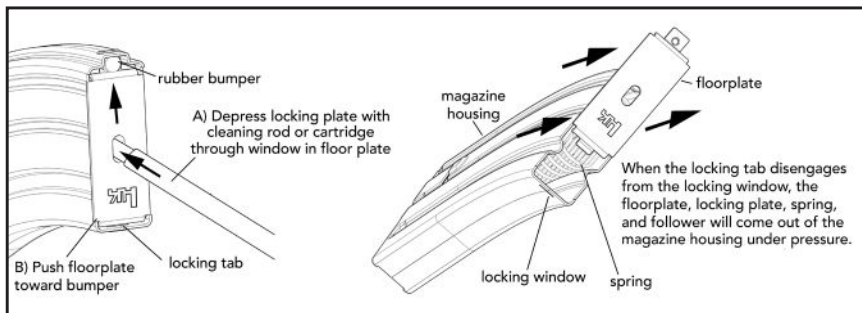


Fig. 67 – Magazine Disassembly (HK 30-Round Steel Magazine)

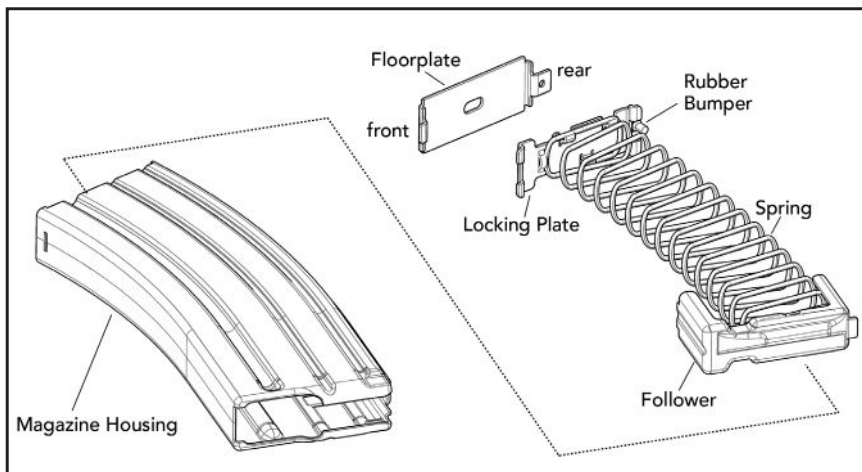


Fig. 68 – HK 30-Round Steel Magazine Components

#### ASSEMBLY (HK 30-ROUND STEEL MAGAZINE)

To assemble the magazine, use the reverse sequence used for disassembly. If magazine was cleaned, ensure that it is properly lubricated prior to assembly. Attach the follower and locking plate to the spring and slide the follower into the magazine housing (it will only assemble in one direction, do not force it). Push the locking plate down into the housing enough so that you can place the floor plate tab into the recess, (using the side with the rubber bumper first). Let go of the locking plate and insert a cleaning rod or similarly shaped object into the window of the floorplate and depress the locking plate while applying pressure rearward against the rubber bumper so the locking tab will enter the recess (locking window) in the front of the magazine (Fig. 68).

Once the floorplate is assembled, make sure the locking plate is seated flush against the floor plate. Check the function of the magazine by tapping it on your hand. Also check the function of the follower, for free movement by depressing it with the cleaning rod. Lastly check the secure attachment to and fit of the magazine in the rifle.

---

**CAUTION:** It is possible to improperly load the cartridges if the guide is not positioned correctly, the rim of the cartridge could possibly get caught in the rear groove. Constantly check spring tension in between stripper clips. Unload magazine if in doubt. Replace the stripper clip guides regularly as they wear with use.

---

Using thumb pressure on the rear of the top cartridge, press down firmly until all ten rounds are below the feed lips of the magazine. Remove the empty stripper clip while holding the stripper clip guide in place. Repeat until the magazine is full. Remove stripper clip guide and retain it for future use.

#### Speed loader

Heckler & Koch does not warrant the use of alternate filling devices. Care should be taken when using non-approved devices in that damage may occur to the magazine that is not covered under warranty.

---

**NOTE:** Do not slam the magazine on a table or a fixed hard surface during filling or damage to the feed lips may occur. Instead apply gradual pressure to accomplish this task.

---

---

**NOTE:** Protect the magazines from drop-induced damage on hard surfaces (concrete, metal, etc.). Many weapon stoppages begin in feed devices that are not properly cared for or that are abused unnecessarily.

---



Fig. 69 – Assorted MR series rifles (5.56 mm and 7.62 mm)  
with Modular Rail System (MRS) handguards

#### MODULAR RAIL SYSTEM (MRS) HANDGUARDS

Developed by HK-USA engineering staff in conjunction with Heckler & Koch's German design team, the Modular Rail System (MRS) provides HK MR series rifles, HK416, and HK417 rifles with a mission flexible, easy-to-modify, ergonomic handguard.

The modular rail system (MRS) allows the shooter to place individual rail segment components and accessories anywhere along the length of the seven free sides of the forearm using the slotted interface. Two integral quick detachable sling attachment points are located on the left and right side of the MRS, just forward of the receiver. Heckler & Koch Modular Rail System handguards are available for both 5.56 mm and 7.62 mm HK rifles and carbines and come in various lengths (14 inch-5.56 mm, 9 inch-5.56 mm, 14.7 inch-7.62 mm, 9 inch-7.62 mm, see Fig. 70) and finishes (black and Flat Dark Earth/RAL8000).

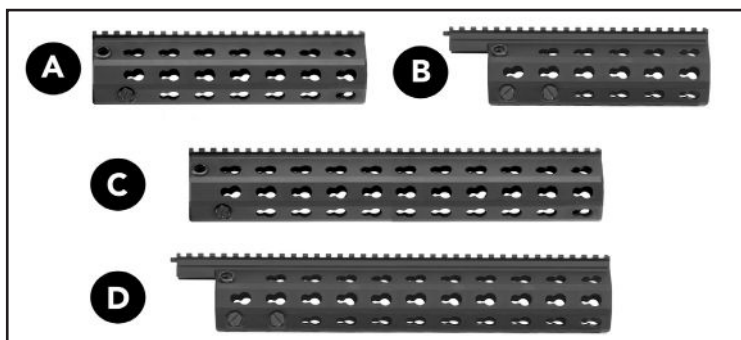


Fig. 70 – HK Modular Rail System (MRS) handguards: (A) 9 inch-5.56 mm, (B) 9 inch-7.62 mm, (C) 14 inch-5.56 mm, (D) 14.7 inch-7.62 mm

#### INSTALLING/REMOVING MRS HANDGUARDS

Installing and removing the 556 and 762 Modular Rail System handguards is essentially the same, regardless of the handguards' length, the primary difference is 762 handguards have two locking screws, 556 handguards only have one.

**NOTE:** 762 and 556 MRS handguards are not interchangeable. 556 MRS models will not fit on 7.62 mm rifles, 762 MRS models will not fit on 5.56 mm rifles.

1. With the locking screw(s) removed, slide the handguard over the barrel until it engages the barrel nut. Be sure no mechanical sights are installed on the gas block to interfere with sliding the MRS into position (Fig. 71, 72).

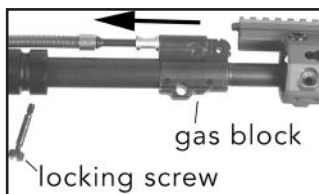


Fig. 71 – Sliding the MRS onto the barrel

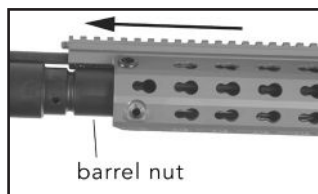


Fig. 72 – Slide the MRS over the barrel nut

2. Tighten the locking screws. The 11 mm ( $7/16$ " ) hex screws allow a variety of wrenches or screw drivers to be used for installation or removal. **DO NOT OVER TORQUE.** (Fig. 5 & 6)

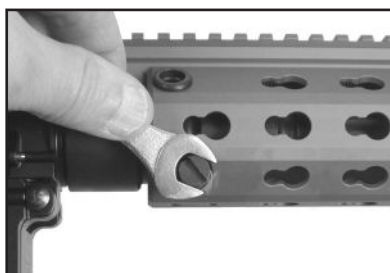


Fig. 73 – Tightening the locking screws



Fig. 74 – A variety of wrenches or screw drivers can be used.

3. To remove MRS handguards, reverse the installation procedure.

## INSTALLING RAIL SEGMENT & OTHER COMPONENTS

1. Position the rail segment or component (Fig. 75) in the desired location on the slotted keyhole interface of the MRS and push in and slide to the rear, allowing the flared shaped shaft of the captive hex (Allen) screws to hold the segment or component in position (Fig. 76, 77, 78).
2. Using a 2.5 mm hex (Allen) wrench, turn the screws until tight (Fig. 79). DO NOT OVERTIGHTEN.
3. Mount accessories to the Picatinny rail segment.

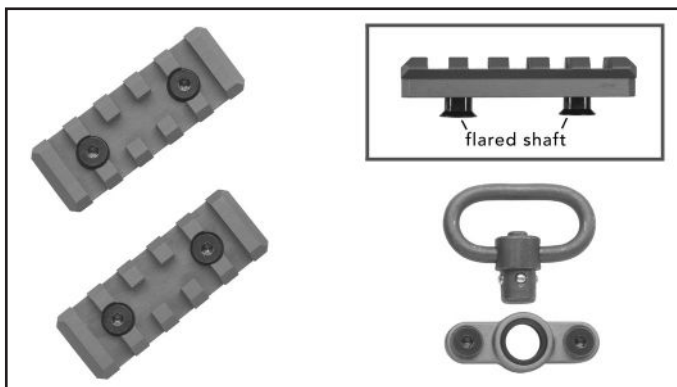


Fig. 75 – Rails segments and quick detachable sling hardware components

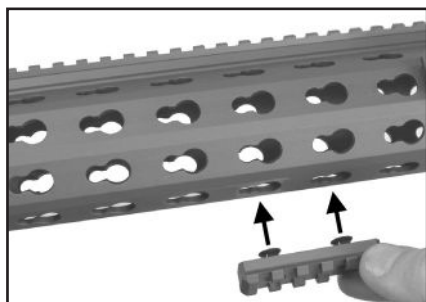


Fig. 76 – Position rail segment interface

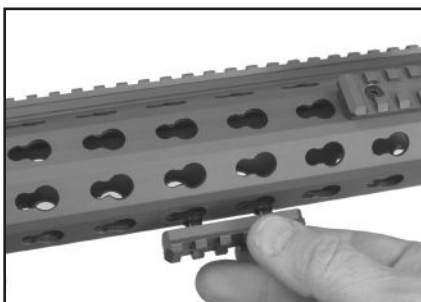


Fig. 77 – Push into slotted keyhole

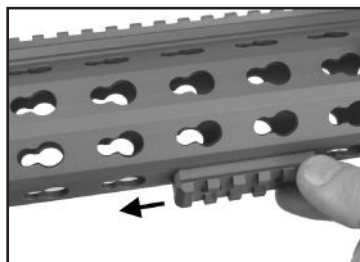


Fig. 78 – Slide to rear

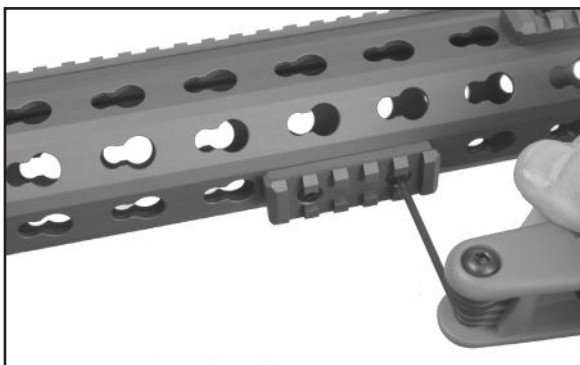


Fig. 79 – Tighten the screws using a 2.5 mm hex (Allen) wrench



Fig. 80 – MRS handguard with mounted rail segments



Fig. 81 – MRS handguard mounted on rifle

#### SIGHT INSTALLATION

Sights and other accessories can be attached to the top (Picatinny rail) portion of the MRS handguard in the normal fashion.

#### REMOVAL

To remove the rail segments and other components, simply reversing the procedure will be adequate.

## SECTION 9 — CLEANING & MAINTENANCE

### CLEANING OF THE MR556A1

There are no special requirements, cleaners, or lubricants required for cleaning the MR556A1. The standard HK cleaning kit that is used for all 5.56 mm HK rifles may be used for this firearm. Cleaning may be completed using dry cleaning solvent, bore cleaner, wiping with a cloth or an all-purpose nylon brush. Using these guidelines will determine which applies. Cleaning materials are pipe cleaners, swabs, all-purpose nylon brush and rags.

---

NOTE: If a solvent is used for cleaning, ensure all residual solvent is removed after cleaning, and then a coat of lubricant must be applied for protection against rust and the elements. Dry cleaning solvent may be used to completely remove lubricants. For example, when using the rifle in extreme cold weather, dry cleaning solvent may be used to remove traces of heavy lubricants before applying LAW. The following lubricants (or their commercial equivalents) can be used: TW25 B, Shooter Choice, LSA, LAW, or OX24.

---

Use solvents as follows:

1. Place a few drops on a swab or rag.
2. Clean the firearm with these swabs and rags until they come out clean.
3. Thoroughly purge all surfaces when solvents were applied.
4. Lubricate well in accordance with manufacturers' recommendations.

---

**CAUTION: Don't "dry clean" your firearm.**

---

General Cleaning is required under normal conditions and the following procedures apply.

1. Always clean after firing, after the firearm is wet or in adverse weather conditions. Remove areas of powder fouling, debris and grit, corrosion and dirt. Clean the bore with a bore brush and a cable cleaning rod. Pull the brush from the chamber to the muzzle. Complete this several times with bore cleaner and let soak several minutes if time permits. Clean the chamber with the chamber brush and a solid cleaning rod handle. Rotate the chamber brush with bore cleaner by pushing and twisting and also let it soak for several minutes while the upper receiver, piston, piston rod and bolt carrier assembly are cleaned with the all purpose brush using bore cleaner. Wipe excess cleaner off with a rag and then run several patches through the bore with the cable rod from the chamber to the muzzle until there is no residue on the patch.
2. Use an all purpose nylon brush or swab and apply a light coat of lubrication with a clean swab to all the metal surfaces, including the bore, the locking lugs in the chamber and on the bolt. A drop of oil should be placed on the ejector, extractor, cam pin, trigger pin, hammer pin, charging handle spring and forward assist.
3. If the firearm has been disassembled, then all parts should be thoroughly cleaned and lubricated before assembly. This is the best time to inspect all the parts before assembly.

## LUBRICATION

All firearms require proper lubrication to function as designed and the MR556A1 is no exception. Absence of lubrication may impede the operation of the MR556A1, particularly in load-bearing or friction contact areas. Excessive lubrication may also cause function problems by acting as a magnet for dirt, grit, sand, and fouling. Many high quality, medium weight lubricants (oils) specifically designed for use on firearms, including those cited earlier will work well on the MR556A1. Do not use lubricants that boast of their ability to penetrate metal as these substances may deaden cartridge primers.

### UPPER RECEIVER

Apply a light coat of a suitable lubricant to the interior of the upper receiver, bore and chamber, barrel nut, outer surfaces of barrel, barrel nut, front sight, surfaces under handguard and forward assist.

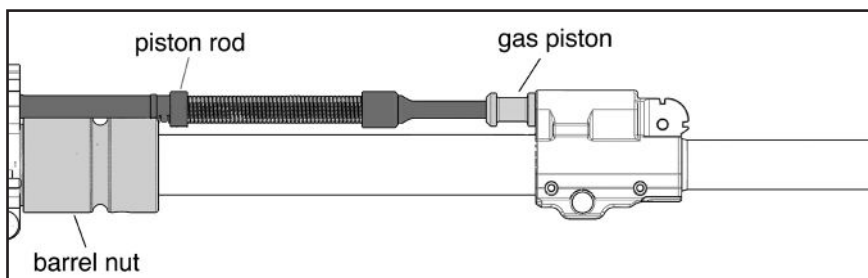


Fig. 82 – Lubrication of the Gas Piston, Piston Rod, and Barrel Nut Exterior

1. Apply a medium coat of lubricant on the gas piston and operating rod (Fig. 82)

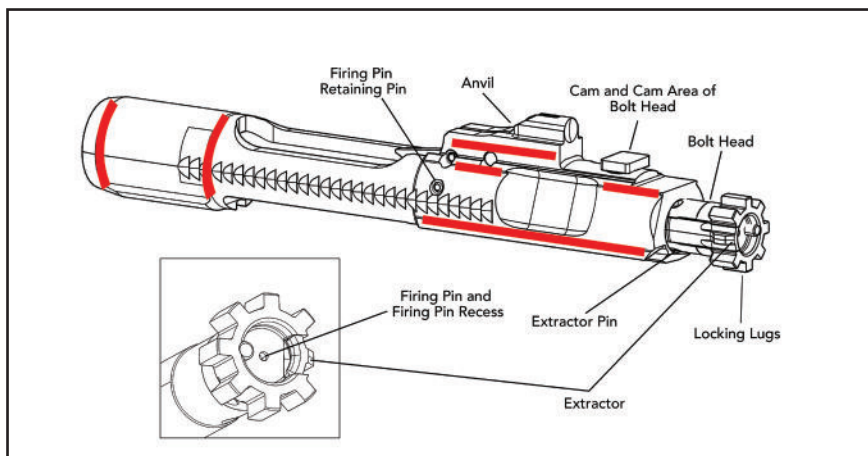


Fig. 83 – Lubrication of the MR556A1 Bolt Carrier Assembly

2. Apply a light coat of lubricant to the extractor pin, the firing pin, firing pin spring, firing pin recess in the bolt. Apply a medium coat of lubricant to the red areas (Fig 83).

3. Apply a medium coat of lubricant to the extractor (Fig. 83).
4. Apply a heavy coat of lubricant to the exterior of the bolt carrier, outside of the firing pin retaining pin, cam pin, and bolt head. Pay special attention to cam pin area inner and outer surfaces of bolt carrier, anvil, and bolt head's locking lug.

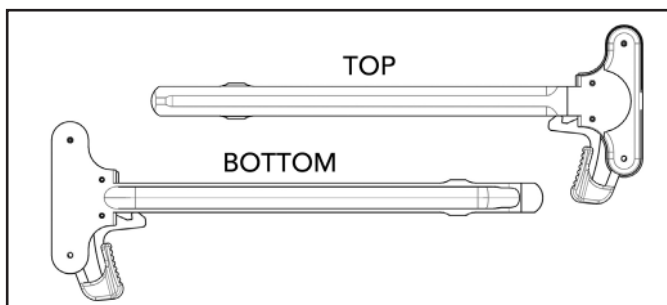


Fig. 84 – Lubrication of MR556A1 Charging Handle

5. Apply a medium coat of lubricant to the interior and exterior surfaces of the charging handle (Fig. 84).

#### LOWER RECEIVER ASSEMBLY (FIG. 85 & 86)

1. Apply a light coat of lubricant to the exterior of the receiver and receiver extension (buffer tube), interior of the exterior metallic surfaces, exposed pins, and magazine springs.
2. Apply a medium coat of lubricant to takedown pins, pivot pins, detents, inside the buffer extension tube, buffer detent pin, springs inside the lower receiver, trigger mechanism, hammer, disconnecter, and sear inside the lower receiver.
3. Apply a medium coat of lubricant on the (recoil) action spring, buffer.

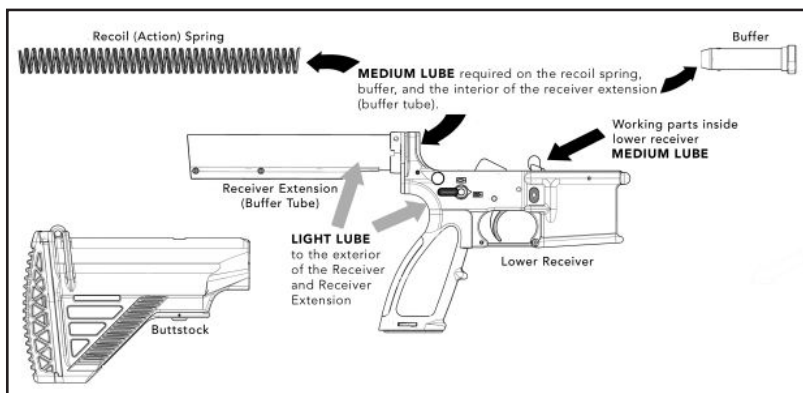


Fig. 85 – Lubrication of MR556A1 Lower Receiver Assembly

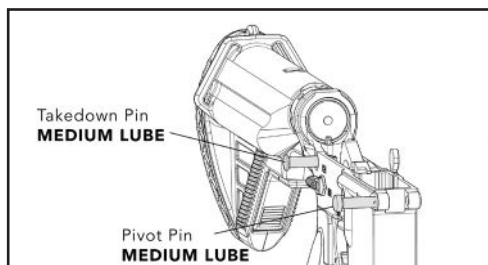


Fig. 86 – MR556A1 Buttstock Assembly

## LUBRICANT GUIDE

**Light Lubrication** — A film of lubricant barely visible to the eye.

**Medium Lubrication** — A layer of lubricant visible to the eye and that can be spread with a finger.

**Heavy Lubrication** — Heavy enough so that it can be spread with a finger and will almost drip from the component.

Fig. 87 – MR556A1 Lubricant Guide

### LUBRICATION SUMMARY

NO Lubrication: (surface is dry and not slippery to the touch)

- Plastic or rubber components
- Sling webbing
- Optics

### LUBRICATION

- Gas Piston and Gas Cylinder,
- Buffer and recoil spring
- Bolt, Bolt carrier, Cam pin and Firing Pin Safety
- Extractor
- Ejector
- Barrel extension
- Bore, chamber, locking surfaces of the chamber and bolt lugs
- Receiver take down and pivot pin
- Hammer, trigger, disconnector springs and selector lever in trigger group
- Piston rod
- All metal parts and/or any area where metal contacts metal.

### Cleaning (HK 30-Round Steel Magazine)

There are no special requirements, cleaners or lubricants for cleaning this magazine. The standard cleaning equipment that is used for the rifle may be used for this magazine. Refer to the care and cleaning section of this operator's manual for more detailed information. Do not use metal bristle (brass or steel) or wire brushes to clean the magazine components as damage may occur to the protective qualities of the surface finish.

Cleaning may be completed using dry cleaning solvent, bore cleaner, wiping with a cloth or an all purpose nylon brush. Using these guidelines will determine which applies. Cleaning materials are pipe cleaners, swabs, all purpose nylon brush and rags.

---

**NOTE:** If cleaning is completed using a solvent, then a coat of lubricant must be applied for protection against rust and the elements. Dry cleaning solvent may be used to completely remove lubricants. For example, when moving to extreme cold weather operations, dry cleaning solvent may be used to remove traces of standard lubricants before applying a cold weather lubricant like "LAW."

---

A variety of high quality lubricants, including some generic "cleaner, lubricant, and preservative" solutions, LSA (Lubricant, Small Arms) or LAW (Lubricant, Arctic Weather) — and their commercial equivalents and can be used on the HK magazine.

---

**CAUTION:** Don't "dry clean" your magazines. Do not use hot water or other solvents or you could inadvertently wash away Teflon lubricant that has been building up as a result of your using some cleaning, lubricant, preservative solutions. Rifle Bore Cleaner (RBC) may be used on HK magazines to remove carbon.

---

General cleaning is required under normal conditions and the following procedures apply:

1. Always clean after firing, after magazine is wet or in adverse weather conditions. Remove areas of powder fouling, debris and grit, corrosion and dirt.
2. If magazine is assembled, clean carbon off of follower and feed lips with the all purpose nylon brush or swab and apply a light coat of lubrication with a clean swab.

If the magazine has been disassembled, then all parts should be thoroughly cleaned and lubricated before assembly.

---

**NOTE:** Do not mix lubricants on the same magazine. The magazine must be thoroughly cleaned during the change from one lubricant to another. Dry cleaning solvent is recommended for cleaning during the change from one lubricant to another.

---

### Lube guide

Under all but the coldest Arctic conditions, normal high quality lubricants can be used on your magazine. Between +10 degrees F (-12°C) and -10 degrees F (-23°C) either normal high quality lubricants or LAW may be used. Below -10 degrees F (-23°C) use LAW.

### Inspection (HK 30-Round Steel Magazine)

A visual inspection is recommended each and every time you clean the magazine, the magazine is disassembled, or a problem exists that could be magazine related. The following are guidelines that can help in identifying and solving magazine related problems.

Many problems are very often related to incorrect operator use or maintenance, faulty ammunition and/or problems in the weapon. These areas should be checked for problems at the same time the magazine is inspected. If the same problem exists with more than one magazine, then more than likely it is a rifle, operator or ammunition problem. When problems do occur, mark/identify the suspect magazine with a tag or paint/grease pen and use the following as a guideline. Check for proper assembly. Inspect overall function of follower (free movement), locking tabs, dents, cracks, etc.

1. Housing: Inspect feed lips for dents and proper spacing, sides for dents, magazine catch area for worn surfaces or dents, cracks, etc.
2. Follower: Inspect for free movement inside of housing, dents, cracks and deformities.
3. Spring: Inspect for bends, cracks, weak tension.
4. Locking Plate: Inspect for worn or broken tabs. It should retain floor plate and stay securely attached to the spring.
5. Floor plate: Inspect for bends, cracks and correct fit of the locking tabs into the locking recess of housing.
6. Rubber bumper: Insure bumper retains floor plate into housing when assembled and there are no signs of extreme wear.

If any problems are identified, repair or replace as necessary.

Using the HK MR556A1 as the platform to build a competitive rifle —and with input from many competitive shooters — the Heckler & Koch Competition Model was developed for both casual shooters and the most demanding competitor. Ideal for 3 gun matches — the Competition Model adds the most critical fundamental enhancements to the standard MR rifle.

Foremost among these additions are the new 14-inch Modular Rail System (MRS). Lightweight and easy to customize, the MRS allows sections of accessory rails to be added by the shooter where desired, but keeping weight down and presenting a more ergonomic and comfortable handguard surface when compared to rectangular full rail systems.



Fig. 88 – MR556A1 Competition Model

The extended length 14-inch MRS does not touch the barrel, preserving the “free-floating” barrel-to-handguard feature favored by competitive shooters and present in all MR rifles. A larger, extended magazine release is also included for quick magazine changes.

An innovative compensator by Operator Suppressor Systems Inc. (OSS) replaces the standard MR flash hider. OSS is a leader in the development and manufacturing of sound and flash suppression and uses technologies originated in those fields to create a unique and highly effective compensator. The OSS compensator requires no special maintenance, if it becomes noticeably fouled or dirty it can be cleaned with a nylon brush and solvent and can then be lightly oiled (Fig. 89).



Fig. 89 – OSS Compensator for MR556A1 Competition Model

The standard MR stock is replaced by a MAGPUL CTR buttstock; easy to adjust, the CTR stock moves smoothly on the receiver extension and locks securely in position. Profile and weight make this buttstock ideal for competitive shooters.

To operate, fully depress the Release Latch (Fig. 90A,B) and pull the stock rearward (Fig. 90C) to extend or push stock forward to collapse. Intermediate positions may be selected by depressing the Release Latch and moving the stock back to the desired position. When desired position is found, engage the Friction Lock (Fig. 91A,B) by pushing up.

To remove the CTR buttstock, depress the Release Latch with one hand. With other hand, grasp both ends of the Release Pin and pull down firmly (Fig. 92A). Pull the buttstock clear of the rifle's receiver extension (Fig. 92B).

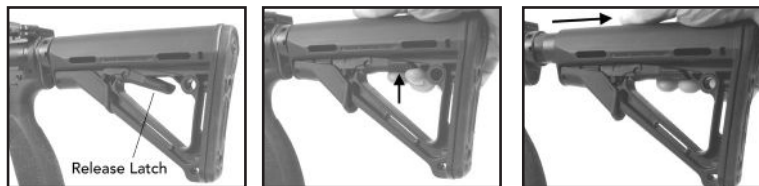


Fig. 90 A,B,C – Adjusting the MAGPUL CTR buttstock

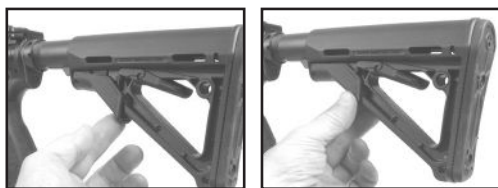


Fig. 91 A,B – Engaging the Friction Lock

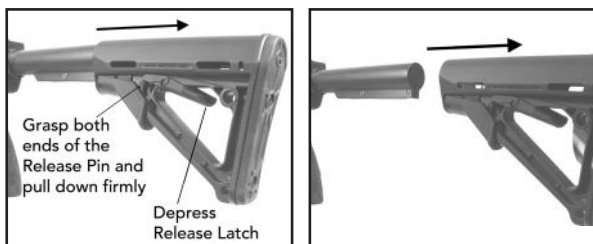


Fig. 92 – Removing the MAGPUL CTR buttstock

All other standard features of the MR556A1 are retained on the MR556A1 Competition model — including a German-made long service barrel produced by Heckler & Koch's famous cold hammer forging technology and HK's famous piston operating system. Found on HK arms like the G36 and HK416, this system uses a gas piston and pusher rod in place of the more common hollow gas tube normally employed in "direct impingement" AR-style rifles. The Competition Model is being produced in the USA, using joint U.S./German manufacturing capabilities and components — combining the design innovations of the USA and Germany into a superior product. Like all HK firearms, it's covered by Heckler & Koch's Lifetime Warranty.

## SECTION 11 — MR556A1 UPPER RECEIVER KIT

The MR556A1 upper receiver kit has been designed and manufactured to Heckler & Koch's exacting standards of excellence and is intended for use in, and with, MIL standard buffer tubes (receiver extensions), as are provided with the HK MR556A1 rifle. Due to the precise nature of the components of this kit, they must be installed as a complete kit to ensure proper operation. The MR556A1 Upper Receiver Kit (URK) consists of an MR556A1 upper receiver/barrel assembly, complete bolt mechanism, and buffer and action (recoil) spring. The MR556A1 Upper Receiver Kit is designed to be fully interchangeable with AR-style firearms. MR556A1 upper receiver kits can be used to retrofit most non-HK AR systems by replacing the aforementioned components with MR556A1 URK components.

**NOTE:** Due to the shortened length of the buffer and action spring, these parts do not work in fixed stock AR-type rifles. Additionally, the MR556A1 URK does not work in lower receivers with fully automatic or selective fire mechanisms. However, the HK416 Upper Receiver Kit (available to military and law enforcement customers) is designed to function with fully automatic and selective fire lower receivers.

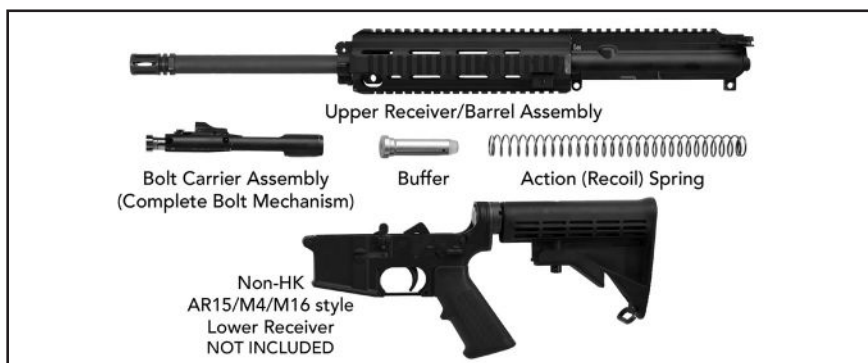


Fig. 93 – MR556A1 Upper Receiver Kit Components and non-HK Lower Receiver

### ASSEMBLY

With the upper receiver and barrel assembly removed from the non-HK AR-type firearm, press in the buffer slightly, depress the retainer (Fig. 94), and release the buffer, removing the non-HK buffer and action spring (Fig. 95).

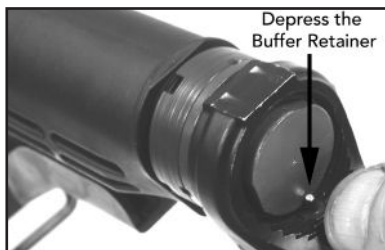


Fig. 94 – Depress Buffer Retainer



Fig. 95 – Removing non-HK Buffer and Action (Recoil) Spring

Ensure that the hammer is in the down (cocked) position before attempting to install the HK buffer and action spring. Mount the HK action spring onto the buffer and insert the HK buffer and HK spring into the receiver extension. Push back on the buffer far enough until the buffer is retained by the spring loaded buffer detent (Fig. 96).



Fig. 96 – Installing HK Buffer and Action (Recoil) Spring

---

**CAUTION:** This kit is designed operate with a MIL standard M4 buffer tube. Failure to do so, or to install the complete kit as provided, will void your warranty. Always have a competent gunsmith assemble your rifle kit and headspace your barrel before first use. Use of an incorrectly assembled rifle, or using incorrect or modified parts, can result in damage to the rifle, serious injury or death.

---

The HK bolt mechanism should already be installed in the HK barrel assembly/upper receiver, if not, push the charging handle and bolt group completely into the upper receiver until the locking lugs on the bolt head engage the locking on the barrel extension and the latch on the charging handle engages the oval locking surfaces on either the left or right hand sides of the upper receiver (see pages 32-34 in this manual for additional information).

Join the MR55A1 upper receiver/barrel assembly to the lower receiver (Fig. 97) of the high-quality AR15/M4/M16 type firearm by:

- 1) Align the upper and lower receiver

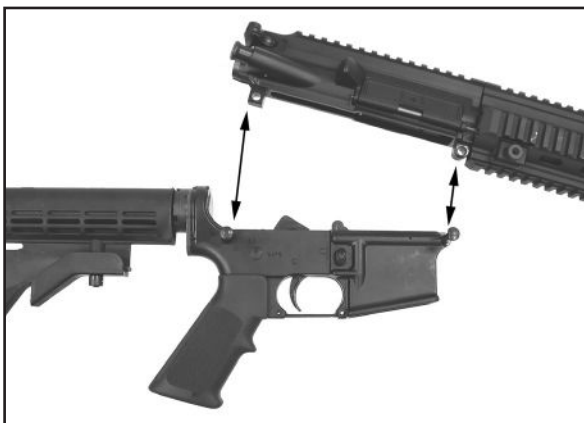


Fig. 97 – Installing the MR556A1 Upper Receiver on a non-HK Lower Receiver

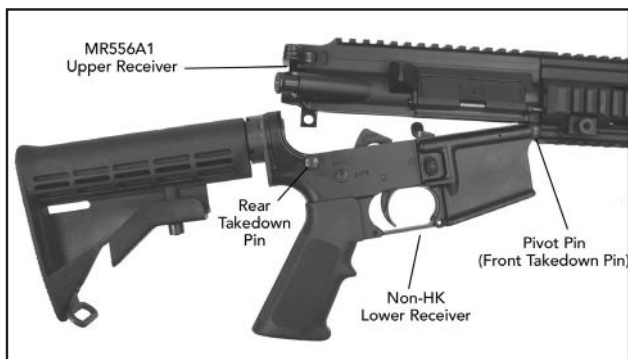


Fig. 98– Installing Front Takedown Pin

- 2) Ensure the pivot pin (front takedown pin) and rear takedown pin are “drifted out” to the right hand side of the receiver.
- 3) Mount the lower receiver to the upper receiver. Using finger pressure, press the front pivot pin from right to left so it captures and secures the upper receiver (Fig. 98).
- 4) Fully close the upper receiver onto the lower receiver. Press the rear takedown pin from right to left until the rear takedown pin secures the rear portion of the upper receiver to the lower receiver (Fig. 99).

---

**CAUTION:** Any excessive forcing of the takedown pins could damage the URK and such damage is not covered under the HK warranty. For further information, please contact HK Customer Service at TEL: 706-568-1906, EMAIL: [cs@heckler-koch-us.com](mailto:cs@heckler-koch-us.com).

---

- 5) For removal of the MR556A1 Upper Receiver Kit, reverse the assembly procedure.



Fig. 99 – Completing the installation of the MR556A1 Upper Receiver on the Lower Receiver

---

**NOTE:** For Buffer Assembly lubrication, apply a heavy coat of CLP (cleaner, lubricate, preservative) lube on the HK action spring and HK buffer. Apply a medium coat of CLP lube to the inside of the buffer tube.

---

**WARNING:** Always ensure the firearm is unloaded prior to attempting to perform a function check. Legacy AR15/M16 platforms require that the hammer be cocked prior to attempting to place the firearm on “SAFE”.

## FUNCTION CHECK

1. Perform clearing procedure (consult operator's manual for non-HK carbine used or see the MR556A1 Operator's Manual) and ensure selector lever is set on "Safe".
2. Place the muzzle in a safe direction and rack the bolt to the rear three or four times in quick succession by using the charging handle. The bolt should not bind when traveling back and forth in the receiver.
3. "SAFE": Let the bolt go forward and completely go into battery. With an unloaded carbine and the muzzle in a safe direction, ensure the selector lever is set on "Safe" and attempt to pull the trigger. The hammer must not fall.
4. "SEMI-AUTOMATIC": Rotate the selector lever to "Semi-Automatic" (Single Shot) and with an unloaded carbine and the muzzle in a safe direction, attempt to pull the trigger and hold to the rear. The hammer must fall.
5. While maintaining pressure on the trigger, rack the bolt and release. The hammer should be held by the disconnect.
6. Release the trigger. The hammer should be caught by the sear as signified by a metallic click. Release the trigger completely and re-engage the trigger. Hammer must fall.
7. Insert an empty magazine into the magazine well and pull back on the charging handle. The magazine follower should engage the bolt catch and lock the bolt to the rear on an empty chamber.
8. Remove the magazine and allow the bolt to go into battery, either by depressing the bolt catch or by pulling the charging handle slightly back towards the rear and then releasing.
9. Ensure that the carbine is unloaded, place the muzzle in a safe direction and pull the trigger to ease the tension on the trigger spring.
10. Place the selector lever back on "Safe" and snap the dust cover into position over the ejection port.

---

NOTE: If a properly assembled carbine (MR556A1 Upper Receiver Kit and non-HK lower receiver) fails to fire, or does not fire reliably, the cause could be the hammer in the lower receiver. HK recommends a MIL-SPEC hammer be used with the MR556A1 Upper Receiver Kit. For further information, please contact HK Customer Service.

---

---

NOTE: If you need help installing or removing an HK MR556A1 Upper Receiver Kit (URK) from a legacy AR-style carbine, please contact HK Customer Service at TEL: 706-568-1906, EMAIL: [cs@heckler-koch-us.com](mailto:cs@heckler-koch-us.com)

---

## SECTION 12 — TROUBLESHOOTING PROBLEMS AND REPAIR


This section contains operator level troubleshooting information for locating and correcting most of the operating troubles which may develop in the MR556A1 Series. Each malfunction for the individual part or assembly is followed by a list of tests or inspections which will help you to determine the corrective actions in the order listed. This manual cannot list all malfunctions that may occur, or all tests or inspections and corrective actions.

If a malfunction is not listed or is not corrected by listed corrective actions, please contact Heckler & Koch Customer Service staff. The symptom index is provided for a quick reference of the malfunctions covered in the table. The MR556A1 must always be treated as if loaded until the stoppage has been cleared. The following list does not include all potential causes and/or corrective actions. Other causes than those indicated below may be encountered.

Malfunction	Probable Cause	Corrective Action
<b>Failure of magazine to lock in rifle.</b>	Dirty or corroded magazine catch.	Disassemble and clean.
	Worn or broken magazine catch.	Contact HK certified armorer.
	Defective magazine catch spring.	Contact HK certified armorer.
<b>Failure to feed.</b>	Short recoil.	Refer to short recoil.
	Magazine catch spring weak or broken.	Contact HK certified armorer.
	Magazine catch defective. Magazine improperly filled.	Contact HK certified armorer. Remove rounds and reinsert.
<b>Failure to chamber.</b>	Short recoil.	Refer to short recoil.
	Weak or broken recoil spring.	Contact HK certified armorer.
<b>Failure to lock.</b>	Improperly assembled extractor spring assembly.	Assemble correctly.
	Bolt cam pin missing.	Contact HK certified armorer.
	Bent piston rod.	Contact HK certified armorer.
	Weak or broken recoil spring.	Contact HK certified armorer.
<b>Failure to fire.</b>	Carbon buildup in firing pin recess inside bolt assembly.	Remove firing pin & clean recess with pipe cleaner. Refer to operator's manual under cleaning.
	Broken or chipped firing pin.	Contact HK certified armorer.
	Broken, defective, or missing firing pin retaining pin.	Contact HK certified armorer.
	Firing mechanism and or lower receiver improperly assembled or has worn, broken, or missing parts.	Contact HK certified armorer.

<b>Malfunction</b>	<b>Probable Cause</b>	<b>Corrective Action</b>
<b>Failure to unlock.</b>	Short recoil.	Refer to short recoil.
	Burred locking lugs on bolt assembly.	Contact HK certified armorer.
	Burred lugs on barrel extension.	Contact HK certified armorer.
<b>Failure to extract.</b>	Defective extractor pin, extractor, and/or extractor spring assembly.	Contact HK certified armorer.
<b>Failure to eject.</b>	Short recoil.	Refer to short recoil.
	Ejector stuck in bolt body.	Contact HK certified armorer.
	Broken ejector.	Contact HK certified armorer
	Weak or broken ejector spring.	Contact HK certified armorer
<b>Failure to cock.</b>	Short recoil.	Refer to short recoil.
	Worn, broken, or missing parts of firing mechanism.	Contact HK certified armorer
<b>Short recoil.</b>	Unlubricated or dirty recoil spring and receiver extension.	Clean and lubricate.
	Broken or damaged recoil spring.	Contact HK certified armorer
	Worn, missing, or broken piston rings.	Contact HK certified armorer
<b>Rifle cannot be zeroed.</b>	Loose front/rear sight base.	Tighten bases down.
	Defective rear sight assembly.	Contact HK certified armorer
	Defective front sight.	Contact HK certified armorer
	Defective barrel assembly. Barrel assembly out of alignment with rear sight assembly on upper receiver.	Contact HK certified armorer
	Loose barrel.	
<b>Fires with selector lever on SAFE or when trigger is released on SEMI-AUTO.</b>	Worn, broken, or missing parts of firing mechanism.	Contact HK certified armorer
<b>Bolt assembly fails to lock to rear after firing last round.</b>	Magazine improperly loaded.	Remove and replace rounds.
	Magazine lips bent or broken.	Replace magazine.
	Magazine follower binds during operation.	Replace magazine.
	Magazine follower worn or broken.	Replace magazine.
	Magazine catch spring weak or broken.	Contact HK certified armorer.
	Broken bolt catch and/or spring.	Contact HK certified armorer.
<b>Magazine follower binds during operation.</b>	Magazine housing dented. Magazine improperly loaded.	Replace magazine. Remove rounds and reinsert

# SECTION 13 — EXPLODED DIAGRAM AND PARTS LIST

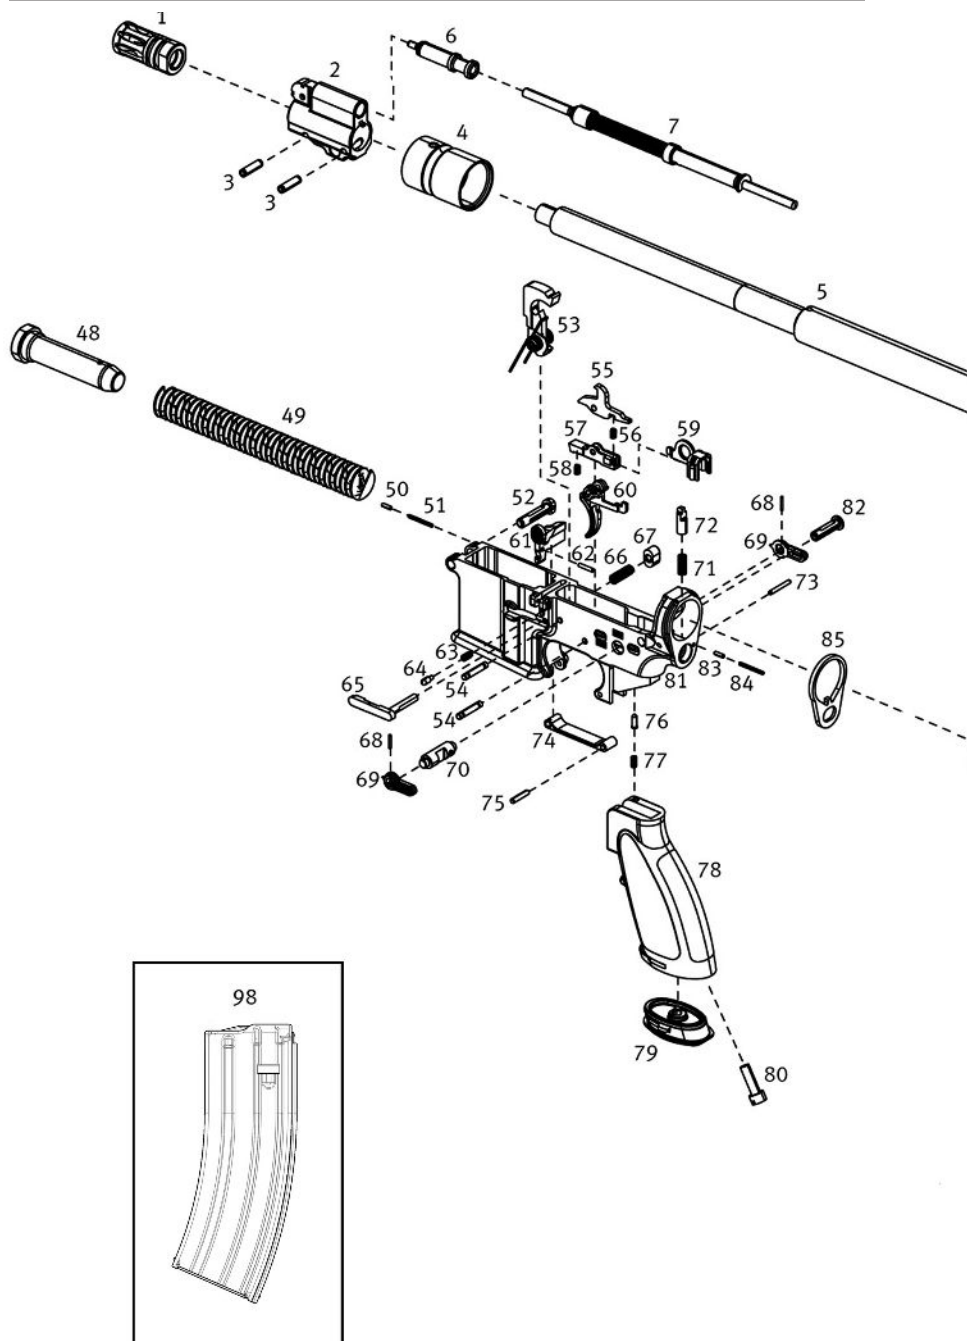



## PARTS LIST (FOR EXPLODED DIAGRAM, PAGES 48-49)

Item	Description	Part Number	Item	Description	Part Number
1-97	MR556A1 Rifle	235973	61	Bolt catch/release	50233129
1-19	Upper receiver, complete	81000077	62	Clamping sleeve (roll pin) for bolt catch/release	50979292
1-5	Barrel 16.5", complete	235990	63	Pressure spring for pressure pin	50233132
1	Flash hider	51000057	64	Pressure pin	50233131
2	Gas block	50235691	65	Magazine catch	50227611
3	Clamping sleeve (2x)	50979245	66	Pressure spring	50233136
4	Barrel nut	50203580	67	Retainer for magazine catch	50233127
5	Barrel MR556 16.5", assembled	51000049	68	Clamping sleeve (roll pin) for safety lever (2x)	50984199
6	Gas piston, complete	50205381	69	Safety lever (2x)	50227870
7	Rod, complete	50203648	70	Safety roller	50236274
8	Upper receiver, assembled	50235980	71	Pressure spring for locking pin (buffer detent)	50233121
9	Axle for cover	50203633	72	Locking pin for buffer (buffer detent)	50233120
10	Ejection port cover, complete	50203626	73	Locking pin clamping sleeve	50986544
11	Clamping sleeve (roll pin)	50979290	74	Trigger guard, complete	50233153
12	Elbow spring	50203632	75	Clamping sleeve for trigger guard	50979294
13	Clamping sleeve for forward assist	50979313	76	Stop pin	50236687
14	Pressure spring for forward assist	50203635	77	Pressure spring for stop pin	50233136
15-19	Forward assist, complete	50203599	78-79	Pistol grip, complete	50234671
20-25	Charging handle, complete	50235028	78	Pistol grip	50234672
20	Clamping sleeve (roll pin)	50928077	79	Cover, complete	50234668
21	Clamping sleeve (roll pin) for pawl (2x)	50236299	80	Cylindrical screw	50979355
22	Charging handle	50235232	81	Lower receiver	51000072
23	Plate	50227678	82	Locking pin (rear takedown pin), compl.	50235931
24	Pressure spring	50203640	83	Stop pin for locking pin	50233115
25	Pawl, complete	50235377	84	Pressure spring	50233116
26-28	Handguard, complete	236204	85	Plate	50233164
26	Handguard FFRS	233185	86	Nut for extension	50233165
26A-B	Handguard MRS	1002006-A1	87	Buffer tube	50236272
27	Locking screw for handguard	236202	88-97	Buttstock concave, complete	50236269
27A	Locking screw for handguard (SW11)	51000065	88	Buttstock	236271
27B	ASM rail segment with 5 slots	51000122	89	Bolt	50227378
28	Shaped spring	50233186	90	Pressure spring	50234688
29-47	Bolt group, complete	50236268	91	Release lever	235920
29-36	Bolt head, complete	235604	92	Clamping sleeve (roll pin)	50968761
29	Ejector	50233109	93	Pressure spring	212846
30	Pressure spring	50233110	94	Insert	235919
31	Cylindrical pin	50203569	95	Threaded pin	967663
32	Bolt head	235605	96	Hexagonal Allen key	235926
33	Rubber plug	50207779	97	Buttstock cap, concave	227616
34	Pressure spring	50205407	98	HK steel 30 round steel magazine	251770S
35	Extractor	50233108	-	HK polymer 30 round magazine	235690S
36	Clamping sleeve (roll pin)	50236320	-	HK steel 20 round polymer magazine	233609S
37	Control bolt	50233112	-	HK steel 10 round polymer magazine	235642S
38-45	Bolt head carrier, complete	236266	-	Muzzle brake for Competition Model	51000059
38	Pressure spring	233132	-	Buttstock for Competition Model	51000053
39	Catch	50233705			
40	Rivet	50233706			
41	Clamping sleeve (roll pin)	50984198			
42	Compression spring	50235022			
43	Bolt	50235238			
44	Pin	50235239			
45	Bolt head carrier	236267			
46	Pressure spring	50233674			
47	Firing pin	50233703			
48-97	Lower receiver, complete	236210			
48	Buffer, complete	50203570			
49	Recoil spring (action spring)	50233166			
50-81	Lower receiver, assembled	236209			
50	Stop pin for locking pin	50233115			
51	Pressure spring	50233116			
52	Locking pin (front takedown/pivot pin), complete	50235941			
53	Hammer, complete	235627			
54	Axle (2x)	50227886			
55	Disconnecter	51000192			
56	Pressure spring	50233149			
57	Sear release rocker	50235731			
58	Pressure spring	50235000			
59	Bridge	50203593			
60	Trigger	50235732			

Every attempt has been made to ensure the accuracy of this information, however errors or changes may occur.

## SECTION 14 — SPECIFICATIONS

Caliber	5.56 x 45 mm NATO
Operating principle	Gas operated, short stroke piston
Bolt system	Rotating bolt
Feed mechanism	Magazines, 10/20/30 rounds
Mode of fire	Semi-automatic

### Dimensions

Length, maximum (stock extended)	37.68 in / 957 mm
Length, minimum (stock retracted)	33.90 in / 861 mm
Length, maximum (stock extended, Competition Model)	37.00 in / 940 mm
Length, minimum (stock retracted, Competition Model)	33.75 in / 857 mm
Width	3.07 in / 78 mm
Height	9.45 in / 240 mm
Barrel length	16.5 in / 421 mm

### Weight

MR556A1 Rifle (w/empty steel magazine, iron sights, FFRS handguard)	8.96 lb / 4.06 kg
MR556A1 Rifle (w/empty steel magazine, iron sights, MRS handguard)	9.02 lb / 4.09 kg
Competition Model (with empty polymer magazine)	8.81 lb / 4.00 kg
Magazine (empty 30 round steel magazine)	.53 lb / .24 kg
Magazine (empty 30 round polymer magazine)	.32 lb / .14 kg

### Other

Trigger pull	4.5 - 5.6 lbf / 20 - 25 N (approximate)
Barrel profile	6 lands & grooves, right twist, 1 in 7 in (178 mm)
Sight radius*	approximately 14.60 in / 371 mm
Sights**	Diopter front and rear or accessory, Troy Micro sights standard
Adjustable HK buttstock	6 positions, 96 mm of travel

\* varies as different sights and optics can be mounted on the HK Free Floating Rail System (Picatinny type, MIL-STD-1913), all specifications and technical data subject to modification

\*\* no sights provided for sales configuration of Competition Model

updated FEB-2015

### WARRANTY REGISTRATION

Heckler & Koch warranty registration for new firearms is now on-line. To register your new MR556A1 or upper receiver kit go to...<http://hk-usa.com/warranty/register.html>

If you don't have access to the internet, call HK Customer Service at 706-568-1906 to obtain a hard copy warranty.

## HECKLER & KOCH, INC. LIFETIME LIMITED WARRANTY

### WARRANTY REGISTRATION

New HK firearms are covered by Heckler & Koch's Limited Lifetime Warranty. Warranty registration is now online. To register your new HK firearm, go to: <http://hk-usa.com/warranty/register.html>

If you don't have access to the internet, contact HK Customer Service, 5675 Transport Boulevard, Columbus, Georgia 31907, TEL: 706-701-5554.

EMAIL: [cs@heckler-koch-us.com](mailto:cs@heckler-koch-us.com) to obtain a warranty registration form or card by mail.

### HECKLER & KOCH, INC. LIFETIME LIMITED WARRANTY

All new Heckler & Koch Inc. firearms purchased after January 1, 1998, are warranted to the original retail purchaser only for the lifetime of the said original retail purchaser. In the event that this original retail purchaser, at the time of the original purchase, shall donate this firearm to another person, the donee must be listed on the warranty card (or donee's name must be submitted during the online warranty registration), and the warranty card must be returned at that time to Heckler & Koch Inc. Heckler & Koch Inc. does not guarantee or warrant that any, all, or some donations or gifts are valid and compliant with all applicable laws, regulations, and ordinances. Heckler & Koch Inc. is not responsible or liable in any way for a donation or gift that does not comply with applicable laws, regulations, and ordinances. It is the responsibility of the original retail purchaser and the donee or recipient to ensure that any such transfer complies with all applicable laws, regulations, and ordinances.

Upon completion of the online warranty registration or receipt of the warranty card indicating the name of the said donee, this warranty shall be extended to the lifetime of the said donee. This warranty applies only if the firearm was imported into the United States and distributed by Heckler & Koch Inc. to an authorized dealer.

#### What Will We Do?:

Heckler & Koch Inc. will, at its option, repair or replace without charge any Heckler & Koch Inc. firearm that fails due to a defect in materials or workmanship. Parts and labor are included. Repairs are warranted for the duration of the warranty. If Heckler & Koch Inc. replaces a firearm under this warranty; you will receive a new warranty. Heckler & Koch Inc. will return your firearm to you normal surface freight prepaid. Handguns will be shipped next or second-day air delivery.

#### How to Obtain Service:

Contact Heckler & Koch Inc. via phone at (706) 701-5554 or email at [CS@Heckler-Koch-US.com](mailto:CS@Heckler-Koch-US.com) for a Return Authorization Number before sending your firearm freight prepaid to Heckler & Koch Inc. at the address listed below. No C.O.D. shipments will be accepted.

Only the existing Heckler & Koch Inc. Service Center or any other authorized Heckler & Koch Inc. Service Center that may be established by Heckler & Koch Inc. shall be authorized to make warranty repairs.

Return the complete, unloaded firearm with a detailed description of the problem using Heckler & Koch, Inc's Return Form. **DO NOT send any live ammunition with the firearm. If you must send ammunition to us for proof purposes, be sure that it is sent separately from the firearm.**

We strongly recommend that you return a properly completed warranty registration card or complete the online warranty registration at (<https://hk-usa.com/warranty/registration/>) to establish eligibility for warranty service. If you do not return a warranty card or an acknowledgment of online warranty registration to Heckler & Koch Inc., you are required to provide adequate proof of the date that you purchased your new Heckler & Koch Inc. firearm at the time you send your firearm to Heckler & Koch Inc. warranty service.

In the event that this firearm was given as a gift at the time of original purchase, the warranty card/online warranty registration with the name of the donee must be provided to Heckler & Koch Inc., in order for the warranty to become effective.

Note: Non-warranty servicing must follow the same shipping procedures as stated above.

HK firearms with a valid Return Authorization Number should be shipped to the following address in accordance with these instructions:

Heckler & Koch, Inc.  
Attn: Service Department/RA# \_\_\_\_\_  
5675 Transport Blvd. Suite 200  
Columbus, GA 31907 USA

Any information gathered in connection with a Heckler & Koch Inc. lifetime limited warranty shall be used for that purpose and may be used for other legitimate business purposes of Heckler & Koch Inc. For further information, please review Heckler & Koch Inc.'s Privacy Policy, located at <https://hk-usa.com/cookie-policy-us/>.

#### **What Is Not Covered?**

This warranty does not cover defects or damage caused by: (1) unreasonable use; (2) failure to provide proper care or maintenance; (3) failure to comply with instructions in the owner's manual including improper installation of original Heckler & Koch Inc. parts by the owner or his agent; (4) normal wear and tear for the degree of use; (5) rust or corrosion; (6) obstructions in the barrels; (7) excessive use; (8) finish on the slide.

Heckler & Koch Inc. reserves the right to determine what constitutes the unreasonable or excessive use of the firearm.

All wooden parts and all accessories are excluded from warranty coverage.

This warranty does not cover any claims made by the second or subsequent owner of a Heckler & Koch Inc. firearm as stated above.

ANY UNAUTHORIZED ALTERATION OR MODIFICATION OF THE FIREARM OR USE OF PARTS OR COMPONENTS NOT ORIGINALLY MADE BY HECKLER & KOCH INC. MAY VOID THIS WARRANTY. HECKLER & KOCH INC. MAY NOT BE RESPONSIBLE FOR ANY CLAIMS INVOLVING THIS FIREARM THAT RESULT FROM THE USE OF FAULTY, NONSTANDARD, REMANUFACTURED, OR RELOADED AMMUNITION OR AMMUNITION NOT MANUFACTURED TO NATO, CIP, AND/OR SAAMI SPECIFICATIONS.

Under no circumstances shall Heckler & Koch Inc. be responsible or liable for incidental or consequential damages with respect to loss of use, loss of business or profits, other economic loss or injury to property, whether as a result of breach of express or implied warranty, negligence or otherwise. This Lifetime Warranty applies only to retail purchases by individuals through an authorized Heckler & Koch Inc. dealer.

#### **Exclusions**

This lifetime warranty explicitly excludes firearms purchased by the United States military, government institutions or agencies of the United States or any of its constituent states and territories, law enforcement agencies of the United States or any of its constituent states and territories, and/or security organizations located within the United States or any of its constituent states and territories. Firearms purchased by these entities and organizations for duty issue to their personnel and/or employees are covered by a one-year limited warranty against material defects and workmanship or as agreed upon in a valid contract.

This lifetime warranty also excludes rimfire .22LR rifles and pistols, which are covered by a one-year warranty.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. This limited warranty is the only express warranty by Heckler & Koch Inc.

Heckler & Koch Inc. authorizes no dealer or any other person to vary the terms of this warranty or make any other express warranties.

#### **Where to Get Further Help**

If you have questions concerning this warranty, please contact Heckler & Koch's Customer Service Department at:

5675 Transport Blvd.  
Columbus, GA 31907  
Customer Service: (706) 701-5554  
Email: [cs@heckler-koch-us.com](mailto:cs@heckler-koch-us.com)











---

HECKLER & KOCH  
5675 Transport Boulevard  
Columbus, Georgia 31907  
United States of America  
Tel: (706) 568-1906  
Fax: (706) 568-9151  
USA Website: [www.hk-usa.com](http://www.hk-usa.com)