

OPERATOR'S MANUAL

P30 SERIES



▲ WARNING Read this manual carefully before handling, loading, or using your HK P30 pistol.

▲ WARNING Like most modern handguns, the HK P30 pistol is designed without a conventional manual safety. Therefore, you must consider it to be loaded and ready to fire until you have removed the magazine and visually and physically (with your finger) confirmed that the chamber is empty.

SAFETY RULES: Read this entire Operator's Manual carefully and thoroughly before using, handling, or loading your firearm. The warnings and instructions in this Operator's Manual are important. Firearm safety is YOUR responsibility. DO NOT use this firearm if you DO NOT fully understand the warnings and instructions in this Operator's Manual. Firearms can be dangerous if not handled properly and safely. Failure to follow the warnings and instructions in this Operator's Manual, or the improper use of this firearm, may result in serious injury or death, damage to the firearm, or other damage to property. This manual should always accompany your HK P30 pistol if it is sold, given, or loaned to another person.

Whether you are an experienced shooter or have never handled a firearm before, you must read this entire manual carefully before handling, loading, or firing your HK P30 pistol. Your safety and the safety of others depends upon you following the instructions and warnings in this manual and constant use of safe firearms practices. If you are unfamiliar with firearms, take a course in the safe handling of firearms conducted by a qualified firearms instructor, your local gun club, or a similar qualified organization.

This manual contains safety warnings and instructions preceded with, **▲ WARNING** **▲ CAUTION** or **NOTICE** symbols. These signal words are designed to draw your attention to important safety information.

▲ WARNING Indicates a hazardous situation which, if not avoided, could result in death or serious personal injury.

▲ CAUTION Indicates a hazardous situation which, if not avoided, could result in moderate or minor personal injury.

NOTICE Indicates safety practices not related to personal injury.

These Warnings, Cautions and Notices will apply at all times.

▲ WARNING Failure to follow the safety information and instructions in this manual could result in death, serious personal injury and/or property damage.

▲ WARNING Treat all firearms as if they are ALWAYS loaded. If any firearm is handled carelessly or improperly, you could cause a negligent discharge, which could result in death, serious personal injury, and/or property damage.

▲ WARNING Keep your finger off the trigger and outside of the trigger guard until your sights are aligned on the target and you are ready to fire.

▲ WARNING Keep your finger off the trigger and outside of the trigger guard while loading or unloading the firearm.

▲ WARNING Keep your finger off the trigger and outside of the trigger guard while pulling the firearm out of the holster or while returning it to the holster.

▲ WARNING Be sure of your target, backstop, and what is beyond.

▲ WARNING NEVER give a firearm to or take a firearm from anyone unless the action is open, and the magazine and chamber are free of any ammunition or brass.

▲ WARNING NEVER take anyone's word that a firearm is unloaded. ALWAYS check for yourself, with the firearm pointed in a safe direction and your finger off of the trigger and outside the trigger guard.

▲ WARNING Be sure that the ammunition you are using is factory-loaded, is of the correct caliber for the firearm in which it is to be used, and that it is not damaged in any way. Do not use reloaded, remanufactured, or hand-loaded ammunition as it may not meet applicable NATO, SAAMI or CIP standards.

- ▲ WARNING** Before firing, remove the magazine from the firearm, lock the action open, make sure the chamber is CLEAR of any ammunition or brass, and check the barrel of the unloaded firearm for any possible obstructions.
- ▲ WARNING** Before firing any firearm that is unfamiliar to you, make sure that you understand exactly how it functions. A lack of familiarity with the firearm can result in serious injury or death, damage to the firearm or other damage to property. Attend a certified training course on any firearm which you intend to use or with which you are not sufficiently familiar.
- ▲ WARNING** ALWAYS wear adequate ear protection and eye protection when using your firearm. Ear protection should be commercially manufactured, at a minimum, provide a noise reduction rating (NRR) of 24 decibels. Eye protection should, at a minimum, provide impact protection with side panels and meet ANSI standard Z87.1.
- ▲ WARNING** Firearms should be locked and stored unloaded, secured, and separately from ammunition in a suitable container out of the sight and reach of children and/or any unauthorized individuals.
- ▲ WARNING** Never store or transport ammunition in the same container as your pistol.
- ▲ WARNING** Alcohol or drugs should NEVER be used before or during use or handling of a firearm. Your vision, balance, coordination, and judgment could be seriously impaired, making your firearm handling unsafe.
- ▲ WARNING** If or when you are taking medication, ALWAYS seek a doctor's advice to be sure you are able to use and handle your firearm properly and safely.
- ▲ WARNING** NEVER alter or modify your firearm because alterations or modifications may impair the use of the firearm, including causing malfunctions or dangerous conditions.
- ▲ WARNING** Discharging firearms in poorly ventilated areas, cleaning firearms, or handling ammunition may result in exposure to lead; a substance known to be associated with birth defects, reproductive harm and other serious injury or death. Always have adequate ventilation. Wash hands thoroughly after handling ammunition, firing your pistol, and/or performing preventative maintenance on your pistol to minimize your lead exposure.
- ▲ CAUTION** Keep all body parts, including the hands and fingers, away from the muzzle to avoid injury or burns.
- ▲ CAUTION** Be sure that no part of either hand touches or interferes with the slide. The slide is moved backward by the recoil force of the pistol during firing and may cause serious injury.

Not all HK products are available to all U.S. states. Please check local laws and regulations before ordering. Heckler & Koch does not warrant that a person may legally purchase, possess, or carry specific items according to federal, state, or local laws.

Before leaving the factory, your HK P30 pistol was tested, carefully inspected, and packaged. However, HK cannot control what happens to its pistols after they leave the factory, therefore, carefully examine your HK P30 pistol when you acquire it to ensure that it is unloaded and undamaged.

If you need another copy of this manual, do not understand any of the warnings or instructions, or if you have any problems operating your HK pistol, contact us at:

HECKLER & KOCH

5675 Transport Boulevard Columbus, Georgia 31907 • Customer Service: 706-701-5554
USA Website: www.hk-usa.com • Email: cs@heckler-koch-us.com

⚠ WARNING READ THE INSTRUCTIONS AND WARNINGS IN THIS OPERATOR'S MANUAL CAREFULLY BEFORE USING OR HANDLING THIS FIREARM. A firearm has the capability of taking your life or the life of someone else! Be extremely careful with your firearm. An accident can occur at any time and is almost always the result of not following basic safety rules.

OPERATOR'S MANUAL

P30 SERIES



HECKLER & KOCH

5675 Transport Boulevard
Columbus, Georgia 31907
Customer Service: 706-701-5554

USA Website: www.hk-usa.com • Email: cs@heckler-koch-us.com

© Heckler & Koch USA (Heckler & Koch Inc. and Heckler & Koch Defense Inc.) May 2026
All rights reserved, specifications and models subject to change without notice.

⚠ DO NOT DISCARD THIS OPERATOR'S MANUAL. This Operator's Manual should be kept with this firearm and be transferred with this firearm if there is a change in ownership or it is presented to another person.

TABLE OF CONTENTS

Safety Rules	2-3
Section 1 Nomenclature	6
Section 2 Specifications	9
Section 3 Function & Operation	12
Cycle of Operation.....	12
Safety Features.....	13
Section 4 Instructions for Use	16
Ammunition.....	16
Filling and Emptying the Magazine.....	17
Loading.....	18
Sights and Aiming.....	19
Firing.....	20
Trigger Variants.....	21
Selection and Use of a Holster.....	22
Unloading and Safety Check.....	22
Clearing and Safety Check Procedure.....	23
Section 5 Disassembly & Assembly	24
Disassembly.....	24
Assembly.....	26
Function Check.....	27
Installation of Backstraps and Grip Panels.....	28
Magazine Disassembly.....	29
Magazine Assembly.....	31
Section 6 Cleaning & Maintenance	33
Cleaning.....	33
Inspection.....	35
Lubrication.....	36
Storage and Transport.....	37
Troubleshooting Problems & Repair.....	37
Section 7 Lock-Out Device	38
Section 8 P30 Accessories	39
Section 9 Warranty	41
Section 10 Youth Handgun Safety Notice	44
Section 11 State Required Safety Notices	46
Section 12 Parts Lists and Exploded Diagrams	49
Firearms Service Record.....	55

SECTION 1 NOMENCLATURE

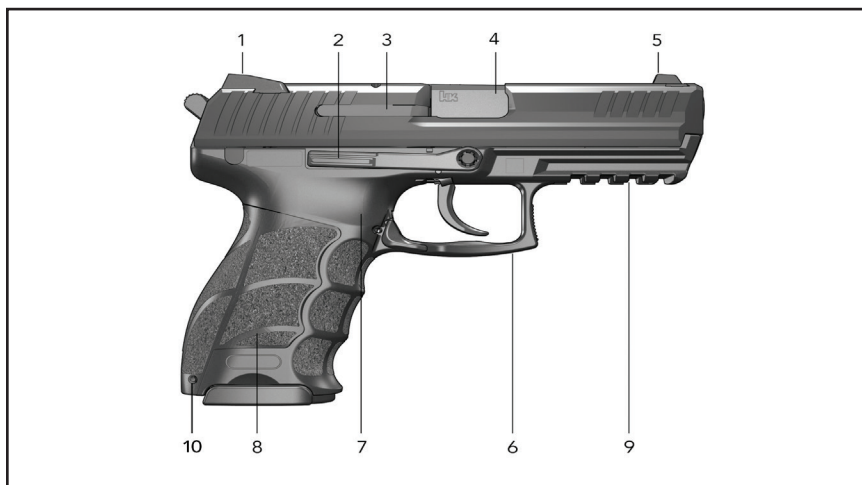


Figure 1 — P30 (right side view)

- | | |
|------------------------|-----------------------------------|
| 1 Rear sight | 6 Trigger guard |
| 2 Slide release, right | 7 Frame |
| 3 Extractor | 8 Grip panel, right |
| 4 Barrel | 9 Serial number |
| 5 Front sight | 10 Lanyard loop (except on P30SK) |

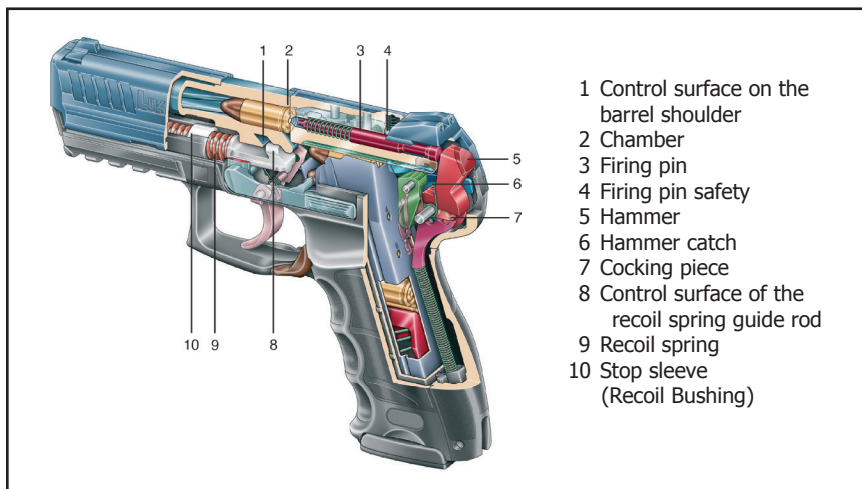


Figure 2 — P30 Cutaway (left side view, P30 LEM variant shown)

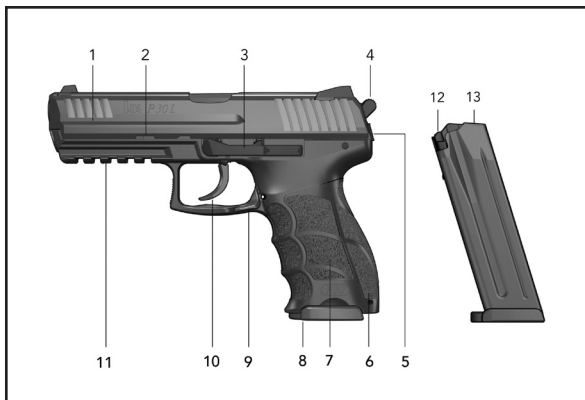


Figure 3 — P30L (left side view)

- | | |
|------------------------|-------------------------|
| 1 Slide | 8 Magazine |
| 2 Disassembly notch | 9 Magazine release |
| 3 Slide release, left | 10 Trigger |
| 4 Hammer | 11 Picatinny-style rail |
| 5 Decocker (Variant 3) | 12 Follower |
| 6 Backstrap | 13 Magazine lips/body |
| 7 Grip panel, left | |



Figure 4 — P30SK LEM, P30 LEM, P30L LEM (left side view)



Figure 5 — P30SK, P30, P30L (left side view)
V3 DA/SA with decocker on rear of frame



Figure 6 — P30SKS, P30S, L30LS (left side view)
V3 with Safety Levers shown in the "SAFE" positions

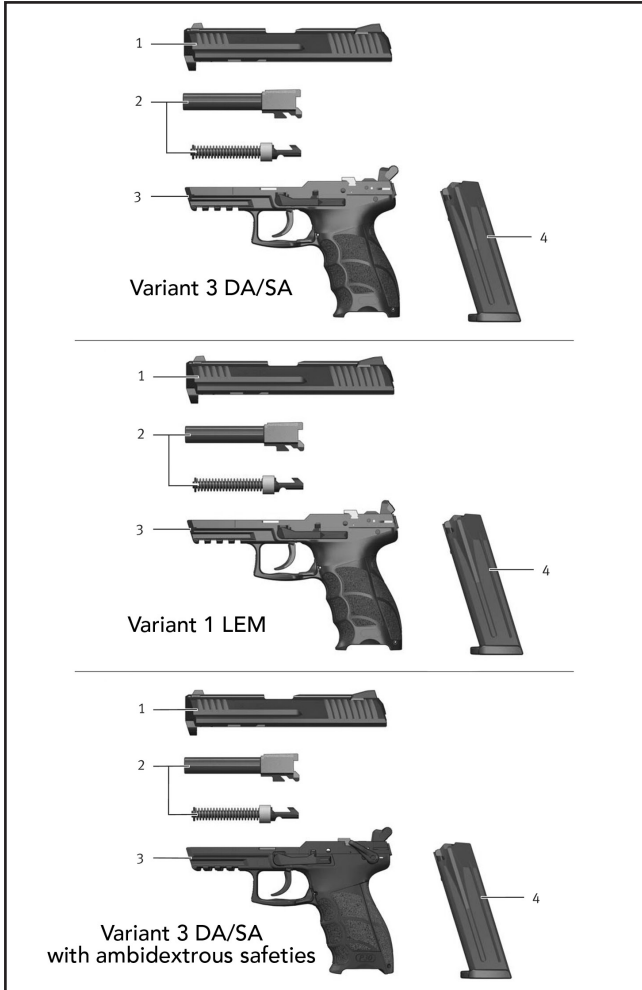


Figure 7 — P30 Assembly Groups (current variant configurations)

1 Slide
2 Barrel with recoil assembly

3 Frame
4 Magazine

SECTION 2 SPECIFICATIONS

P30

Caliber	9 mm x 19 Luger	.40 S&W
Operating Principle	Short recoil, modified	Short recoil, modified
Action Type	Browning type, linkless	Browning type, linkless
Sights	Open rectangular notch rear sight with high contrast front sight (not radioactive)	same as 9mm model
Total Length	181 mm (7.13 in.)	
Barrel Length	98 mm (3.86 in.)	
Barrel Profile	Six-sided polygonal	
Sight Radius	148.5 mm (5.85 in.)	
Twist Length	250 mm (9.84 in.)	
Overall Height (with magazine inserted)	138 mm (5.43 in.)	same as 9 mm model
Overall Width	34.8 mm (1.37 in.)	
Weight (with empty magazine)	739 grams (26.07 oz.)	
Weight of empty magazine	93 grams (3.28 oz.)	
Magazine Capacity	20, 17, 15 or 10 rounds	10 or 13 rounds (.40 S&W)
Safety Features	Ambidextrous Safety Levers (P30S Variants), Decocking Lever (DA/SA V3 Variants), Disconnecter (All Variants), Firing Pin Block (All Variants), Firing Pin Return Spring (All Variants), Drop Safety (All Variants), Lock Out Device (All Variants)	
Variant 1 (V1)	Light trigger pull, Law Enforcement Modification (LEM) enhanced DAO	
Variant 2 (V2)	Standard trigger pull, Law Enforcement Modification (LEM) enhanced DAO	
Variant 3 (V3)	Double Action/Single Action (DA/SA) with Decocker	
	P30S specifications approximately the same except for additional width (38.46 mm /1.51 in.) and weight (790 grams /27.87 oz.)	

P30L

Caliber	9 mm x 19 Luger	.40 S&W
Operating Principle	Short recoil, modified	Short recoil, modified
Action Type	Browning type, linkless	Browning type, linkless
Sights	Open rectangular notch rear sight with high contrast front sight (not radioactive)	same as 9mm model
Total Length	196 mm (7.72 in.)	
Barrel Length	113 mm (4.45 in.)	
Barrel Profile	Six-sided polygonal	
Sight Radius	163 mm (6.42 in.)	
Twist Length	250 mm (9.84 in.)	
Overall Height (with magazine inserted)	138 mm (5.43 in.)	same as 9mm model
Overall Width	34.8 mm (1.37 in.)	
Weight (with empty magazine)	780 grams (27.51 oz.)	
Weight of empty magazine	93 grams (3.28 oz.)	
Magazine Capacity	20, 17, 15 or 10 rounds	10 or 13 rounds (.40 S&W)
Safety Features	Ambidextrous Safety Levers (P30LS Variants), Decocking Lever (DA/SA V3 Variants), Disconnecter (All Variants), Firing Pin Block (All Variants), Firing Pin Return Spring (All Variants), Drop Safety (All Variants), Lock Out Device (All Variants)	
Variant 1 (V1)	Light trigger pull, Law Enforcement Modification (LEM) enhanced DAO	
Variant 2 (V2)	Standard trigger pull, Law Enforcement Modification (LEM) enhanced DAO	
Variant 3 (V3)	Double Action/Single Action (DA/SA) with Decocker	
	P30LS specifications approximately the same except for additional width (38.46 mm / 1.51 in.) and weight (830 grams /29.28 oz.)	

P30SK

Caliber	9 mm x 19 Luger
Operating Principle	Short recoil, modified
Action Type	Browning type, linkless

Sights	Open rectangular notch rear sight with high contrast front sight (not radioactive)
Total Length	163 mm (6.42 in.)
Barrel Length	83 mm (3.27 in.)
Barrel Profile	Six-sided polygonal
Sight Radius	136 mm (5.35 in.)
Twist Length	250 mm (9.84 in.)

Overall Height (with magazine inserted)	116 mm (4.57 in.)
Overall Width	34.8 mm (1.37 in.)
Weight (with empty magazine)	680 grams (23.99 oz.)
Weight of empty magazine	82 grams (2.89 oz.)

Magazine Capacity	20, 17, 15, 13 or 10 rounds
Safety Features	Ambidextrous Safety Levers (P30SKS Variants), Decocking Lever (DA/SA V3 Variants), Disconnecter (All Variants), Firing Pin Block (All Variants), Firing Pin Return Spring (All Variants), Drop Safety (All Variants), Lock Out Device (All Variants)

Variant 1 (V1)	Light trigger pull, Law Enforcement Modification (LEM) enhanced DAO
Variant 2 (V2)	Standard trigger pull, Law Enforcement Modification (LEM) enhanced DAO
Variant 3 (V3)	Double Action/Single Action (DA/SA) with Decocker

P30SKS specifications approximately the same except for additional width (38.46 mm / 1.51 in.) and weight (708 grams 24.97 oz.)

Trigger Pull (all models)

	Newtons (approx.)	Pounds (approx.)
Variant 1 (V1)	18 N - 27 N	4.05 - 6.07
Variant 2 (V2)	27 N - 35 N	6.07 - 7.89
Variant 3 (V3)	18 N - 27 N (56N after decock)	4.05 - 6.07 (12.59 after decock)


INSTRUCTIONS FOR USE OF HK THREAD PROTECTORS



For HK handguns with threaded barrels and thread protectors: ***Most HK thread protectors are designed with reverse thread (to install & tighten, turn counter clockwise / to remove & loosen, turn clockwise).*** Be sure to verify the correct thread direction on your HK handgun's threaded barrel before attempting to

remove or install, **DO NOT OVER TIGHTEN THREAD PROTECTORS.**

Thread protectors must be removed from the handgun's barrel prior to disassembly and assembly of the handgun. Use of "lock tight" thread adhesives is not recommended.



TO INSTALL,
TIGHTEN
COUNTER
CLOCKWISE

**VP9 Tactical
VP40 Tactical
HK45 Tactical
HK45 Compact Tactical
USP45 Tactical
USP45 Compact Tactical
USP40 Tactical
USP9 SD & USP9 Tactical
any 9mm or .40 caliber P30,
P2000, or P2000 SK with a
threaded barrel**

**ONLY the .45 ACP HK Mark 23 has
conventional, clockwise thread!**

CYCLE OF OPERATION

The cycle of operation is a reoccurring sequence of mechanical events which takes place in the operation of a self-loading firearm. The sequence for the P30 pistol begins with a loaded magazine inserted into the magazine well with the slide locked back to the rear.

1. Feeding: Removal of a round from the magazine

Depressing either side of the ambidextrous slide release or pulling slightly back on the slide serrations and releasing allows the recoil spring to expand, driving the slide forward. The feed pawl, an extrusion that is located on the bottom of the slide, passes between the feed lips of the magazine housing, striking the top cartridge, and pushing it towards the chamber. The bullet then contacts the barrel feed ramp, allowing the base of the cartridge to pivot upwards on the slide breech face.

2. Chambering: Placing and seating the round into the chamber of the barrel

The recoil spring continues to expand, driving the slide forward and the slide positions the cartridge into the chamber. The base of the cartridge continues to pivot upwards as the slide mounted extractor engages the cartridge extractor rim. Chambering is complete by the time the barrel starts to move when the slide comes in contact with the back of the barrel locking block and starts to pivot the barrel upwards and forward.

3. Locking: Closing and locking of the breech mechanism prior to the shot

As the slide is moving forward, the slide breech face contacts the extension on the back of the barrel locking block and thus pivots the barrel upward until the stepped forward edge of the barrel locking block engages the forward edge of ejection port. As the slide locks into position, the frame mounted disconnecter is allowed to pivot upwards into a corresponding relief cut milled on the inside of the slide, thus allowing the trigger bar access to the sear release catch. The locking phase is complete when the slide reaches its limit of forward travel.

4. Firing: Ignition of the cartridge primer and propellant

As the operator pulls the trigger, the trigger bar moves forward and contacts the control lever. The front of the control lever pivots upwards on the sear axle, allowing the tip of the control lever to depress the firing pin safety on the slide. The hammer catch, mounted on side of the control lever, pivots upwards as well. The hook on the bottom of the hammer catch engages the roll pin on the bottom of the sear, thus disengaging the hammer (DA/SA variant) or cocking piece (LEM variant) from the sear and allowing the hammer strut spring to pivot the hammer forward with enough energy to strike the firing pin and overcome the force of the firing pin spring. The tip of the firing pin then contacts and dents the primer. The primer detonates which, in turn, ignites the propellant. The projectile, separated from the cartridge case, is forced down the barrel by the expanding gases and is stabilized by the polygonal rifling located inside the barrel.

5. Unlocking: Removal of any blocking mechanism to allow the opening of the breech

The resultant force of the cartridge firing produces an impact on the slide and barrel, initially pushing both the slide and barrel back in unison. The slide ejection port pushes back on the barrel locking block and after approximately 3.9 millimeters of travel, the barrel pivots downward until the barrel angular locking surface engages the contact surface on the recoil spring guide rod.

6. Extracting: Removal of the fired cartridge case or live round from the chamber

With the barrel now retained by the locking block, the slide continues to move towards the rear. The extractor pulls the fired cartridge case or live round from the chamber.

7. Ejecting: Expulsion of the fired cartridge case or live round from the firearm

The extractor engages the cartridge case extractor rim as the slide travels to the rear. The extractor creates a pivot and the frame mounted ejector creates a contact point. As the slide rakes the cartridge case against the ejector, the ejector pushes the cartridge case out through the ejection port.

8. Cocking: Accomplished when the slide rotates the hammer rearward.

The hammer (V3) or cocking piece (V1/2) rotates on the hammer axle until engaged by the sear. A frame mounted leaf spring applies pressure to the sear forcing it to connect with the hammer or cocking piece.

SAFETY FEATURES

The P30 Series incorporates the following safety features:

▲WARNING Some P30 pistols do not have a conventional manual safety and will fire if the trigger is pulled when there is a round in the chamber.

▲WARNING Although HK pistols have several design features and mechanical safeties designed to prevent an unintentional discharge if the pistol is dropped or hit, proper and safe function of your P30 pistol depends upon it only being used for its intended purpose and not being altered or modified. As with any mechanical device, parts failures can occur if your P30 pistol is subjected to unusual and extreme forces. Therefore, to minimize the risk of negligent discharge, serious injury, or death, safe firearm handling practices and the warnings and instructions in this manual must always be followed.

NOTICE The P30 is tested and rated to AC225/TOP/SAAMI drop standards. Firearms are dropped from a specified height, designed to simulate a handgun slipping from a user's hand in multiple orientations.

1. Ambidextrous Safety Levers (P30S, P30LS, & P30SKS Variants)

When activated, the ambidextrous safety levers block the upward movement of the working parts and prevent the weapon from firing. When set on "safe" (Figure 8), the hammer axle, attached to the right-hand safety lever, blocks the upward movement of the control lever. With the movement of the control lever blocked, the hammer catch is unable to pivot upwards and push off the roll pin mounted on the bottom of the sear. The sear is then unable to disengage from the hammer and the hammer is therefore unable to strike the firing pin. When set on "fire" (Figure 9), an angled portion of the hammer axle pivots and allows the hook on the back of the control lever to pivot downwards while simultaneously moving the hammer catch. The hammer catch disengages the roll pin at the bottom of the sear and sear separates from the hammer, allowing the hammer strut spring to propel the hammer upwards to strike the firing pin.

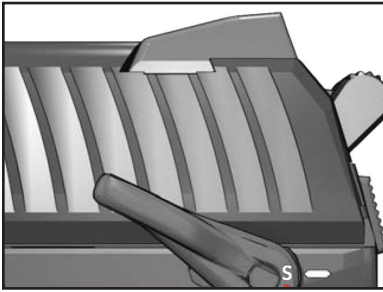


Figure 8
Safety lever on (engaged)

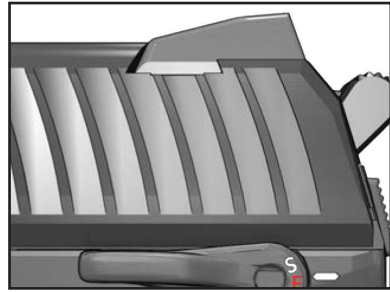


Figure 9
Safety lever in FIRE position

2. Decocking Lever (DA/SA V3 Variants)

The decocking lever allows the operator to safely reposition the hammer from the single action mode to the double action mode. The decocking lever, which extends out the back of the frame, is affixed directly to the sear. Pushing the decocking lever disengages the sear from the hammer. The hammer, upon being released from the sear, swings upward until it is blocked by the back of hammer catch.

3. Disconnecter (All Variants)

The disconnecter ensures the weapon will fire only when the slide is completely in battery. When the slide is out of battery, the solid portion of the bottom of the slide presses down on the disconnecter, overcoming the force of the trigger bar detent and spring. The lug on the back of the trigger bar is then taken out of engagement with the control lever and hammer, precluding the weapon from firing. When the slide is completely in battery, the trigger bar detent and spring press upward on the trigger bar allowing the lug on the back of the trigger bar to engage the control lever and hammer. A relief cut, located on the bottom of the slide, allows the top of the disconnecter to pivot upwards. This action allows the trigger bar to engage and move the control lever upwards when the trigger is pulled and initiates the firing sequence.

4. Firing Pin Safety (All Variants)

The firing pin safety ensures that the firing pin is held stationary unless the trigger is pulled. It helps prevent accidental discharge if the firearm is dropped or mishandled. When the trigger is pulled, the trigger bar moves forward. A lug on the back of the trigger bar pivots the control lever upwards. The tip of the lever engages the bottom of the firing pin safety, located on the bottom of the slide, and overcomes the force of the firing pin safety spring. The firing pin safety is pushed upwards into the slide, allowing the firing pin to be pushed forward when struck by the hammer. If the trigger is not pulled, the firing pin safety spring pushes down on the firing pin safety, which in turn, prevents the forward movement of the firing pin.

5. Firing Pin Spring (All Variants)

The spring constantly presses upon the firing pin to help eliminate the possibility of the firing pin striking the primer when the slide goes into battery, either by chambering the first round or by subsequently shooting the firearm. Pulling the trigger releases the hammer, which swings forward with enough energy to overcome the force of the firing pin spring when striking the back of the firing pin.

6. Drop Safety (All Variants)

The drop safety tang on the back of the hammer catch blocks the forward movement of the hammer unless the trigger is pulled. When the trigger is pulled, the trigger bar moves forward and pivots the control lever and the hammer catch. As the hammer catch pivots, the sear releases the hammer (DA/SA variants) or the cocking piece (LEM variants), allowing the hammer to swing forward and strike the back of the firing pin. As the hammer catch pivots, the tang pivots downward into a relief cut on the right-hand side of the hammer. When the trigger is not pulled or the decocking lever is pushed forward, the tang on the hammer catch rides above the relief cut on the hammer, thus blocking the hammer from striking the firing pin.

7. Lock Out Device (All Variants)

When activated, the lock out device blocks the downward movement of the hammer strut which then precludes the forward movement of the hammer. The lock out device is mounted in the grip insert. The lock out device feature is engaged by inserting the two pronged key into the insert and rotating the gun lock clockwise. This action pivots the gun lock and blocks the downward movement of the hammer strut. With hammer strut frozen by the lock out device, the hammer is unable to cock, and the trigger bar is unable to move forward. When the lock out device feature is disengaged, a channel in the gun lock allows the hammer strut to pivot downward when the slide passes over the hammer or when the trigger is pulled.

SECTION 4 INSTRUCTIONS FOR USE

AMMUNITION

▲WARNING P30 pistols are designed to fire quality, brass-cased, factory-loaded ammunition loaded to NATO, SAAMI (Sporting Arms and Ammunition Manufacturers' Institute), or CIP (Permanent International Commission for the Proof of Small Arms) specifications for use, specifically in handguns. **DO NOT USE "+P+",** reloaded, remanufactured, steel cased, aluminum cased, or hand-loaded ammunition because it may not meet applicable NATO, SAAMI or CIP standards and could cause death, serious personal injury, and/or damage to your pistol and may void your warranty.

NOTICE HK specifically disclaims any responsibilities for any damage or injury that may occur because of, or as a result of, the use of faulty, remanufactured, or reloaded (hand-loaded) ammunition, or of cartridges other than those for which the pistol was originally chambered.

Consider the following guidelines when selecting the correct ammunition which meets applicable NATO, SAAMI or CIP standards for your pistol:

1. Be sure the ammunition you have chosen is compatible with your pistol: proper caliber, cartridge, bullet weight, etc. Caliber markings on P30 pistols appear on the barrel locking block, visible through the ejection port on the right side of the slide.
2. Prior to loading the magazine and chamber, carefully inspect all cartridges for any abnormalities, including, but not limited to:
 - Cracked, split, dirty, or corroded cases
 - Improperly seated projectiles and/or primers
 - Damaged projectiles
3. Do not attempt to fire a cartridge in which the projectile has been forced back into the case. Upon firing, this condition may result in increased chamber pressure above safe limits.
4. Do not fire ammunition that:
 - Is military surplus
 - Is assembled with corrosive primer and/or propellant
 - Steel or aluminum cased ammunition
 - Cast lead projectiles
 - Is exposed to oil, grease, water or direct sunlight. If possible, remove contaminants before use and cool down ammunition exposed to direct sunlight or heat. (Exposure to sources of heat could raise the chamber pressure of the cartridge above safe limits).
 - Is loaded specifically for use in submachine guns
 - Is rated as +P+

FILLING AND EMPTYING THE MAGAZINE

▲WARNING Some P30 pistols do not have a conventional manual safety and will fire if the trigger is pulled when there is a round in the chamber, even if the magazine is removed.

▲WARNING NEVER forcefully insert a loaded magazine into a pistol. This may cause the pistol slide to close, chambering a cartridge and making the pistol ready to fire. When inserting a magazine, always be sure the pistol is pointed in a safe direction (a safe direction is one in which no one can possibly be injured in the event of an unintentional discharge) with your fingers off the trigger and outside the trigger guard. Failure to do so could cause you to unintentionally fire the pistol, resulting in serious injury, death, or other damage to property.

NOTICE Do not attempt to load more than the prescribed number of cartridges into the magazine. Do not alter the shape of the magazine housing, follower or spring. To do so may cause stoppages or the magazine may not seat properly in the pistol.

Filling the Magazine

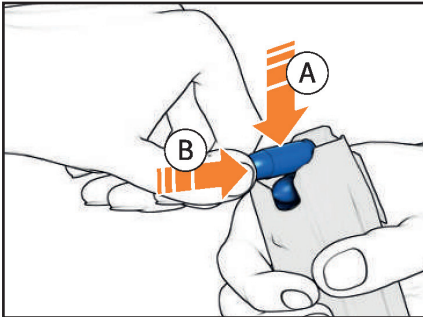


Figure 10 — Loading the magazine

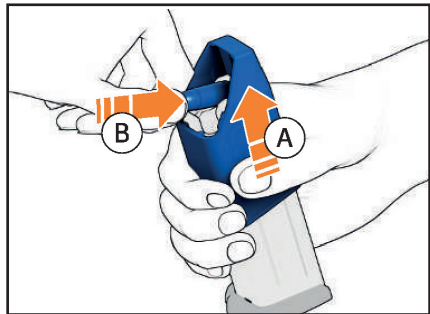


Figure 11 — Loading the magazine
(with magazine loader)

1. Hold the magazine in the non-firing hand with the back side of the magazine resting against the palm.
2. Using the firing hand, hold a cartridge between the index finger and thumb with the projectile facing the palm.
3. Press the rim of the cartridge down against the forward edge of the magazine follower or on the top cartridge already in the magazine.
4. Slide the cartridge back into the magazine under the feed lips.
5. Repeat steps 1-4 until the magazine is full. The viewing holes in the back of the magazine allow the operator to confirm the number of cartridges present within the magazine.

Emptying the Magazine - Exert pressure with a finger on the rim of the cartridge and push each cartridge forward out of the magazine one at a time until the magazine is empty.

LOADING

⚠ WARNING P30 pistols are designed to fire quality, brass-cased, factory-loaded ammunition loaded to NATO, SAAMI (Sporting Arms and Ammunition Manufacturers' Institute), or CIP (Permanent International Commission for the Proof of Small Arms) specifications for use, specifically in handguns. **DO NOT USE "+P+", reloaded, remanufactured, steel cased, aluminum cased, or hand-loaded ammunition because it may not meet applicable NATO, SAAMI or CIP standards and could cause death, serious personal injury, and/or damage to your pistol and may void your warranty.**

NOTICE HK specifically disclaims any responsibilities for any damage or injury that may occur because of, or as a result of, the use of faulty, remanufactured, or reloaded (hand-loaded) ammunition, or of cartridges other than those for which the pistol was originally chambered.

Administrative Loading - Used to initially load the pistol before it is to be fired. Slide rearward or forward, chamber EMPTY.

1. Make sure fingers are outside of the trigger guard and the pistol is always pointed in a safe direction (a safe direction is one in which no one can possibly be injured in the event of an unintentional discharge).
2. Insert magazine - Insert the magazine firmly into the frame assembly until the magazine catch engages. Tug on the magazine floorplate to ensure that it is fully seated and engaged.
3. Chamber a cartridge - Chamber a cartridge by depressing the slide release or by pulling the slide fully to the rear and releasing it. Do not ride the slide forward. Let it go forward from the force of the recoil spring.

P30 pistols are test-fired for accuracy by ensuring the point of aim equals the point of impact at 25 meters (27.3 yards) with 124 grain ammunition. Individual results concerning accuracy and/or shot placement are affected by such factors as stance, grip, ammunition, and engagement range.

SIGHTS AND AIMING

The P30 is equipped with a three-dot sighting system, like those first introduced by HK on the P7 series pistol in the 1970s. The sights are adjustable for windage by drifting. Sights are installed and aligned by HK technicians at the factory. Figure 14 shows correct sight alignment, generally for the P30 series it is a "US Center" hold. Figure 15 shows common sight errors.

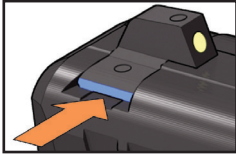


Figure 12 — Adjusting front sight by lateral shifting

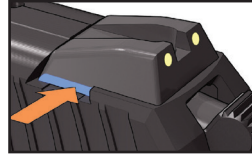


Figure 13 — Adjusting rear sight by lateral shifting

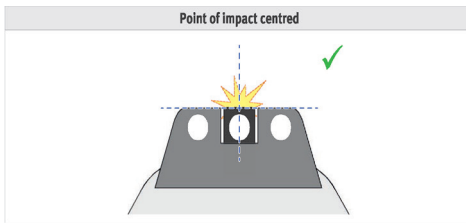


Figure 14 — Correct sight alignment

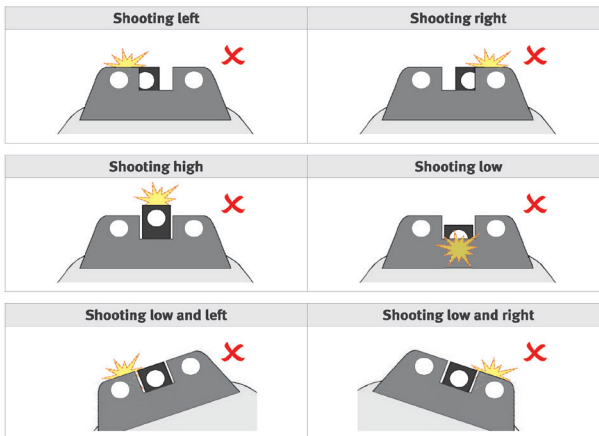


Figure 15 – Common sight alignment errors

FIRING

▲WARNING ALWAYS be sure of your target and what is behind it! A bullet from a pistol can travel as far as 2 miles. It can easily penetrate wood, plasterboard walls, or even a car door. ALWAYS be sure that your backstop is adequate to stop and contain bullets before firing so that you do not hit anything outside of the shooting range area.

▲WARNING NEVER shoot at a hard surface, such as a rock, or a liquid surface, such as water, because a bullet may ricochet and travel in any direction, striking you or someone else. If in doubt, do not shoot.

▲WARNING ALWAYS be sure that the barrel of your pistol is clear of obstructions before firing. If any obstruction is found, remove it – including any excess lubricants – before firing so that your pistol will function safely and correctly. Any obstruction in the barrel could prevent the pistol from firing properly and result in death or serious personal injury, and/or damage to the pistol.

▲WARNING NEVER use your P30 pistol if it fails to function properly, and never force the slide closed on a jammed cartridge because it could cause the cartridge to explode.

▲WARNING ALWAYS wear adequate eye protection when firing the pistol. Eye protection should, at a minimum, provide impact protection with side panels and meet ANSI standard Z87.1. Unprotected eyes can be injured by fragments expelled from the pistol, ejected cartridge cases, ruptured cartridge cases, splash back from targets, target frames, or backstops.

▲WARNING ALWAYS wear adequate commercially manufactured ear protection when firing the pistol. Unprotected exposure to gunshot noise can cause tinnitus and/or permanent hearing loss.

▲WARNING Your P30 pistol may not have a conventional manual safety and it will fire if the trigger is pulled when there is a round in the chamber, even if the magazine is removed.

▲WARNING Hot gasses and powder are forcefully expelled from your pistol when it is fired. ALWAYS be sure that your hands and all parts of your body are kept away from the muzzle of your pistol.

▲WARNING ALWAYS ensure that a responsible and competent person is placed in charge to maintain safety, discipline, and control when a group is firing at a range, to reduce the likelihood of a negligent discharge.

▲WARNING ALWAYS carry your pistol unloaded with the slide locked open in the rearward position while on a range until preparing to fire. Always keep the pistol pointed toward the backstop when loading, firing, and unloading.

▲CAUTION When ready to fire, be sure that the area behind the slide is clear, including your thumb, and do not hold the pistol near your body, because the slide will move forcefully rearward when the pistol is fired. When firing with a two-handed grip, the thumb of the weak hand should be on the weak hand side of the pistol, never behind the slide.

▲CAUTION ALWAYS keep yourself and others clear of the ejection port because spent cartridges are hot and are ejected with enough force to cause injury. NEVER touch the slide or barrel immediately after firing, because they may be hot and could cause burns.

⚠ CAUTION NEVER place your fingers in the ejection port, other than when the slide is locked in the fully rearward position and you are checking to ensure that the chamber is empty. Your fingers could be injured by the movement of the slide.

⚠ CAUTION NEVER fire your pistol near an animal unless it is trained to accept that noise. An animal's startled reaction could injure it or cause it to injure you or someone else.

1. Acquire the proper sight alignment and sight picture (see Figure 14).
2. Control breathing.
3. Gradually squeeze the trigger straight to the rear while attempting to avoid disruption to the sight picture and alignment.
4. Practice good follow-through techniques by maintaining proper sight picture and trigger squeeze until after the firearm has discharged and cycled fully.

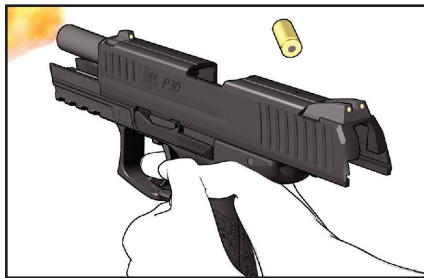


Figure 16 — Two-handed grip with trigger finger on the trigger, sights aligned and ready to fire

TRIGGER VARIANTS

P30 Series pistols with a Law Enforcement Modification (LEM) enhanced Double Action Only trigger mode (V1 and V2) are partially cocked after a round is chambered or after a round is fired. This results in a constant trigger pull (Figure 17).

P30 models with the Double Action/Single Action (DA/SA) trigger mode (Figure 18) are cocked after a round is chambered or after a round is fired. This results in a light trigger pull. If a cocked pistol is decocked using the decocking lever, then the trigger pull becomes heavier because the weapon has to be fired in Double Action mode on the next round. Alternatively, the weapon can also be cocked again manually.

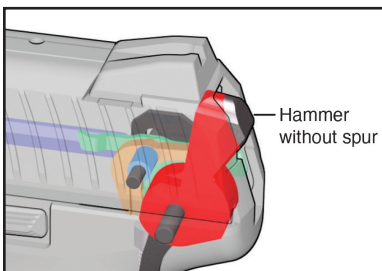


Figure 17 — LEM firing mode

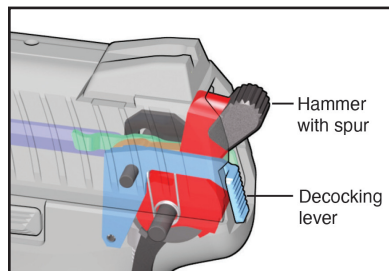


Figure 18 — V3 DA/SA firing mode

SELECTION AND USE OF A HOLSTER

Selection - When selecting a holster for the P30 pistol, it is important to consider the following points:

1. The holster must not make contact with any of the operating controls. This includes the slide release, magazine release, and the trigger. The design of the holster must also not actuate these controls when the pistol is carried in, drawn from, or returned to the holster.
2. The holster should not cause the slide to move (unlock) when the pistol is returned to the holster.
3. Accommodations must be provided in the holster for any accessories that might be present on the pistol.
4. Choose a holster designed specifically for a P30 pistol.

Returning the pistol to the holster - The P30 pistol must be returned to the holster in a safe manner, ensuring there is no obstruction or material that could enter the trigger guard.

▲CAUTION The pistol must never be returned to the holster unless the above procedures have been followed or serious injury or death or other damage to property could occur.

UNLOADING AND SAFETY CHECK

▲WARNING The firearm is not **EMPTY** or unloaded until the magazine is removed and the chamber is **CLEAR**. It is possible that a cartridge may be in the chamber when a magazine is being removed from or inserted into your pistol. A cartridge in the chamber will discharge when the trigger is pulled, whether or not a magazine is in your pistol. **NEVER** leave your pistol unattended, even when the magazine is removed. You must **ALWAYS** verify that the chamber is empty before disassembling your pistol for cleaning or any other purpose.

▲WARNING If an unfired cartridge hangs up, jams, or binds while being chambered, do not attempt to force it into the chamber by pushing or striking the slide to attempt to close it because this could cause the cartridge to burst, which can result in fragments of the cartridge flying out of the ejection port with sufficient force to cause death, serious personal injury, and/or property damage.

▲WARNING **ALWAYS** wear safety glasses when clearing your pistol to protect your eyes and turn the pistol's ejection port away from you. Eye protection should, at a minimum, provide impact protection with side panels and meet ANSI standard Z87.1. Do not use a metal tool to attempt to remove an unfired cartridge because it could ignite the primer and cause the cartridge to rupture resulting in fragments of the cartridge flying out of the ejection port with sufficient force to cause death, serious injury, and/or property damage.

▲WARNING **NEVER** rely solely on a mechanical device or your memory to determine whether your pistol is loaded. **ALWAYS** remove the magazine, retract and lock the slide by pulling it fully to the rear and locking it open, and then visually and physically check with your finger to ensure there is not a cartridge in the chamber.

The slide on the P30 pistol is locked back after the last round is ejected from the pistol. The magazine follower engages a tab located on the inside of the left-hand slide release. As the slide release is pivoted upwards, the back of the release engages a cut-out on the bottom of the slide and locks the slide to the rear.

The magazine can then be removed by depressing either side of the ambidextrous magazine release. Both a visual and a physical (with your finger) inspection should be performed on the chamber/ feed ramp area to ensure the pistol is unloaded.

If the operator wishes to cease firing and unload the firearm before the last round in the magazine is fired, the standard clearing procedure for the P30, detailed below, should be completed.

CLEARING AND SAFETY CHECK PROCEDURE

- 1. Set the Safety Lever to safe. (if applicable)** Ensure the safety lever is engaged.
- 2. Point the muzzle of the P30 pistol in a safe direction.** Ensure the muzzle of the P30 is pointed in a safe direction and that the operator's finger is off the trigger and outside the trigger guard.
- 3. Remove the magazine.** Depress either side of the ambidextrous magazine release. Remove the magazine from the magazine well.
- 4. Open and lock the slide to the rear.** Grasping the rear serrations, rack the slide to the rear while keeping the muzzle pointed in a safe direction. Push upwards on either side of the ambidextrous slide release and lock the slide to the rear. Watch for a cartridge or empty case to be ejected out through the ejection port.

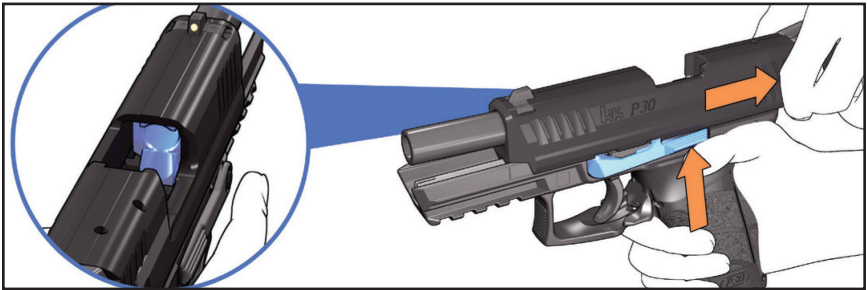


Figure 19 — Clearing the P30 pistol

5. Inspect the chamber.

Inspect the chamber for the presence of a cartridge or empty case by:

1. Visually inspecting the chamber through the open ejection port.
2. Insert a finger through the ejection port and sweep the chamber and feed ramp area.
3. Removing any cartridges or empty cases from the chamber or from within the P30.

SECTION 5 DISASSEMBLY AND ASSEMBLY

▲WARNING The firearm is not empty or unloaded until the magazine is removed and the chamber is clear. It is possible that a cartridge may be in the chamber when a magazine is being removed from or inserted into your pistol. A cartridge in the chamber will discharge when the trigger is pulled, whether or not a magazine is in your pistol. Never leave your pistol unattended, even when the magazine is removed. You must always verify that the chamber is empty before disassembling your pistol for cleaning or any other purpose.

▲WARNING Unload all magazines and remove all live ammunition from the area before disassembling your pistol to reduce the chance of a negligent discharge.

▲WARNING Never rely solely on a mechanical device or your memory to determine whether your pistol is loaded. Always remove the magazine, retract and lock the slide by pulling it fully to the rear and locking it open, and then visually and physically check with your finger to ensure there is not a cartridge in the chamber.

▲WARNING Never alter or modify your P30 pistol because this could cause it to malfunction and create a dangerous condition.

▲WARNING Always wear safety glasses when disassembling your pistol to protect your eyes. Eye protection should, at a minimum, provide impact protection with side panels and meet ANSI standard Z87.1. Components, such as springs, are under pressure and could cause serious injury.

DISASSEMBLY

1. Conduct the CLEARING AND SAFETY CHECK PROCEDURE located in Section 4.
2. With the magazine removed, pull the slide (A) all the way back and hold it there (see Figure 20).
3. Push the slide release (B) upwards to lock slide back.

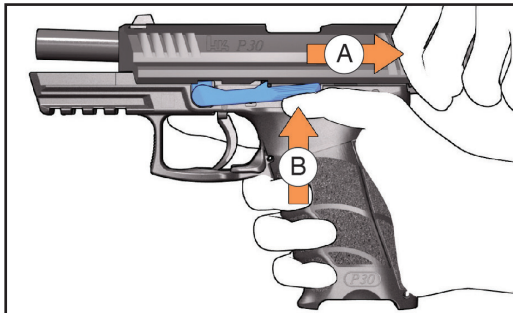


Figure 20 — Pull the slide back and lock it

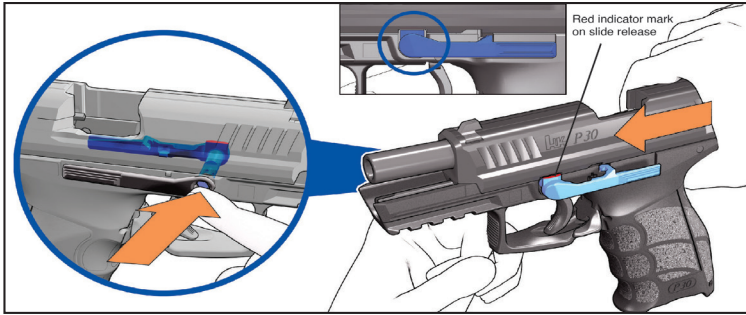


Figure 21 — Removing slide from frame by pushing it forward

4. Hold the pistol so that your thumb covers the rear of the frame and your fingers rest on the top of the slide.
5. Pull slide back and move it forward as far as the disassembly position (Figure 21).
6. Using your free hand, press the slide release axle in from right to left (Figure 21).
7. Pull the slide release to the left until it reaches the locking position. A red painted area on the top of the part will be exposed, indicating the part is in its outermost position. Pull the slide forward off the pistol's frame (Figure 22).
8. Turn the slide upside down and carefully push the recoil spring forward, up, and out to either the left or right side, separating the recoil spring from the barrel and slide (see Figure 23).
9. Pivot the barrel slightly forward and press upward on the barrel through the ejection port, separating the barrel from the slide.

NOTICE The left-hand slide release is captured by the slide when the pistol is assembled. It cannot be completely removed from the frame during field stripping. It is retained by right leg of the trigger spring.

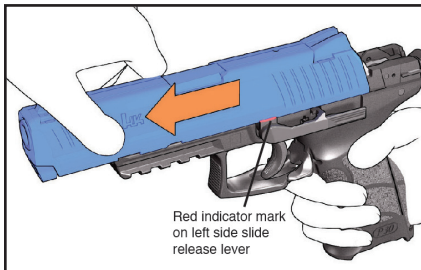


Figure 22 — Removing the slide

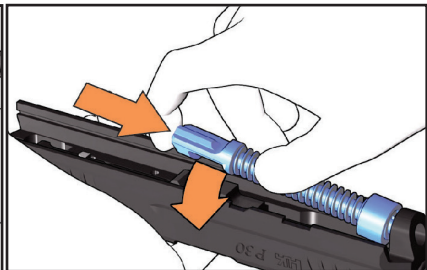


Figure 23 — Removing the recoil spring

NOTICE Assembly of the pistol is now complete. Only an HK certified armorer should disassemble the pistol further.

ASSEMBLY

1. Turn the slide upside down and insert the barrel into the slide with the barrel angular camming surface facing upwards.
2. Pivot the barrel back towards the rear until the barrel locking block snaps into the slide ejection port.
3. Insert the front of the recoil spring into the tang on the slide that extends above the muzzle.
4. Push the recoil spring forward into position, compressing the recoil spring, then pivot the back of the recoil spring guide rod onto the stepped mounting surface located on the front of the barrel camming lug (see Figure 26). Ensure the front of the recoil spring is facing forward in the slide.

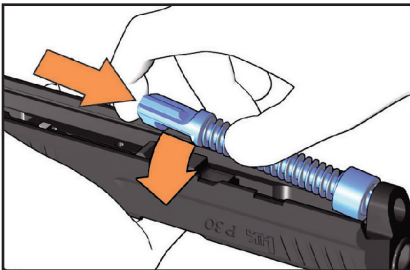


Figure 24 — Reassembling the recoil spring onto the barrel and side

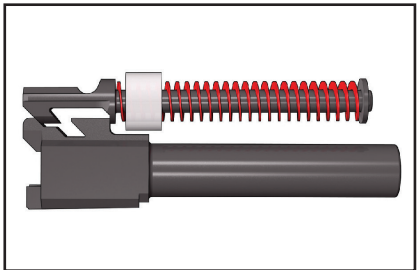


Figure 25 — Relationship of barrel to recoil spring assembly

5. Ensure that no magazine is present in the magazine well and that the left slide release is in the outward or locked position.
6. Mount the slide onto the frame, ensuring that the recoil spring is centered underneath the barrel, and that the rails on the frame are inserted into the grooves in the bottom of the slide (see Figure 26).

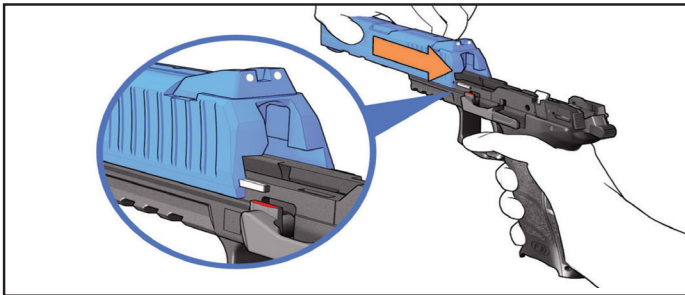


Figure 26 — Mounting the slide on the frame

7. Pull slide back as far as the disassembly (notch) position and hold it there.
8. Press slide release into the frame from the left.
9. Perform a FUNCTION CHECK.

NOTICE Assembly of the pistol is now complete. CLEAR the pistol and check it for correct assembly and operation. Be sure the slide moves freely on the frame and with the pistol cleared and pointed in a safe direction, ensure all controls operate correctly. As applicable, check double-action only mode, slide release, and the magazine release.

CAUTION A Function Check should be performed every time the pistol has been disassembled.

FUNCTION CHECK

It is essential that a function check be performed on the P30 pistol after reassembly to ensure that the firearm's components have been correctly installed.

LEM:

1. Conduct the CLEARING AND SAFETY CHECK PROCEDURE located in Section 4.
2. Ensure magazine is removed from the frame and rack the slide in quick succession about three to four times; the slide, although under tension from the recoil spring, should smoothly move back and forth on the frame without binding or locking. Return the slide forward (in battery).
3. With an unloaded P30 and the muzzle in a safe direction, pull the trigger and dry fire the P30. The hammer shell should pivot forward to contact the firing pin. Continue to hold the trigger back to the rear and rack the slide and release. Release the trigger and allow the hammer shell to reset in the LEM mode.
4. Pull the trigger again and the hammer shell should pivot forward and strike the firing pin.
5. With the slide forward seated in battery, insert an empty magazine in the magazine well. Pull back the slide and the slide should lock to the rear on an empty chamber. Push downward on either the left or right slide catch and the slide should return to battery (fully seated forward).

DA/SA (with Decocker):

1. Conduct the CLEARING AND SAFETY CHECK PROCEDURE located in Section 4.
2. Ensure magazine is removed from the frame and rack the slide in quick succession about three to four times; the slide, although under tension from the recoil spring, should smoothly move back and forth on the frame without binding or locking. Return the slide forward (in battery).
3. With an unloaded P30 and the muzzle in a safe direction, pull the trigger and dry fire the P30. The spurred hammer should pivot forward to contact the firing pin. Continue to hold the trigger back to the rear and rack the slide and release. Release the trigger and allow the spurred hammer to reset in the cocked single action (SA) mode.
4. Depress the decocking button on the left side of the frame next to the hammer. The spurred hammer should pivot forward but must not contact the firing pin. The spurred hammer is now in the double action (DA) mode. Pull the trigger again and the spurred hammer should pivot rearward, towards the shooter becoming "cocked" before releasing and striking the firing pin.

INSTALLATION OF THE BACKSTRAPS AND GRIP PANELS

▲ WARNING Make sure that the firearm is **CLEAR** (magazine removed and chamber empty) before changing backstraps or frame assembly.

▲ WARNING **ALWAYS** wear safety glasses when disassembling your pistol to protect your eyes. Eye protection should, at a minimum, provide impact protection with side panels and meet ANSI standard Z87.1. Components, such as springs, are under pressure and could cause serious injury.

1. Using a 2.8 mm (or 7/64") pin punch, remove the pin holding the backstrap in position. Choose the combination of backstrap and grip panels that provide the most comfortable fit for the operator (see Figure 27).

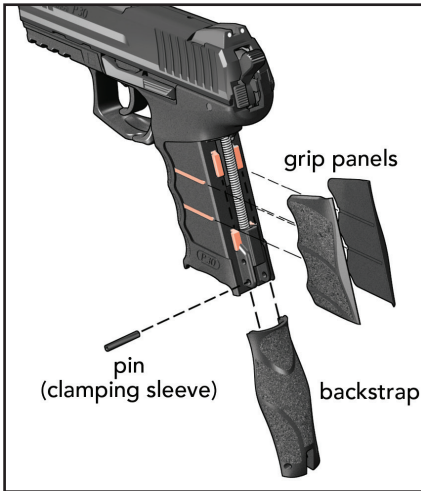


Figure 27
Installing backstrap
and grip panels

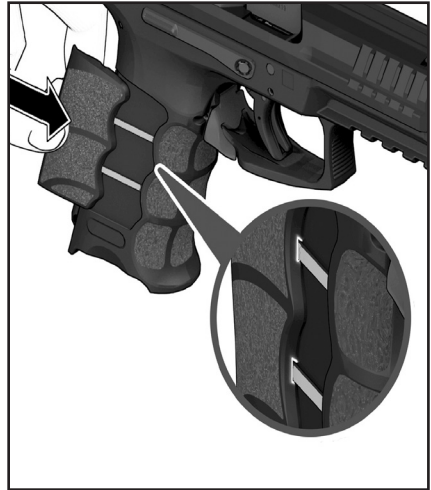


Figure 28
Push the grip panels forward
onto the guide rails on the frame

2. Install the two grooves on the inside of each grip panel onto the corresponding guide rails located on the outside of the frame (see Figure 28) and push the panels forward until they seat flush into the frame.
3. Seat the backstrap onto the back of the frame and push upwards until the mounting surface for the pin on the backstrap aligns with the mounting surface for the pin on the frame.
4. Drift the pin into position with a pin punch to capture the backstrap to the frame.

MAGAZINE DISASSEMBLY

▲WARNING Unload the magazines and remove all live ammunition from the area before disassembling your magazine.

▲WARNING Be aware of the force exerted by the magazine spring while removing and installing the magazine floorplate. Always keep the base of the magazine pointed away from the face and eyes of yourself and others. Always wear safety glasses when disassembling your pistol to protect your eyes. Eye protection should, at a minimum, provide impact protection with side panels and meet ANSI standard Z87.1. Components, such as springs, are under pressure and could cause serious injury.

▲CAUTION The P30 pistol uses readily available pistol magazines, either 20, 17, 15, or 10-round capacity (9 mm) or 13, 10-round capacity (.40 caliber). P30SK models use smaller housing magazines but can also be used with the larger capacity magazines, i.e., with the magazine extending below the grip frame.

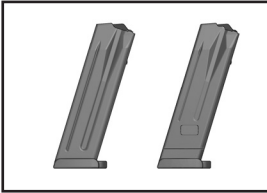


Figure 29
17, 15, 13, and 10-
round magazines

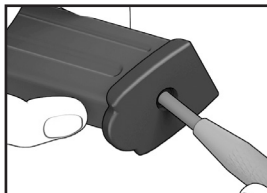


Figure 30
Depressing
locking plate in floorplate

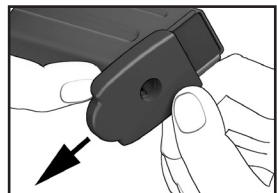


Figure 31
Slide the floorplate
forward

Disassembly of high-capacity magazines

1. Using a punch, depress the locking plate located in the floorplate and hold it there. (see Figure 30).
2. Place a portion of either hand over the base of the magazine to control the release of the spring and locking plate.
3. Slowly slide the floorplate forward off the magazine housing (see Figure 31).
4. Gradually allow the locking plate and spring to expand out of the magazine housing (see Figure 32).
5. Remove the locking plate, magazine spring, and follower from the magazine housing.

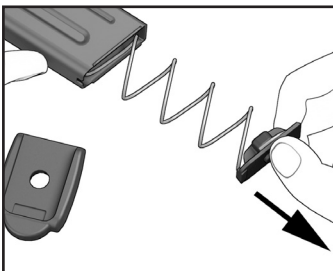


Figure 32
Removing locking plate and spring

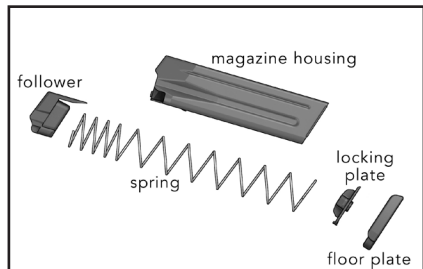


Figure 33
15-round magazine components

Disassembly of 10-round magazine

1. Using a punch, depress the locking plate located in the floorplate and hold it there (see Figure 34).
2. Place a portion of either hand over the base of the magazine to control the release of the spring and locking plate.
3. With the locking plate still depressed, squeeze the locking tabs located on the right and left sides of the floorplate (see Figure 35).

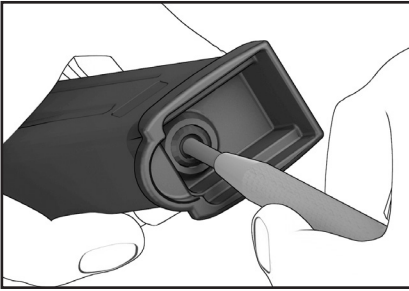


Figure 34
Depress locking plate

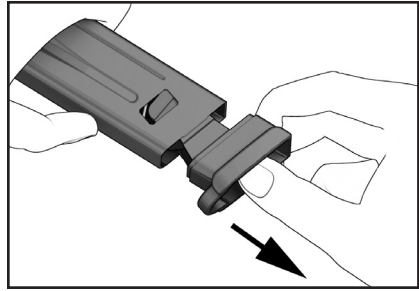


Figure 35
Releasing magazine components

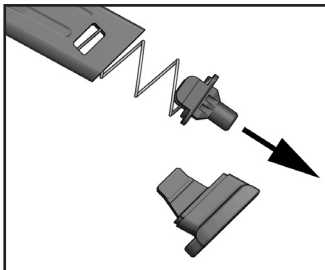


Figure 36
Removing the locking floor plate
and spring

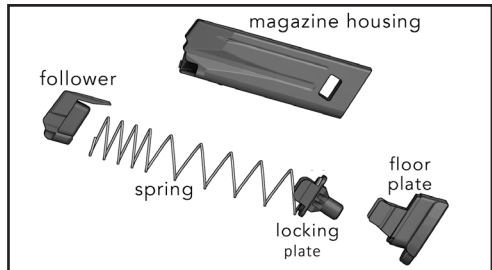


Figure 37
10-round magazine components

4. Gradually allow the locking plate and magazine spring to expand out of the magazine body (see Figure 36).
5. Remove the locking plate, magazine spring, and magazine follower from the magazine body. Figure 37 shows all the magazine components for 10-round magazines.

MAGAZINE ASSEMBLY

▲WARNING Be aware of the force exerted by the magazine spring while removing and installing the magazine floorplate. **ALWAYS** keep the base of the magazine pointed away from the face and eyes of yourself and others. **ALWAYS** wear safety glasses when disassembling your pistol to protect your eyes. Eye protection should, at a minimum, provide impact protection with side panels and meet ANSI standard Z87.1. Components, such as springs, are under pressure and could cause serious injury.

NOTICE Magazine springs and followers are optimized for their specific capacity. Ensure magazines are reassembled with the correct capacity-specific components. Using incorrect components for the stated magazine capacity may result in malfunctions. Example: do not install the 10 round spring or follower inside a larger capacity magazine.

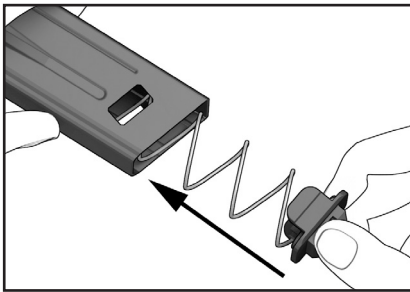


Figure 38
Insert the follower, spring, and
locking floor plate

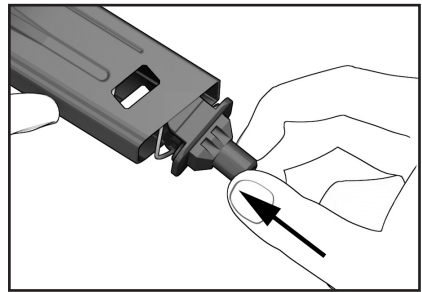


Figure 39
Push the locking plate above the
cutouts

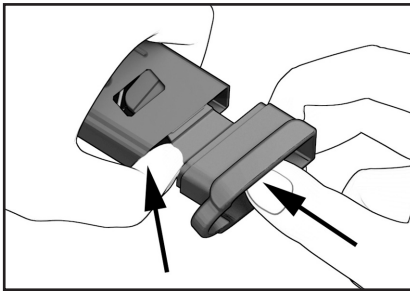


Figure 40
Insert the floorplate into the
magazine body

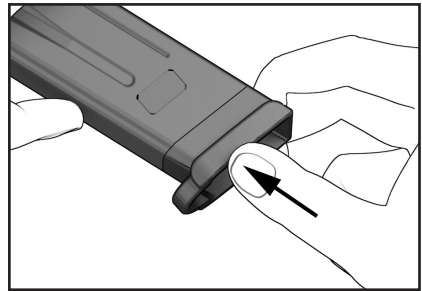


Figure 41
Ensure the tabs on the floorplate
seat onto the cutouts

1. Place the magazine follower onto the magazine spring with the end of the spring positioned on the left of the follower.
2. Insert the follower and magazine spring into the magazine housing as depicted in Figure 38.

3. Place the locking plate (locking insert) onto the protruding end of the magazine spring so that the rounded corners face toward the front of the magazine.
4. Push the locking plate into the magazine housing against the pressure of the magazine spring and hold it there. (Figure 39)
5. On 10-round magazines, push the floorplate up onto the base of the magazine housing until the locking tabs engage in the sides of the housing. (Figure 40)
6. Check to see if the locking tabs on the floorplate are securely locked into the housing and the locking plate fits within the hole in the floorplate. (Figure 41)

On all magazines, check the magazine for proper assembly by ensuring that the follower slides up and down freely within the magazine body and with spring force. Also check that the follower rises within the magazine body to be nearly flush against the bottom of the feed lips.

SECTION 6 CLEANING & MAINTENANCE

CLEANING

▲WARNING ALWAYS be sure that the barrel of your pistol is clear of obstructions before firing. If any obstruction is found, remove it – including any excess lubricants – before firing so that your pistol will function safely and correctly. Any obstruction in the barrel could prevent the pistol from firing properly and result in death or serious personal injury, and/or damage to the pistol.

▲WARNING The firearm is not EMPTY or unloaded until the magazine is removed and the chamber is CLEAR. It is possible that a cartridge may be in the chamber when a magazine is being removed from or inserted into your pistol. A cartridge in the chamber will discharge when the trigger is pulled, whether or not a magazine is in your pistol. NEVER leave your pistol unattended, even when the magazine is removed. You must ALWAYS verify that the chamber is empty before disassembling your pistol for cleaning or any other purpose.

▲WARNING ALWAYS wear safety glasses when cleaning your pistol to protect your eyes from cleaning solutions and components, such as springs, which are under pressure and could cause injury. Eye protection should, at a minimum, provide impact protection with side panels and meet ANSI standard Z87.1. Exercise caution if using compressed air.

▲WARNING ALWAYS ensure that no ammunition is in the area where you clean your pistol. Lubricants can affect the primer and powder in ammunition and cause it to malfunction. This could result in failure to fire, or in a bullet being pushed into the barrel of your pistol and becoming stuck, which could cause the barrel to burst and result in death or serious injury, in addition to damaging the pistol.

▲WARNING Do not alter any of the parts or components of the pistol or magazine, e.g., do not attempt to “improve” or make the pistol “better” by altering parts or components. Altering any parts or components of the pistol or magazine may cause serious injury or death, damage to the pistol, or other damage to property, and voids its warranty.

▲WARNING As with any semi-automatic pistol, your P30 should be disassembled into its major components every time it is cleaned. Failing to do so, by merely locking the slide to the rear and inserting the cleaning rod from the muzzle, can cause dirt, oil, and lubricant to build up inside the pistol causing malfunctions.

▲WARNING Do not use a steel bore brush which can scratch the polygonal bore and reduce accuracy.

▲WARNING Use of ultrasonic cleaning machines can result in the unwanted removal of colored reference markings of the frame assembly, extractor and control lever (where applicable). Use of ultrasonic cleaning is normally not necessary or recommended when using standard ammunition in HK pistols. All components should be thoroughly dried after being coated in cleaning solutions of any kind before reassembly and all the firearm critical components should be lubricated in accordance with the applicable operator/maintenance instructions after being thoroughly dried.

Materials Required - At a minimum, HK recommends the following materials to properly clean a P30 Series pistol:

- Cleaning rod with handle and patch holder
- Nylon toothbrush
- Bronze bristle bore brush (in appropriate caliber)
- Cleaning patches (in appropriate caliber)
- Lint-free wiping rag
- Cleaning solution/lubricant
- Cotton swabs

Handgun cleaning kits are available from HK for thorough cleaning of pistols and other firearms. Visit the HK-USA web shop or contact HK Customer Service at 706-701-5554 or by email at cs@heckler-koch-us.com.

Cleaning Intervals - Normal and Major are the two types of operator cleaning for the P30 pistol.

Normal Cleaning - Performed after each firing or every twelve (12) months, whichever comes first.

Major Cleaning - Often referred to as "detailed cleaning." Performed after the firing of 600 cartridges or when the pistol is exposed to, or contaminated with:

- Sand
- Dust
- Water (especially saltwater)
- Other visible contaminants or foreign matter.

Normal Cleaning

Slide

- Gently scrub all internal surfaces of the slide using the nylon toothbrush moistened with cleaning solution.
- Remove all loose fouling from all surfaces of the slide using a rag and cotton swabs.

Recoil spring assembly

- Remove all visible fouling using cleaning solution, a nylon toothbrush or a rag and cotton swabs.

Barrel

- Moisten a bronze bore brush with cleaning solution and scrub the bore from the chamber to the muzzle with at least six (6) passes, back and forth.
- Remove the loose fouling from the bore using cleaning patches.
- Gently scrub the exterior of the barrel and locking block with the nylon toothbrush moistened with cleaning solution.
- Remove all loose fouling from the exterior of the barrel using a rag and cotton swabs.

Frame Assembly

- Gently scrub surfaces where carbon fouling is present using the nylon toothbrush moistened with cleaning solution. Concentrate on the area normally covered by the slide and the unlock block area that interfaces with the barrel.
- Remove all loose fouling from all areas of the frame assembly using a rag and cotton swabs.

Magazine

- Gently scrub the top of the magazine, concentrating on the follower and feed lips, using the nylon toothbrush moistened with cleaning solution.
- Remove all loose fouling from all surfaces of the magazine using a rag and cotton swabs.

Major Cleaning - Major Cleaning is the same as normal cleaning except that:

- The magazine is disassembled for cleaning, following the instructions and warnings in Section 5.
- All parts should be rinsed with or immersed in cleaning solution and thoroughly scrubbed with a nylon brush. The parts can then be dried using compressed air or with a rag and cotton swabs.

INSPECTION

During and after cleaning, visually inspect the pistol and its components for any irregularities that may cause problems or stoppages during operation. Generally, you should keep a watchful eye out for the discrepancies listed below. (See Function Check in Section 5)

Always CLEAR the pistol before conducting your inspection!

Check for:

- Damaged or missing parts
- Improper assembly or function
- Absence of free movement, where applicable
- Absence of spring force, where applicable
- Unaccustomed looseness
- Parts exhibiting signs of cracks, burrs, dents, or obvious signs of damage or stress
- Presence of stops or tactile clicks, where applicable
- Presence of corrosion or degradation of surface finish
- General overall cleanliness
- Presence of sufficient lubrication

LUBRICATION

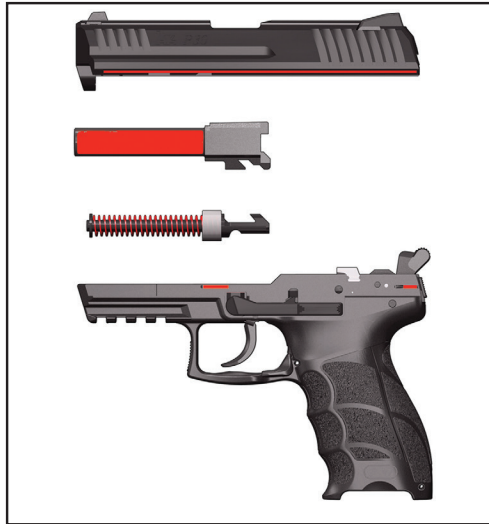


Figure 42 — Lubrications Points (in red)

The surfaces of the P30 pistol are treated with corrosion- and wear-resistant finishes. These surface treatments do not completely reduce the friction between moving parts, and it is recommended that a lubricant be applied to the pistol to ensure proper functioning. Any type of high-quality, medium-weight lubricant (oil) specifically designed for use on firearms will work well on a P30 pistol. Do not use lubricants that boast of their ability to penetrate metal as these substances may deaden primers. Figure 42 shows areas on the pistol requiring particular attention to lubrication.

Where and How Much -

No Lube - Surface is dry and not slippery to the touch.

- All plastic and rubber components
- Ammunition
- Electronics (lights and optics)

Light Lube - A finger run across the surface yields little or no lube.

- Exterior of barrel
- All metal parts
- All internal parts in slide and frame
- Magazine spring
- Recoil spring assembly
- P30 pistol metal magazine housing, where applicable

Medium Lube - A finger run across the surface yields some lube, but lube does not run down surface when it is held in a vertical position.

- Barrel locking block
- Slide rails and grooves
- All operating controls
- Frame guide rails
- Extractor
- Firing Pin Safety

Heavy Lube - Lubrication runs down the surface when it is held in a vertical position.

No heavy lube is required on P30 pistols.

Re-apply lubricant periodically during firing as it burns off from the heat. Apply lubricant using a cleaning brush, cotton swabs, patches, or a rag. A spray bottle of lubricant also works well when using compressed air to circulate the lubricant into all parts and to remove the excess from the pistol.

STORAGE AND TRANSPORT

▲WARNING The firearm is not **EMPTY** or unloaded until the magazine is removed and the chamber is **CLEAR**. It is possible that a cartridge may be in the chamber when a magazine is being removed from or inserted into your pistol. A cartridge in the chamber will discharge when the trigger is pulled, whether or not a magazine is in your pistol. **NEVER** leave your pistol unattended, even when the magazine is removed. You must **ALWAYS** verify that the chamber is empty before disassembling your pistol for cleaning or any other purpose.

▲WARNING Firearms should be locked and stored unloaded, secured, and separately from ammunition in a suitable container out of the sight and reach of children and/or any unauthorized individuals.

▲WARNING **NEVER** store or transport ammunition in the same container as your pistol.

▲WARNING **NEVER** rely solely on a mechanical device or your memory to determine whether your pistol is loaded. **ALWAYS** remove the magazine, retract and lock the slide by pulling it fully to the rear and locking it open, and then visually and physically check with your finger to ensure there is not a cartridge in the chamber.

1. Store or transport the pistol and its components clean and lubricated.
2. Store and transport the pistol without cartridges in the chamber, magazine, or in the storage container with the magazine removed.
3. Store and transport the pistol with the slide in the forward (closed) position.
4. Clean and lubricate the pistol and its components at least every twelve (12) months during storage.
5. HK recommends storage in a climate controlled, room temperature environment.
6. Store the pistol and ammunition separately under lock and key.

TROUBLESHOOTING PROBLEMS AND REPAIR

Common causes of problems that are often overlooked include:

- Fouled or improperly lubricated pistol
- Bad ammunition
- Damaged magazines
- Operator error

SECTION 7 LOCK-OUT DEVICE

P30 Series pistols are equipped with a patented HK Lock-Out™ device. This component is located inside the magazine well, in the bottom of the frame. When engaged, it locks the pistol's action by blocking any movement of the trigger, the hammer, and the slide. The pistol is locked and cannot fire until unlocked. The Lock-Out control plate is accessible through the pistol's magazine well (see Figure 43).



Figure 43

Turning the key clockwise 1/4 turn locks the action, turning it counterclockwise unlocks the action.

Clear the pistol and dry fire it prior to activating the Lock-Out device. Use the two pronged key supplied with the pistol to lock or unlock the pistol as desired. When the holes on the Lock-Out device are horizontally positioned, the pistol is locked and cannot be fired (see Figure 44).



Figure 44
Locked position



Figure 45
Unlocked/fire position

When the holes on the Lock-Out device are vertically positioned, the pistol is unlocked and can be fired (see Figure 45).

▲WARNING The HK Lock-Out device is not a substitute for safe gun handling practices. Never point the muzzle of the pistol in an unsafe direction (at yourself or others). When the Lock-Out device is placed in the locked position, the slide is locked in the closed position and cannot be moved! Forcing the slide rearward while the Lock-Out device is in this locked position will damage the pistol.

SECTION 8 P30 ACCESSORIES

RAIL MOUNTED ACCESSORIES

All P30, P30L, and P30SK models have MIL-STD-1913 (Picatinny-style) rails molded into the front, lower portion of their frame (dust cover). This rail allows the operator to mount a wide variety of lights, lasers aimers, and additional accessories to the handgun by means of the simple and proven Picatinny-style interface system (see Figure 46, 47, 48).



Figure 46 — Accessory weapon light mounted on P30



Figure 47 — Accessory weapon light mounted on P30SK

To avoid damage to the accessory and the P30 pistol, carefully follow the instructions of the manufacturer for installing, operating, and removing accessories from the mounting rails. Always ensure the P30 pistol is "CLEAR" and unloaded before installing or removing accessories. Conduct the CLEARING AND SAFETY CHECK PROCEDURE located in Section 4.

CAUTION Weight of any frame (dust cover) mounted accessories should not exceed 5.64 ounces (160 grams) to ensure reliable function.

Most lights, laser aimers, and similar accessories are installed by attaching them onto the front of the rail system while depressing a locking mechanism or clipping them on from the bottom. Again, follow the installation instructions of the accessory manufacturer. If encountering difficulty, please contact HK Customer Service at 706-701-5554 to avoid damage to the pistol or the accessory.

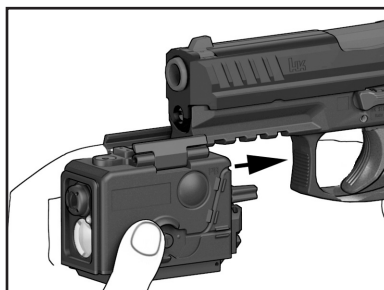


Figure 48 — Installing accessory onto the rails

⚠ CAUTION Improperly designed or installed accessories may result in damage to the rail system and/or the pistol. Such damage is not covered under warranty. Be certain to use only HK approved accessories and follow installation and precautions carefully.

Threaded barrels (9mm only) are available for the service-sized 9mm P30 and 9mm long slide P30L. They can be easily installed in P30, P30S, P30L, and P30LS models. These barrels will not fit P30SK models.

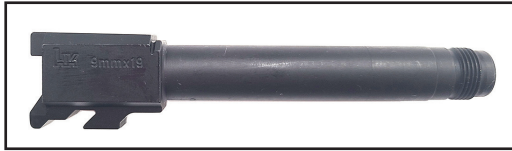


Figure 49
P30 - 4.4 IN M13.5x1 LH Thread (HK ID# 234391)
P30L - 5 IN M13.5x1mm LH thread (HK ID# 229792)

MAGAZINE LOADER AND OTHER ACCESSORIES

An HK pistol magazine loader is also available as an accessory. The magazine loader (HK article number 217 830) makes loading of all P30 magazines easier and more convenient. Different capacity P30 magazines are also available, as are various sights, including tritium night sights.



Figure 50 — HK magazine loader for the P30

SECTION 9 WARRANTY

WARRANTY REGISTRATION

New HK firearms are covered by Heckler & Koch, Inc.'s Limited Lifetime Warranty. Warranty registration is now online. To register your new HK firearm, go to: <https://hk-usa.com/warranty/registration/>

If you do not have access to the Internet, contact Heckler & Koch, Inc. to obtain a warranty registration form:

HK Customer Service
5675 Transport Boulevard
Columbus, GA 31907
Telephone: 706-701-5554.
Email: cs@heckler-koch-us.com

HECKLER & KOCH, INC. LIMITED LIFETIME WARRANTY

All new Heckler & Koch, Inc. firearms purchased after January 1, 1998, are warranted to the original retail purchaser only for the lifetime of the said original retail purchaser. In the event that this original retail purchaser, at the time of the original purchase, shall donate this firearm to another person, the donee name must be submitted during the online warranty registration. Heckler & Koch, Inc. does not guarantee or warrant that any, all, or some donations or gifts are valid and compliant with all applicable laws, regulations, and ordinances. Heckler & Koch, Inc. is not responsible or liable in any way for a donation or gift that does not comply with applicable laws, regulations, and ordinances. It is the responsibility of the original retail purchaser and the donee or recipient to ensure that any such transfer complies with all applicable laws, regulations, and ordinances. Upon completion of the online warranty registration indicating the name of the said donee, this warranty shall be extended to the lifetime of the said donee. This warranty applies only if the firearm was imported into the United States and distributed by Heckler & Koch, Inc. to an authorized dealer.

What Will We Do?

Heckler & Koch Inc. will, at its option, repair or replace without charge any HK firearm that fails due to a defect in materials or workmanship. Parts and labor are included. Repairs are warranted for the duration of the warranty. If Heckler & Koch, Inc. replaces a firearm under this warranty; you will receive a new warranty. Heckler & Koch, Inc. will return your firearm to you shipping pre-paid.

How to Obtain Service:

Contact Heckler & Koch, Inc. via phone at 706-701-5554 or email at cs@heckler-koch-us.com for a Return Authorization Number before sending your firearm freight prepaid to Heckler & Koch, Inc. at the address listed below. No C.O.D. shipments will be accepted.

Only the existing Heckler & Koch, Inc. Service Center or any other authorized Heckler & Koch, Inc. Service Center that may be established by Heckler & Koch, Inc. shall be authorized to make warranty repairs.

Return the complete, unloaded firearm with a detailed description of the problem using Heckler & Koch, Inc.'s Return Form.

DO NOT send any live ammunition with the firearm. If you must send ammunition to us for proof purposes, be sure that it is sent separately from the firearm.

We strongly recommend that you complete the online warranty registration at <https://hk-usa.com/warranty/registration/> to establish eligibility for warranty service. If you do not return an acknowledgment of online warranty registration to Heckler & Koch, Inc., you are required to provide adequate proof of the date that you purchased your new HK firearm at the time you send your firearm to Heckler & Koch, Inc. for warranty service.

In the event that this firearm was given as a gift at the time of original purchase, the online warranty registration with the name of the donee must be provided to Heckler & Koch Inc., in order for the warranty to become effective.

Note: Non-warranty servicing must follow the same shipping procedures as stated above. HK firearms with a valid Return Authorization Number should be shipped to the following address in accordance with these instructions:

HKI
Attn: Service Department/RA# _____
5675 Transport Blvd.
Columbus, GA 31907

Any information gathered in connection with a Heckler & Koch Inc. lifetime limited warranty shall be used for that purpose and may be used for other legitimate business purposes of Heckler & Koch Inc. For further information, please review Heckler & Koch, Inc.'s Privacy Policy, located at <https://hk-usa.com/cookie-policy-us/>

What Is Not Covered?

This warranty does not cover defects or damage caused by: (1) unreasonable use; (2) failure to provide proper care or maintenance; (3) failure to comply with instructions in the operator's manual including improper installation of original Heckler & Koch Inc. parts by the owner or his agent; (4) normal wear and tear for the degree of use; (5) rust or corrosion; (6) obstructions in the barrels; (7) excessive use; and/or (8) external and internal cosmetic finishes.

Heckler & Koch, Inc. reserves the right to determine what constitutes the unreasonable or excessive use of the firearm. All wooden parts and all accessories are excluded from warranty coverage.

This warranty does not cover any claims made by the second or subsequent owner of an HK firearm as stated above.

NOTICE Any unauthorized alteration or modification of the firearm or use of parts or components not originally made by Heckler & Koch, Inc. may void this warranty. Heckler & Koch, Inc. is not be responsible for any claims involving this firearm that result from the use of faulty, nonstandard, remanufactured, or reloaded ammunition or ammunition not manufactured to NATO, CIP, and/or SAMMI specifications.

Under no circumstances shall Heckler & Koch, Inc. be responsible or liable for incidental or consequential damages with respect to loss of use, loss of business or profits, other economic loss or injury to property, whether as a result of breach of express or implied warranty, negligence or otherwise. This Limited Lifetime Warranty applies only to retail purchases by individuals through an authorized Heckler & Koch, Inc. dealer.

Residents of CALIFORNIA, CONNECTICUT, DISTRICT OF COLUMBIA, HAWAII, MARYLAND, MASSACHUSETTS, MICHIGAN, NEW JERSEY, NEW YORK, AND U.S. TERRITORIES.

Any work involving replacement of the receiver of a firearm requires that the firearm be returned to a licensed firearms dealer. A current, signed copy of the dealer's FFL will be required. Please provide contact information for the chosen dealer, if applicable.

NOTICE Customers in restrictive capacity states: **DO NOT ship high capacity magazines to Heckler & Koch Inc. They cannot be returned.**

Exclusions

This lifetime warranty explicitly excludes firearms purchased by the United States military, government institutions or agencies of the United States or any of its constituent states and territories, law enforcement agencies of the United States or any of its constituent states and territories, and/or security organizations located within the United States or any of its constituent states and territories. Firearms purchased by these entities and organizations for duty issue to their personnel and/or employees are covered by a one-year limited warranty against material defects and workmanship or as agreed upon in a valid contract.

This lifetime warranty also excludes rimfire .22L R firearms, and all suppressors, which are covered by a one-year warranty.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. This limited warranty is the only express warranty by Heckler & Koch Inc.

Heckler & Koch Inc. does not authorize any dealer or any other person to vary the terms of this warranty or make any other express warranties.

Heckler & Koch, Inc. Lifetime Barrel Guarantee

Heckler & Koch, Inc. guarantees the serviceability of the bore of the barrels of all MR A4 Series rifles and pistols for the lifetime of the original consumer purchaser for individual use. This guarantee is based on barrels meeting standards on accuracy, velocity, and useability across the entire life of the A4 system. If at any time an A4 barrel fails to meet these standards, Heckler & Koch, Inc. will replace the barrel.



Where to Get Further Help

If you have questions concerning this warranty, please contact Heckler & Koch, Inc.'s Customer Service Department at:
5675 Transport Blvd.
Columbus, GA 31907
Telephone: 706-701-5554
Email: cs@heckler-koch-us.com

SECTION 10 YOUTH HANDGUN SAFETY NOTICE

YOUTH HANDGUN SAFETY NOTICE

1. The misuse of handguns is a leading contributor to juvenile violence and fatalities.
2. Safely storing and securing firearms away from children will help prevent the unlawful possession of handguns by juveniles, stop accidents, and save lives.
3. Federal law prohibits, except in certain limited circumstances, anyone under 18 years of age from knowingly possessing a handgun, or any person from selling, delivering, or otherwise transferring a handgun to a person under 18.
4. A knowing violation of the prohibition against selling, delivering, or otherwise transferring a handgun to a person under the age of 18 is, under certain circumstances, punishable by up to 10 years in prison.

FEDERAL LAW

The Gun Control Act of 1968, 18 U.S.C. Chapter 44, provides in pertinent part as follows:

18 U.S.C. §922(x)

1. It shall be unlawful for any person to sell, deliver, or otherwise transfer to a person who the transferor knows or has reasonable cause to believe is a juvenile –
 - A. a handgun; or
 - B. ammunition that is suitable for use only in a handgun.
2. It shall be unlawful for any person who is a juvenile to knowingly possess –
 - A. a handgun; or
 - B. ammunition that is suitable for use only in a handgun.
3. This subsection does not apply to –
 - A. a temporary transfer of a handgun or ammunition to a juvenile or to the possession or use of a handgun or ammunition by a juvenile if the handgun and ammunition are possessed and used by the juvenile –
 - i. in the course of employment, in the course of ranching or farming related to activities at the residence of the juvenile (or on property used for ranching or farming at which the juvenile, with the permission of the property owner or lessee, is performing activities related to the operation of the farm or ranch), target practice, hunting, or a course of instruction in the safe and lawful use of a handgun;
 - ii. with the prior written consent of the juvenile's parent or guardian who is not prohibited by Federal, State, or local law from possessing a firearm, except –
 - I. during transportation by the juvenile of an unloaded handgun in a locked container directly from the place of transfer to a place at which an activity described in clause (i) is to take place and transportation by the juvenile of that handgun, unloaded and in a locked container, directly from the place at which such an activity took place to the transferor; or
 - II. with respect to ranching or farming activities as described in clause (i), a juvenile may possess and use a handgun or ammunition with the prior written approval of

- the juvenile's parent or legal guardian
and at the direction of an adult who is not prohibited by
Federal, State or local law from possessing a firearm;
- iii. the juvenile has the prior written consent in the juvenile's
possession at all times when a handgun is in the possession of the
juvenile; and
- iv. in accordance with State and local law;

B. a juvenile who is a member of the Armed Forces of the United States or
the National Guard who possesses or is armed with a handgun in the line
of duty;

C. a transfer by inheritance of title (but not possession) of a handgun or
ammunition to a juvenile; or

D. the possession of a handgun or ammunition by a juvenile taken in defense
of the juvenile or other persons against an intruder into the residence of
the juvenile or a residence in which the juvenile is an invited guest.

4. A handgun or ammunition, the possession of which is transferred to a juvenile
in circumstances in which the transferor is not in violation of this subsection shall not be
subject to permanent confiscation by the Government if its possession by the juvenile
subsequently becomes unlawful because of the conduct of the juvenile, but shall be
returned to the lawful owner when such handgun or ammunition is no longer required by
the Government for the purposes of investigation or prosecution.

5. For purposes of this subsection, the term "juvenile" means a person who is
less than 18 years of age.

6. A. In a prosecution of a violation of this subsection, the court shall require
the presence of a juvenile defendant's parent or legal guardian at all
proceedings.

B. The court may use the contempt power to enforce subparagraph (A).

C. The court may excuse attendance of a parent or legal guardian of a juvenile
defendant at a proceeding in a prosecution of a violation of this subsection
for good cause shown.

18 U.S.C. § 924(a)(6)

i. A juvenile who violates section 922(x) shall be fined under this title,
imprisoned not more than 1 year, or both, except that a juvenile
described in clause (ii) shall be

A. sentenced to probation on appropriate conditions and shall not be
incarcerated unless the juvenile fails to comply with a condition of probation.

ii. A juvenile is described in this clause if –

I. the offense of which the juvenile is charged is possession
of a handgun or ammunition in violation of section 922(x)
and

(2);

II. the juvenile has not been convicted in any court of an
offense (including an offense under section 922(x) or a
similar State law, but not including any other offense
consisting of conduct that if engaged in by an adult would
not constitute an offense) or adjudicated as a juvenile
delinquent for conduct that if engaged in by an adult would
constitute an offense.

B. A person other than a juvenile who knowingly violates section 922(x) –

i. shall be fined under this title, imprisoned not more than 1 year, or
both; and

ii. if the person sold, delivered, or otherwise transferred a handgun or
ammunition to a juvenile knowing or having reasonable cause to know
that the juvenile intended to carry or otherwise possess or discharge
or otherwise use the handgun or ammunition in the commission of a
crime of violence, shall be fined under this title, imprisoned not more
than 10 years, or both.

SECTION 11 STATE REQUIRED SAFETY NOTICES

STATE REQUIRED SAFETY NOTICES

Certain states have laws requiring that specific warnings be provided with handguns sold in those states as a result of which safety warnings are included in this manual.

CALIFORNIA:



WARNING

"Firearms must be handled responsibly and securely stored to prevent access by children and other unauthorized users. California has strict laws pertaining to firearms, and you may be fined or imprisoned if you fail to comply with them. Visit the Web site of the California Attorney General at <https://oag.ca.gov/firearms> for information on firearm laws applicable to you and how you can comply.

Prevent child access by always keeping guns locked away and unloaded when not in use. If you keep a loaded firearm where a child obtains and improperly uses it, you may be fined or sent to prison.

If you or someone you know is contemplating suicide, please call the national suicide prevention lifeline at 1-800-273-TALK (8255)."



ADVERTENCIA

"Las armas de fuego deben manipularse de manera responsable y segura para evitar el acceso de niños y otros usuarios no autorizados. California tiene leyes estrictas relacionadas con armas de fuego, y usted puede ser multado o encarcelado si no las cumple. Visite la pagina web del Procurador General de California en <https://oag.ca.gov/firearms> para obtener información sobre las leyes de armas de fuego que le son aplicables y cómo puede cumplirlas.

Evite el acceso de niños manteniendo siempre las armas bloqueadas y descargadas cuando no estén en uso. Si mantiene un arma de fuego cargada donde un niño obtiene y la usa indebidamente, se le puede multar o enviar a prisión.

Si usted o alguien que conoce está pensando en suicidarse, llame a la línea nacional de prevención del suicidio al 1-800-273-TALK (8255)."

CONNECTICUT:

"UNLAWFUL STORAGE OF A LOADED FIREARM MAY RESULT IN IMPRISONMENT OR FINE."

FLORIDA:

"IT IS UNLAWFUL, AND PUNISHABLE BY IMPRISONMENT AND FINE, FOR ANY ADULT TO STORE OR LEAVE A FIREARM IN ANY PLACE WITHIN THE REACH OR EASY ACCESS OF A MINOR UNDER 18 YEARS OF AGE OR TO KNOWINGLY SELL OR OTHERWISE TRANSFER OWNERSHIP OR POSSESSION OF A FIREARM TO A MINOR OR A PERSON OF UNSOUND MIND."

MAINE:

"ENDANGERING THE WELFARE OF A CHILD IS A CRIME. IF YOU LEAVE A FIREARM AND AMMUNITION WITHIN EASY ACCESS OF A CHILD, YOU MAY BE SUBJECT TO FINE, IMPRISONMENT OR BOTH. KEEP FIREARMS AND AMMUNITION SEPARATE. KEEP FIREARMS AND AMMUNITION LOCKED UP. USE TRIGGER LOCKS."

MARYLAND:

"WARNING: Children can operate firearms which may cause death or serious injury. It is a crime to store or leave a loaded firearm in any location where an individual knew or should have known that an unsupervised minor would gain access to the firearm. Store your firearm responsibly!"

MASSACHUSETTS:

"WARNING FROM THE MASSACHUSETTS ATTORNEY GENERAL: This handgun is not equipped with a device that fully blocks use by unauthorized users. More than 200,000 firearms like this one are stolen from their owners every year in the United States. In addition, there are more than a thousand suicides each year by younger children and teenagers who get access to firearms. Hundreds more die from accidental discharge. It is likely that many more children sustain serious wounds or inflict such wounds accidentally on others. In order to limit the chance of such misuse, it is imperative that you keep this weapon locked in a secure place and take other steps necessary to limit the possibility of theft or accident. Failure to take reasonable preventive steps may result in innocent lives being lost, and in some circumstances may result in your liability for these deaths."

"IT IS UNLAWFUL TO STORE OR KEEP A FIREARM, RIFLE, SHOTGUN OR MACHINE GUN IN ANY PLACE UNLESS THAT WEAPON IS EQUIPPED WITH A TAMPER-RESISTANT SAFETY DEVICE OR IS STORED OR KEPT IN A SECURELY LOCKED CONTAINER."

NEW JERSEY:

"IT IS A CRIMINAL OFFENSE, PUNISHABLE BY A FINE AND IMPRISONMENT, FOR AN ADULT TO LEAVE A LOADED FIREARM WITHIN EASY ACCESS OF A MINOR."

NEW YORK CITY, NY:

"THE USE OF A LOCKING DEVICE OR SAFETY LOCK IS ONLY ONE ASPECT OF RESPONSIBLE WEAPON STORAGE. ALL WEAPONS SHOULD BE STORED UNLOADED AND LOCKED IN A LOCATION THAT IS BOTH SEPARATE FROM THEIR AMMUNITION AND INACCESSIBLE TO CHILDREN AND ANY OTHER UNAUTHORIZED PERSONS. NEW YORK CITY LAW PROHIBITS, WITH CERTAIN EXCEPTIONS, ANY PERSON FROM ACQUIRING MORE THAN ONE FIREARM, OR MORE THAN ONE RIFLE OR SHOTGUN, WITHIN A 90-DAY PERIOD."

NORTH CAROLINA:

"IT IS UNLAWFUL TO STORE OR LEAVE A FIREARM THAT CAN BE DISCHARGED IN A MANNER THAT A REASONABLE PERSON SHOULD KNOW IS ACCESSIBLE TO A MINOR."

"Any person who resides in the same premises as a minor, owns or possesses a firearm, and stores or leaves the firearm (i) in a condition that the firearm can be discharged and (ii) in a manner that the person knew or should have known that an unsupervised minor would be able to gain access to the firearm, is guilty of a Class 1 misdemeanor if a minor gains access to the firearm without the lawful permission of the minor's parents or a person having charge of the minor and the minor:

- (1) Possesses it in violation of G.S. 14-269.2(b);
- (2) Exhibits it in a public place in a careless, angry, or threatening manner;
- (3) Causes personal injury or death with it not in self-defense; or
- (4) Uses it in the commission of a crime."

TEXAS:

"IT IS UNLAWFUL TO STORE, TRANSPORT, OR ABANDON AN UNSECURED FIREARM IN A PLACE WHERE CHILDREN ARE LIKELY TO BE AND CAN OBTAIN ACCESS TO THE FIREARM."

WISCONSIN:


"IF YOU LEAVE A LOADED FIREARM WITHIN THE REACH OR EASY ACCESS OF A CHILD YOU MAY BE FINED OR IMPRISONED OR BOTH IF THE CHILD IMPROPERLY DISCHARGES, POSSESSES OR EXHIBITS THE FIREARM."

State laws and regulations concerning firearms change constantly. Please check with your State Attorney General's Office or State Police for additional laws and regulations regarding the storage and use of firearms in your state.

SECTION 12 PARTS LIST (P30 MODELS)

Item	Description	Identification No.	Item	Description	Identification No.
1	Barrel (9 mm x 19)	229931		Grip shell, right (size L)	234307
	Barrel (.40 S&W)	229751	40	Back Strap, (size M)	234302
2-5	Recoil Spring Complete (9 mm x 19)	234319		Back strap (size S)	234299
	Recoil Spring Complete (.40 S&W)	229844		Back strap (size L)	234305
2	Recoil Spring guide rod	234310	41	Backstrap pin	50978170
3	Stop Sleeve	50215932	42	Magazine release spring	50215929
4	Recoil Spring (9 mm x 19)	215852	43	Magazine release	50234296
	Recoil Spring (.40 S&W)	50215830	44	Slide release spring	50214171
5	Recoil Spring stop disc	50215831	45	Slide release left (P30 V1 and V3)	202805
6	Slide (9 mm x 19)	50247496	45.1	Slide release left (alt) (P30 SV3)	227722
	Slide (.40 S&W)	50247683	46	Slide release right (P30 V1 and V3)	202806
7	Front sight, height 5.9 mm	227711	46.1	Slide release right (alt) (P30 SV3)	227723
7.1	Front sight, height 6.1 mm	50234327	47	Safety lever (P30 SV3)	227814
7.2	Front sight, height 6.3 mm	51001085	48	Safety lever pin (P30L SV3)	982783
7.3	Front sight, height 6.5 mm	234329	49	Detent pin spring (P30 SV3)	209478
7.4	Front sight, height 6.7 mm	234386	50	Detent pin (P30 SV3)	209477
7.5	Front sight, height 6.9 mm	234387		Magazine 9 mm 15 Rd (9mm x 19)	50227869
8	Rear sight	51001048		Magazine .40 S&W 13 Round (.40 S&W)	50259078
9	Extractor bolt	50209294	51	Magazine housing (9 mm x 19)	234318
10	Extractor spring	50218315		Magazine housing (.40 S&W)	229774
11	Extractor	218314	52	Follower	215836
12	Extractor and mag. release pin (3x)	50988891	53	Spring	215118
13	Firing pin spring	50215822	54	Locking plate	215844
14	Firing pin	234654	55	Floor plate	234298
15	Firing pin safety spring	209962		Magazine 9 mm 10 Round	50259077
16	Firing pin safety	50209313		Magazine .40 S&W 10 Round (.40 S&W)	50259079
17	Frame (P30 V1)	234294	56	Magazine housing 9mm 10 Round	215848
	Frame (P30 V3)	234388		Magazine housing 9mm 15 Round	234318
	Frame (P30 SV3)	227832		Magazine housing .40 S&W 10 Round	215833
18	Trigger pin	50214154		Magazine housing .40 S&W 13 Round	229774
19	Trigger	234297	57	Follower	215836
20	Trigger spring	234389	58	Spring 9mm 10 Round	214850
21	Leaf spring for catches	50214167		Spring 9mm 15 Round	215118
22	Trigger bar detent spring	209270		Spring .40 S&W 10 Round	214821
23	Trigger bar detent	209269		Spring .40 S&W 13 Round	215118
24	Trigger bar	207331	59	Locking plate 9mm 10 Round	215850
25	Hammer axle (P30 V1 and V3)	209272		Locking plate 9mm 15 Round	215844
25.1	Hammer axle with safety lever (P30 SV3)	227813		Locking plate .40 S&W 10 Round	215835
26	Release catch and the decocking lever (P30 V3 and SV3)	209261		Locking plate .40 S&W 13 Round	215844
26.1	Release catch (P30 V1)	209320	60	Floor plate 9mm 10 Round	227947
27	Hammer Catch	209273		Floor plate 9mm 15 Round	234298
28	Control Lever (P30 V1)	209274		Floor plate .40 S&W 10 Round	229971
28.1	Control Lever (P30 V2)	234487		Floor plate .40 S&W 13 Round	234298
28.2	Control Lever (P30 V3)	227812	61	Magazine 9mm 17 Round	50255803
29	Pin	234758			
30	Disconnecter (P30 V1 and V3)	209271			
	Disconnecter (P30 SV3)	229804			
31	Hammer (P30 V1)	209321			
31.1	Hammer (P30 V3 and SV3)	209327			
32	Cocking piece (P30 V1)	209265			
33	Elbow spring for hammer (P30 V1)	209275			
34	Hammer spring rod	209312			
35	Hammer spring (P30 V1)	50214695			
	Hammer spring (P30 V3 and SV3)	50214300			
	Lock-out Device/Gun Lock Complete	50234664			
36	Bearing for Gun lock/Grip Insert	234295			
37	Pin	50970074			
38	Grip Shell, left (size M)	234303			
	Grip shell, left (size S)	234300			
	Grip shell, left (size L)	234306			
39	Grip Shell, right (size M)	234304			
	Grip shell, right (size S)	234301			

Exploded Diagram (P30 Models)

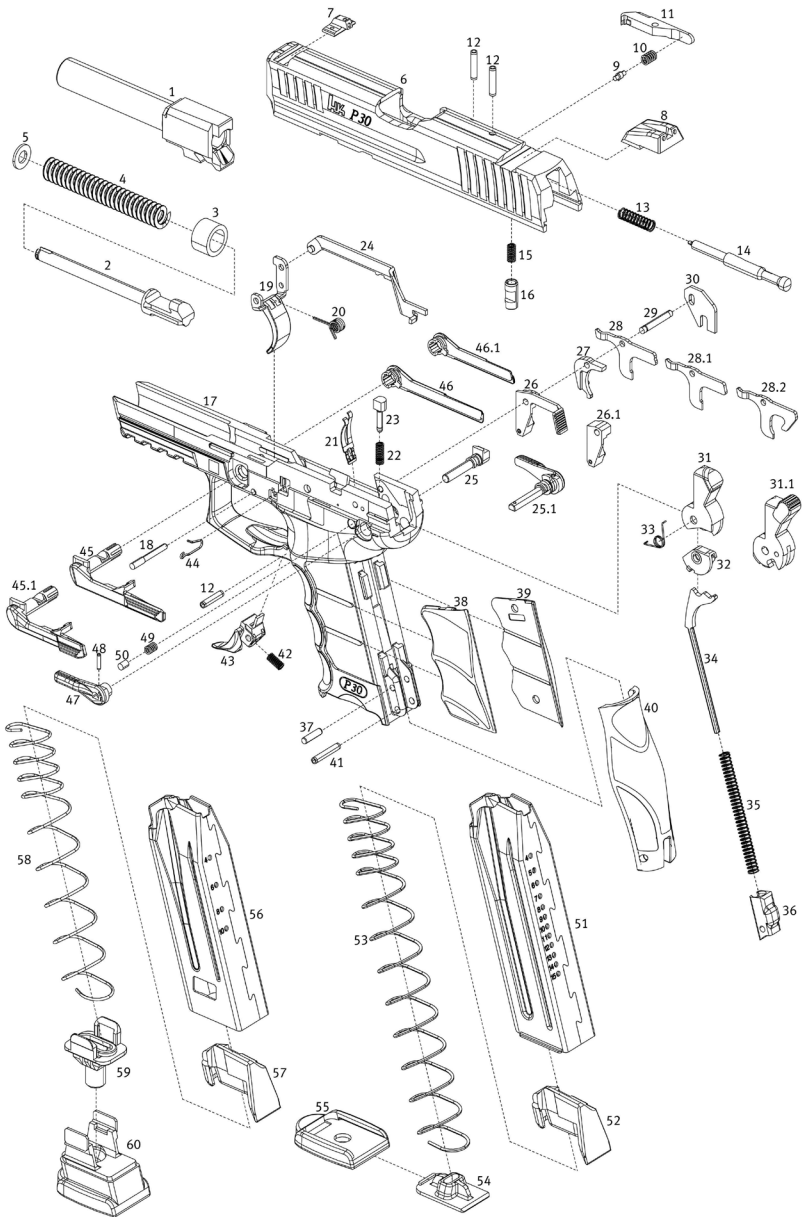

PARTS LIST (P30L MODELS)

Item	Description	Identification No.	Item	Description	Identification No.
1	Barrel (9 mm x 19)	227713		Grip shell, right (size L)	234307
	Barrel (.40 S&W)	229944	40	Back Strap, (size M)	234302
-	Threaded Barrel (9 mm x 19)	229792		Back strap (size S)	234299
2-5	Recoil Spring Complete (9 mm x 19)	227845		Back strap (size L)	234305
	Recoil Spring Complete (.40 S&W)	229947	41	Backstrap pin	50978170
2	Recoil Spring guide rod	227714	42	Magazine release spring	50215929
3	Stop Sleeve	223275	43	Magazine release	50234296
4	Recoil Spring (9 mm x 19)	215852	44	Slide release spring	50214171
	Recoil Spring (.40 S&W)	50215830	45	Slide release left (P30L V1 and V3)	202805
5	Recoil Spring stop disc	223275	45.1	Slide release left (alt) (P30L SV3)	227722
6	Slide (9 mm x 19)	50247278	46	Slide release right (P30L V1 and V3)	202806
	Slide (.40 S&W)	50247683	46.1	Slide release right (alt) (P30L SV3)	227723
7	Front sight, height 5.9 mm	227711	47	Safety lever (P30L SV3)	227814
7.1	Front sight, height 6.1 mm	50234327	48	Safety lever pin (P30L SV3)	982783
7.2	Front sight, height 6.3 mm	51001048	49	Detent pin spring (P30L SV3)	209478
7.3	Front sight, height 6.5 mm	234329	50	Detent pin (P30L SV3)	209477
7.4	Front sight, height 6.7 mm	234386		Magazine 9 mm 15 Round	50227869
7.5	Front sight, height 6.9 mm	234387		Magazine .40 S&W 13 Round (.40 S&W)	50259078
8	Rear sight	51001048	51	Magazine housing (9 mm x 19)	234318
9	Extractor bolt	50209294		Magazine housing (.40 S&W)	229774
10	Extractor spring	50218315	52	Follower	215836
11	Extractor	218314	53	Spring	215118
12	Extractor and mag release pin (3x)	50988891	54	Locking plate	215844
13	Firing pin spring	50215822	55	Floor plate	234298
14	Firing pin	234654		Magazine 9mm 10 Round	50259077
15	firing pin safety spring	209962		Magazine .40 S&W 10 Round	50259079
16	Firing pin safety	50209313	56	Magazine housing 9mm 10 Round	215848
17	Frame (P30L V1)	227546		Magazine housing .40 S&W 10 Round	215833
	Frame (P30L V3)	227858	57	Follower	215836
	Frame (P30L SV3)	229942	58	Spring 9mm 10 Round	214850
18	Trigger pin	50214154		Spring 9mm 15 Round	215118
19	Trigger	234297		Spring .40 S&W 10 Round	214821
20	Trigger spring	234389		Spring .40 S&W 13 Round	215118
21	Leaf spring for catches	50214167	59	Locking plate 9mm 10 Round	215850
22	Trigger bar detent spring	209270		Locking plate 9mm 15 Round	215844
23	Trigger bar detent	209269		Locking plate .40 S&W 10 Round	215835
24	Trigger bar	207331		Locking plate .40 S&W 13 Round	214844
25	Hammer axle (P30L V1 and V3)	209272	60	Floor plate 9mm 10 Round	227947
25.1	Hammer axle with safety lever (P30L SV3)	227813		Floor plate 9mm 15 Round	234298
26	Release catch and the decocking lever (P30 V3 and SV3)	209261		Floor plate .40 S&W 10 Round	229971
26.1	Release catch (P30L V1)	209320		Floor plate .40 S&W 13 Round	234298
27	Hammer Catch	209273	61	Magazine 9mm 17 Round	50255803
28	Control Lever (P30L V1)	209274			
28.1	Control Lever (P30L V2)	234487			
28.2	Control Lever (P30L V3)	227812			
29	Pin	234758			
30	Disconnecter	229804			
31	Hammer (P30L V1)	209321			
31.1	Hammer (P30L V3 and SV3)	209327			
32	Cocking piece (P30L V1)	209265			
33	Elbow spring for hammer (P30J V1)	209275			
34	Hammer spring rod	209312			
35	Hammer spring (P30L V1)	50214695			
	Hammer spring (P30L V3 and SV3)	50214300			
	Lock-out Device/Gun Lock Compl.	50234664			
36	Bearing for Gun lock/Grip Insert	234665			
37	Pin	50970074			
38	Grip Shell, left (size M)	234303			
	Grip shell, left (size S)	234300			
	Grip shell, left (size L)	234306			
39	Grip Shell, right (size M)	234304			
	Grip shell, right (size S)	234301			

PARTS LIST (P30SK MODELS)

Item	Description	Identification No.	Item	Description	Identification No.
1	Barrel (9 mm x 19)	207120	41	Magazine release spring	50215929
2	Recoil Spring Complete (9 mm x 19)	226221	42	Magazine release	223522
3	Slide (9 mm x 19)	50247150	43	Slide release spring	50214171
4	Front sight, height 5.9 mm	227711	44	Slide release left (P30SK V1	
4.1	Front sight, height 6.1 mm	50234327		and V3)	202805
4.2	Front sight, height 6.3 mm	51001085	44.1	Slide release left (alt) (P30SKS V3)	227722
4.3	Front sight, height 6.5 mm	234329	45	Slide release right (P30SK V1 and V3)	202806
4.4	Front sight, height 6.7 mm	234386	45.1	Slide release right (alt) (P30SKS V3)	227723
4.5	Front sight, height 6.9 mm	234387	46	Safety lever (P30SK SV3)	227814
5	Rear sight	51001048	47	Safety lever pin (P30L SV3)	982783
6	Extractor bolt	50209294	48	Detent pin spring (P30SKS V3)	209478
7	Extractor spring	50218315	49	Detent pin (P30SKS V3)	209477
8	Extractor	218314		Magazine 9 mm 10 Round	50253678
9	Extractor and mag release pin (3x)	50988891	50	Magazine housing	207162
10	Firing pin spring	50218522	51	Follower	215836
11	Firing pin	229993	52	Spring	207218
12	Firing pin safety spring	209962	53	Insert/Locking plate	202693
13	Firing pin safety	50209313	54	Floor plate	234298
14	Drop safety spring	229992	-	Extended floor plate	239284
15	Drop safety	229991			
16	Drop safety pin	973112			
17	Frame (P30SK V1)	245265			
	Frame (P30SK V3)	245266			
	Frame (P30SK SV3)	245267			
18	Trigger pin	50214154			
19	Trigger	234297			
20	Trigger spring	234389			
21	Leaf spring for catches	50214167			
22	Trigger bar detent spring	209270			
23	Trigger bar detent	209269			
24	Trigger bar	207331			
25	Hammer axle (P30SK V1 and V3)	209272			
25.1	Hammer axle with safety lever (P30SK SV3)	227813			
26	Release catch and the decocking lever (P30SK V3 and SV3)	209261			
26.1	Release catch (P30SK V1)	209320			
27	Hammer Catch	209273			
28	Control Lever (P30SK V1)	209274			
28.1	Control Lever (P30SK V2)	234487			
28.2	Control Lever (P30SK V3)	227812			
29	Pin	234758			
30	Disconnecter	229804			
31	Hammer (P30SK V1)	209321			
31.1	Hammer (P30SK V3 and SV3)	209327			
32	Cocking piece (P30SK V1)	209265			
33	Elbow spring for hammer (P30SK V1)	209275			
34	Hammer spring rod	207121			
35	Hammer spring	207122			
	Lock-out Device/Gun Lock Complete	226222			
36	Bearing for Gun lock/Grip Insert	223521			
37	Grip Shell, left (size M)	223506			
	Grip shell, left (size S)	223503			
	Grip shell, left (size L)	223509			
38	Grip Shell, right (size M)	223507			
	Grip shell, right (size S)	223504			
	Grip shell, right (size L)	223510			
39	Back Strap, (size L)	223508			
	Back strap (size S)	223502			
	Back strap (size M)	223505			
40	Backstrap pin	50978170			



HKUSA 730901 - 05202026

HECKLER & KOCH
5675 Transport Boulevard
Columbus, Georgia 31907
Tel: 706-701-5554
www.hk-usa.com



This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.